


Installation Instructions for Vessel 16 Suspension

## **IMPORTANT INFORMATION**

- This product can **ONLY** be ceiling mounted.
- This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.


## **SAVE THESE INSTRUCTIONS!**

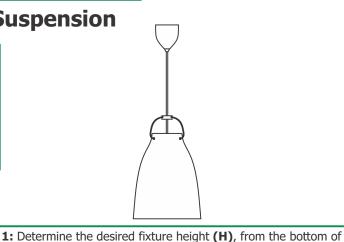

the shade to the top the canopy.


VESS-S-16-


## **Install the Fixture**

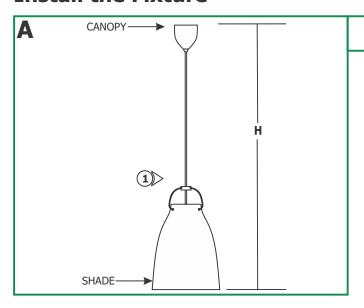


**2:** Loosen the threaded cap, to expose the crossbar assembly and also entangle the cord from the cord clip.

Do Not Dissemble, Keep Parts in Order.

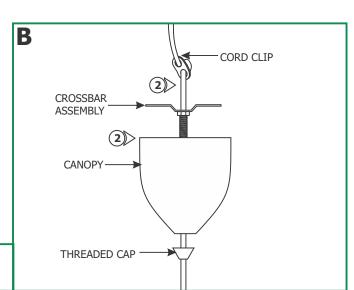


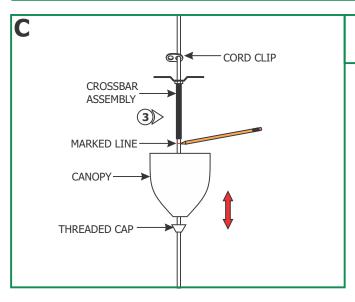


**3:** Adjust the fixture height by sliding the cord up or down through the crossbar. Make a line behind the crossbar assembly when desired height is determined.

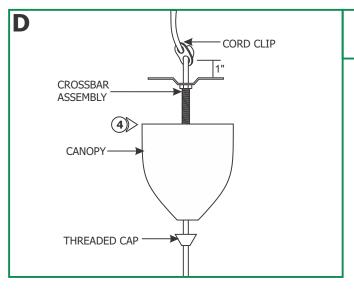


**4:** Place the cord clip 1" above the marked line by feeding the cord through the second hole on the cord clip and pulling it out to lock in place.

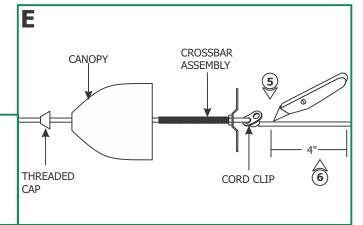


- **5:** Leave 6" of the cord behind the crossbar assembly for power connections. Cut the excess cord.
- **6:** From the end of the cord remove 4" of the cord insulation.
- 7: Strip 1/4" of the insulation from the end of the wires.

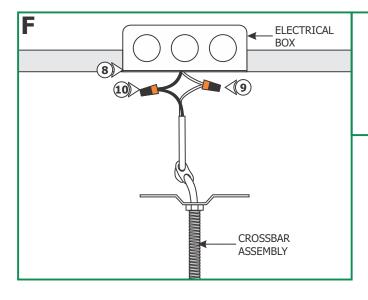


 - **8:** Make sure that the canopy is grounded in accordance with local electrical codes.
- **9:** Connect the fixture white wire to the neutral power wire with a wire nut.
- **10:** Connect the fixture black wire to the hot power wire with a wire nut.



- **12:** Mount the crossbar assembly to the electrical box holes with the provided two #8-32 screws.
- **13:** Slide the canopy up onto the crossbar assembly and secure it in place by tightening the threaded cap to the crossbar assembly nipple.

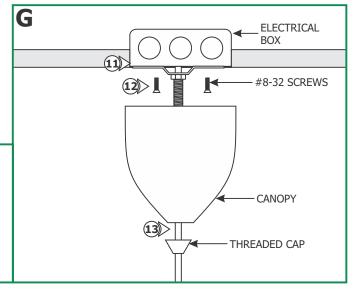

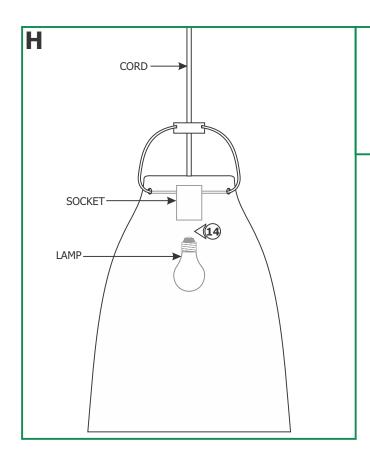

**<u>CAUTION:</u>** To reduce risk of a burn or electrical shock during lamping, disconnect the power to the fixture.

Use **MAX 100** Watt, bulb type A19, E26 base lamp.



**14:** Screw the lamp completely into the socket.