 


Installation Instructions for Dimming Debuzzing Coil


IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.

SAVE THESE INSTRUCTIONS!

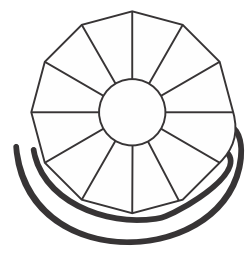


Install Debuzzing Coil to the Remote Transformer

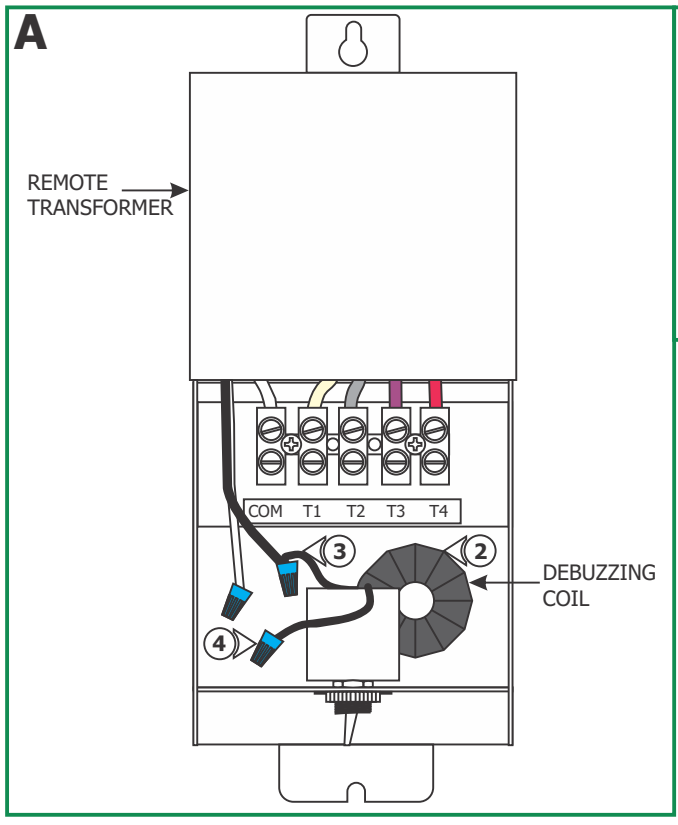

- 1: Loosen the two Phillips screws on the sides of the transformer to remove the transformer cover.
- 2: Place the dimming coil inside the transformer.
- 3: Connect the black transformer wire to one of the dimming coil wires (either one) with a wire nut.
- 4: The other dimming coil wire should be connected to the hot power wire. (Refer to the instructions provided with the remote transformer to complete the installation).

Install Debuzzing Coil to the Recessed Transformer

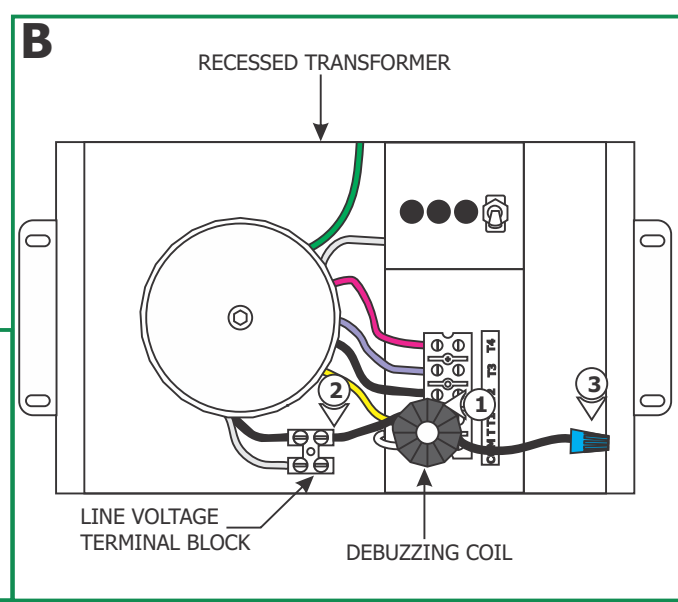

- 1: Place the dimming coil inside the transformer.
- 2: Insert one of the dimming coil wires (either one) into the line voltage terminal block that is in line with the black wire and tighten the screw.
- 3: The other dimming coil wire should be connected to the hot power wire. (Refer to the instructions provided with the recessed transformer to complete the installation).