

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com



VEGA-_-F2-




904-VEGA-F-02

Installation Instructions for Vega Round and Oval (Compact Fluorescent Version)


IMPORTANT INFORMATION


- This product is ETL listed for indoor locations.
- This product can **ONLY** be ceiling mounted.
- This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.


SAVE THESE INSTRUCTIONS!

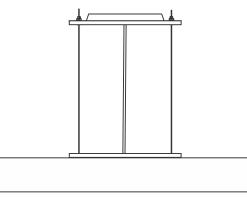


Adjust the Fixture Height

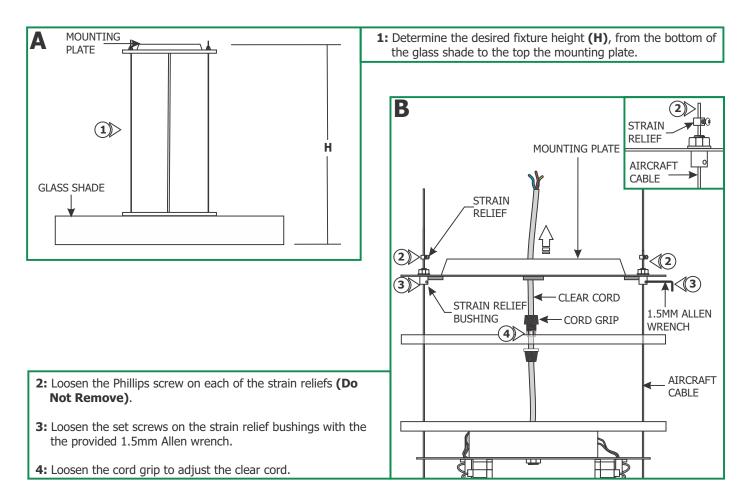

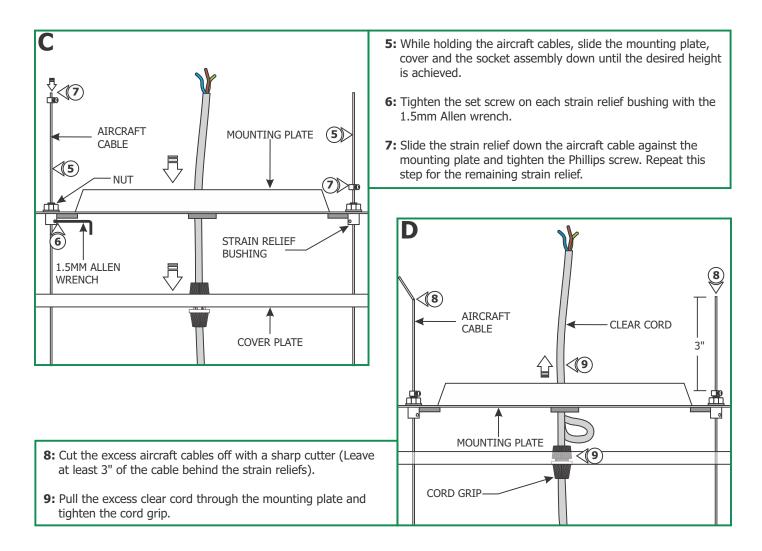

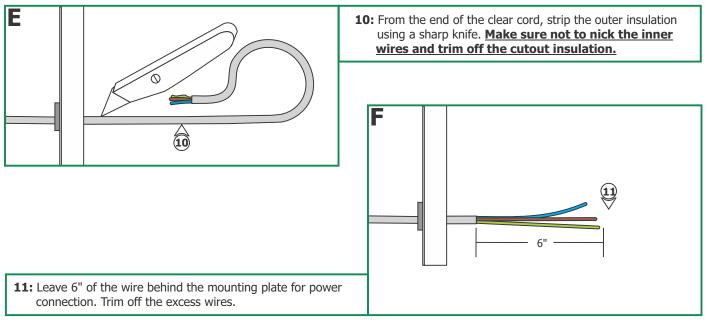


Install the Fixture

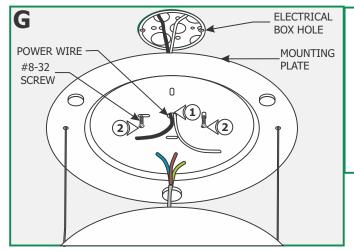


NOTE: Make sure the glass shade is detached.

NOTE: Use the provided universal crossbar if the mounting plate holes do not line up with the electrical box holes.

- **1:** Feed the power wires through the mounting plate center hole.
- **2:** Secure the mounting plate to the electrical box holes with the two #8-32 screws provided.

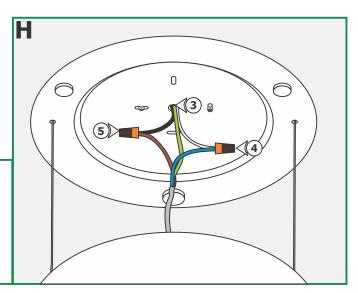

- **3:** Make sure the mounting plate and the bare wire is grounded in accordance with local electrical codes.
- **4:** Connect the blue wire to the neutral power wire with a wire nut.
- **5:** Connect the brown wire to the hot power wire with a wire nut.

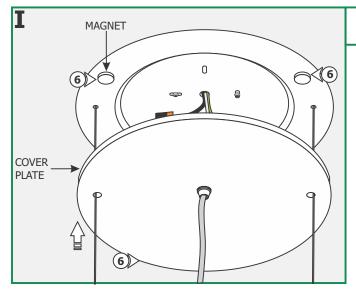

6: Slide the cover plate up against the mounting plate, the magnets will hold the cover plate in place.

Install the Lamps and Shade

4

(3)

5: If the glass shade is not level horizontally, slide the cover

6: Readjust the uneven aircraft cable by loosening the set

7: Slide the cover plate up against the mounting plate.


screw on the strain relief bushing with the 1.5mm Allen

wrench. Push the aircraft cable in and re-tighten the set

plate down to expose the mounting plate.


HOOK

screw.

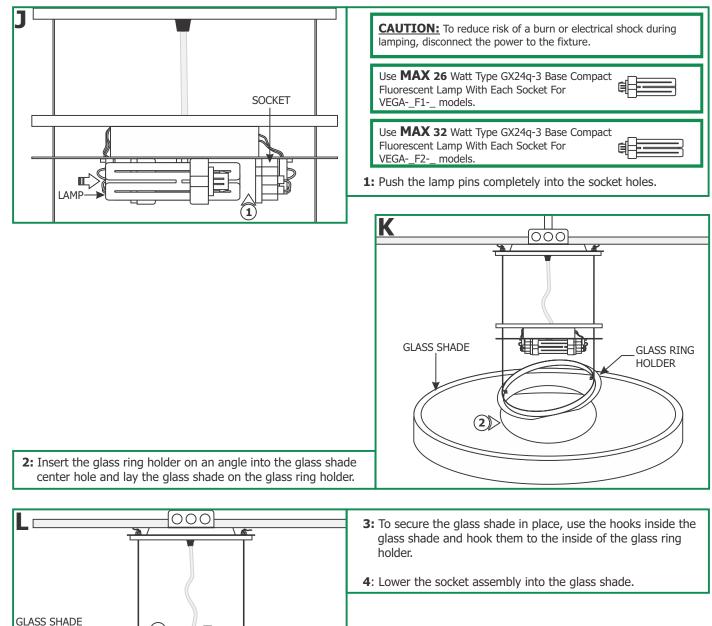

GLASS RING HOLDER

3

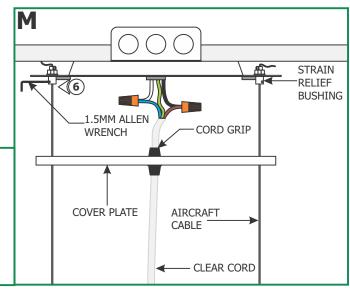



1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com



904-VEGA-H1-02




Installation Instructions for Vega Round and Oval (Halogen Version)

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electrical shock, exposure to excessive UV radiation, or injury to persons:

- Do not look directly at the lamp while the fixture is on.
- **<u>RISK OF FIRE</u>**: Use only the type of lamp and maximum wattage indicated in this instruction manual.
- Never cover the halogen lamp with anything other than a lamp shield provided by Edge Lighting and never place flammable material close to the fixture.
- Never turn the fixture on and off by connecting and disconnecting the halogen lamp.
- Do not touch the fixture head, shade or lamp shield while the fixture is on. These surfaces may be **VERY HOT**.
- Do not touch lamp at anytime. Use a soft cloth instead as oil from skin may damage lamp.
- It is normal for a new halogen lamp to produce minor smoke when first turned on.
- Do not operate the luminaire with a missing or damaged shield.
- Turn power off and allow to cool before replacing lamp.

Adjust the Fixture Height

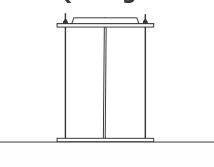



IMPORTANT INFORMATION

- This product is ETL listed for indoor locations.
- This product can **ONLY** be ceiling mounted.
- This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.
- This product can be dimmed with a low voltage electronic dimmer.


SAVE THESE INSTRUCTIONS!

MOUNTING 1: Determine the desired fixture height (H), from the bottom of PLATE the glass shade to the top the mounting plate. B (2) STRAIN RELIEF MOUNTING PLATE 0 Η AIRCRAFT CABLE STRAIN GLASS SHADE RELIEF (2) <(2) ,(3) - CLEAR CORD STRAIN RELIEF 1.5MM ALLEN BUSHING - CORD GRIP WRENCH 4) AIRCRAFT 2: Loosen the Phillips screw on each of the strain reliefs (Do CABLE Not Remove). 3: Loosen the set screws on the strain relief bushings with the the provided 1.5mm Allen wrench. 4: Loosen the cord grip to adjust the clear cord.

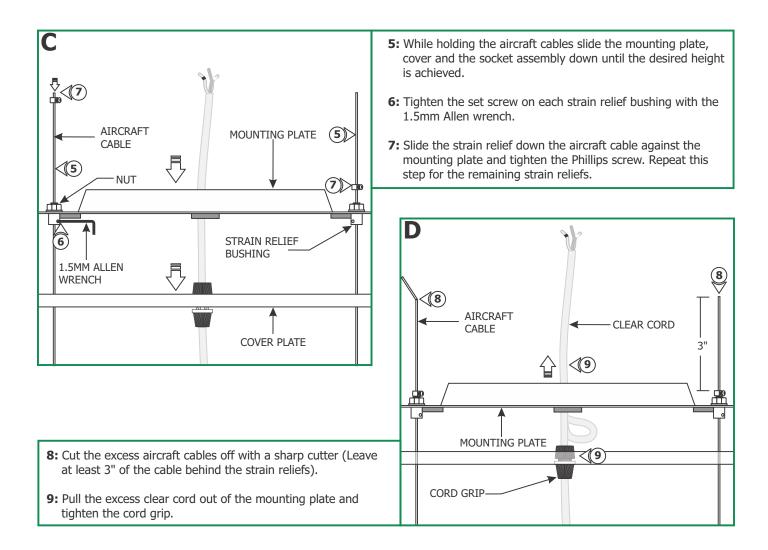

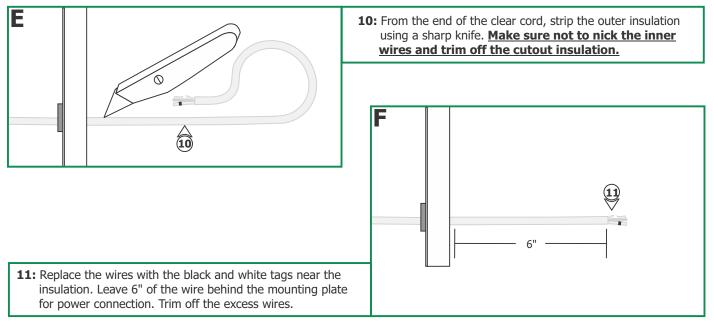


Install the Fixture

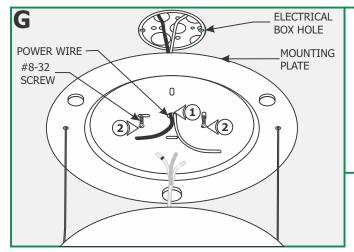


NOTE: Make sure the glass shade is detached.

NOTE: Use the provided universal crossbar if the mounting plate holes do not line up with the electrical box holes.

- **1:** Feed the power wires through the mounting plate center hole.
- **2:** Secure the mounting plate to the electrical box holes with the two #8-32 screws provided.

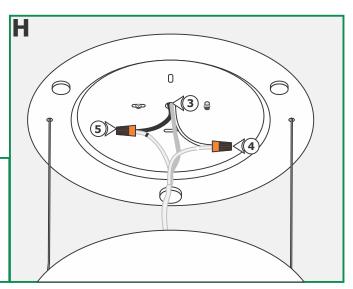

- **3:** Make sure the mounting plate and the bare wire is grounded in accordance with local electrical codes.
- **4:** Connect the clear wire with a white tag to the neutral power wire with a wire nut.
- **5:** Connect the clear wire with a black tag to the hot power wire with a wire nut.

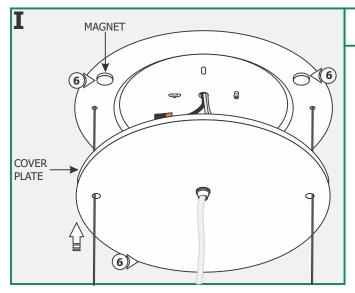

6: Slide the cover plate up against the mounting plate, the magnets will hold the cover plate in place.

Install the Lamps and Shade

