

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com SATIN-_F1_-SN-






Installation Instructions for Compact Florescent Satin Ceiling 12, 15, & 18

- This product is ETL listed for indoor dry locations.
- This product is ceiling mounted only.
- This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.
- This instruction shows a typical installation.
- This product is not dimmable.


SAVE THESE INSTRUCTIONS!



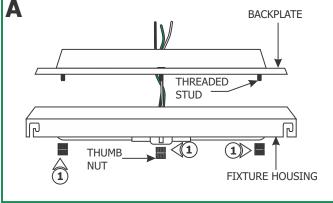


- **1**: Feed the power wires through the backplate center hole.
- **2:** Mount the backplate to the electrical box with the provided two #8-32 screws.

 C




1: Remove the three thumb nuts from the threaded studs and detach the backplate from the fixture housing.


Wiring for Standard Installation

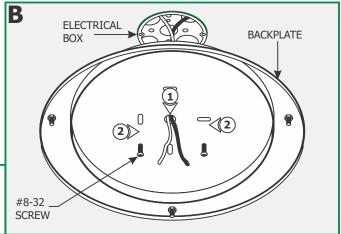


- BACKPLATE
 3: Make sure that the fixture is grounded in accordance with local electrical codes.
 4: Connect the white fixture wire to the neutral power wire with a wire nut.
 5: Connect the black fixture wire to the hot power wire with a wire nut.
 - **6:** Follow the "Finish Installation" steps on page 3 to complete the installation.

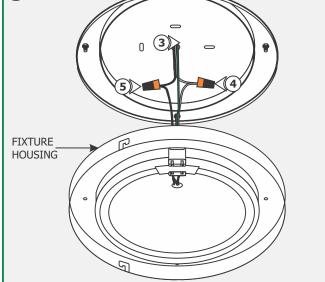


Always on Emergency Light Wiring (F1E Version Only)

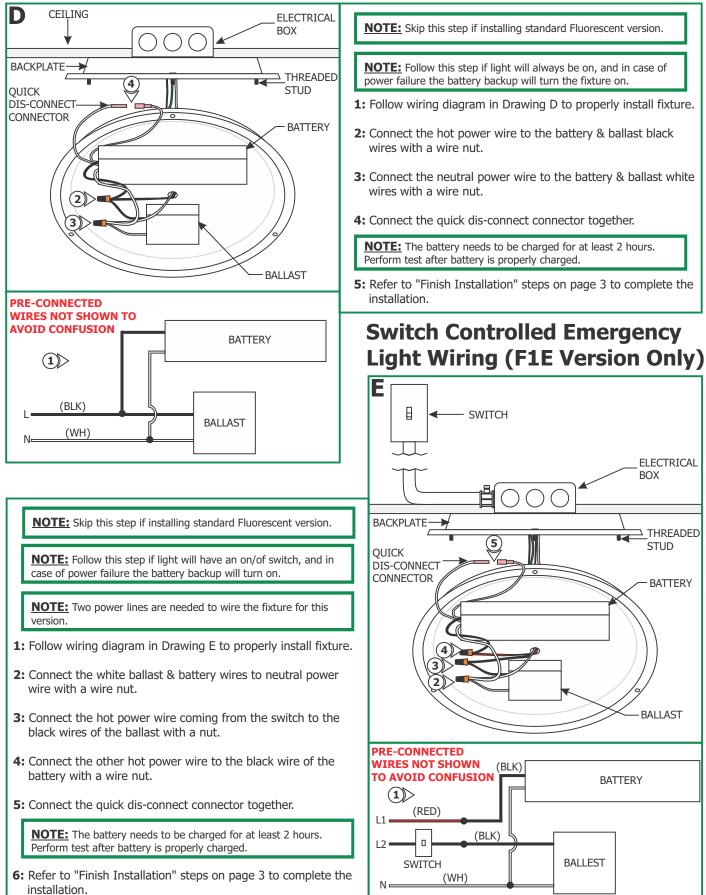

Finish Installation

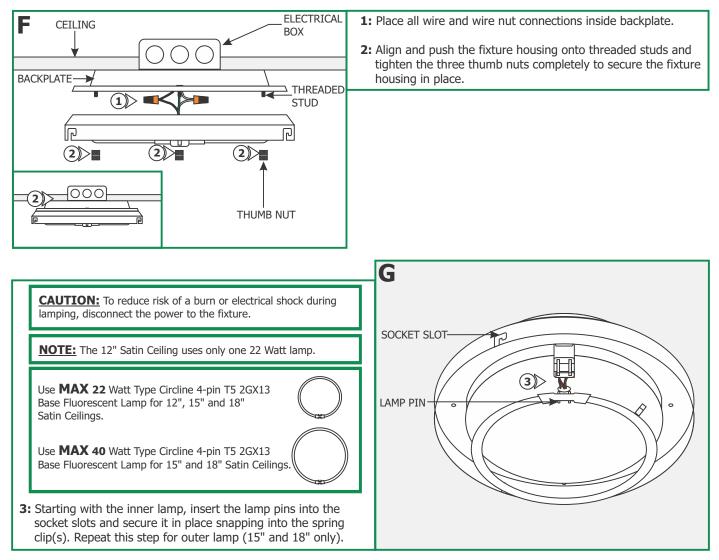

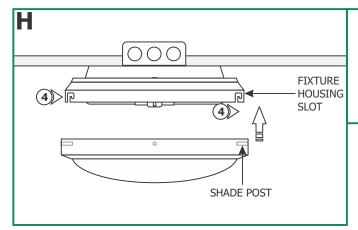

4: Insert the three posts of the shade into the fixture housing slots and turn the shade clockwise to lock into place.

NOTE: To re-lamp the fixture, carefully rotate the glass shade counter clockwise and remove the shade. Carefully pull the old lamp(s) out of the socket slot and the spring clip(s). Follow steps 3 to 5 to re-install the lamps and shade.