

Bronzeville Semi-Flush Mount

7714301 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.


VISUAL COMFORT & Co.

7400 Linder Ave, Skokie, IL 160077

800.969.3347


www.visualcomfort.com

©2023 Visual Comfort & Co.. All rights reserved. The Visual Comfort & Co. logo is a registered trademark of Visual Comfort & Co. Visual Comfort & Co. reserves the right to change specifications for product improvements without notification

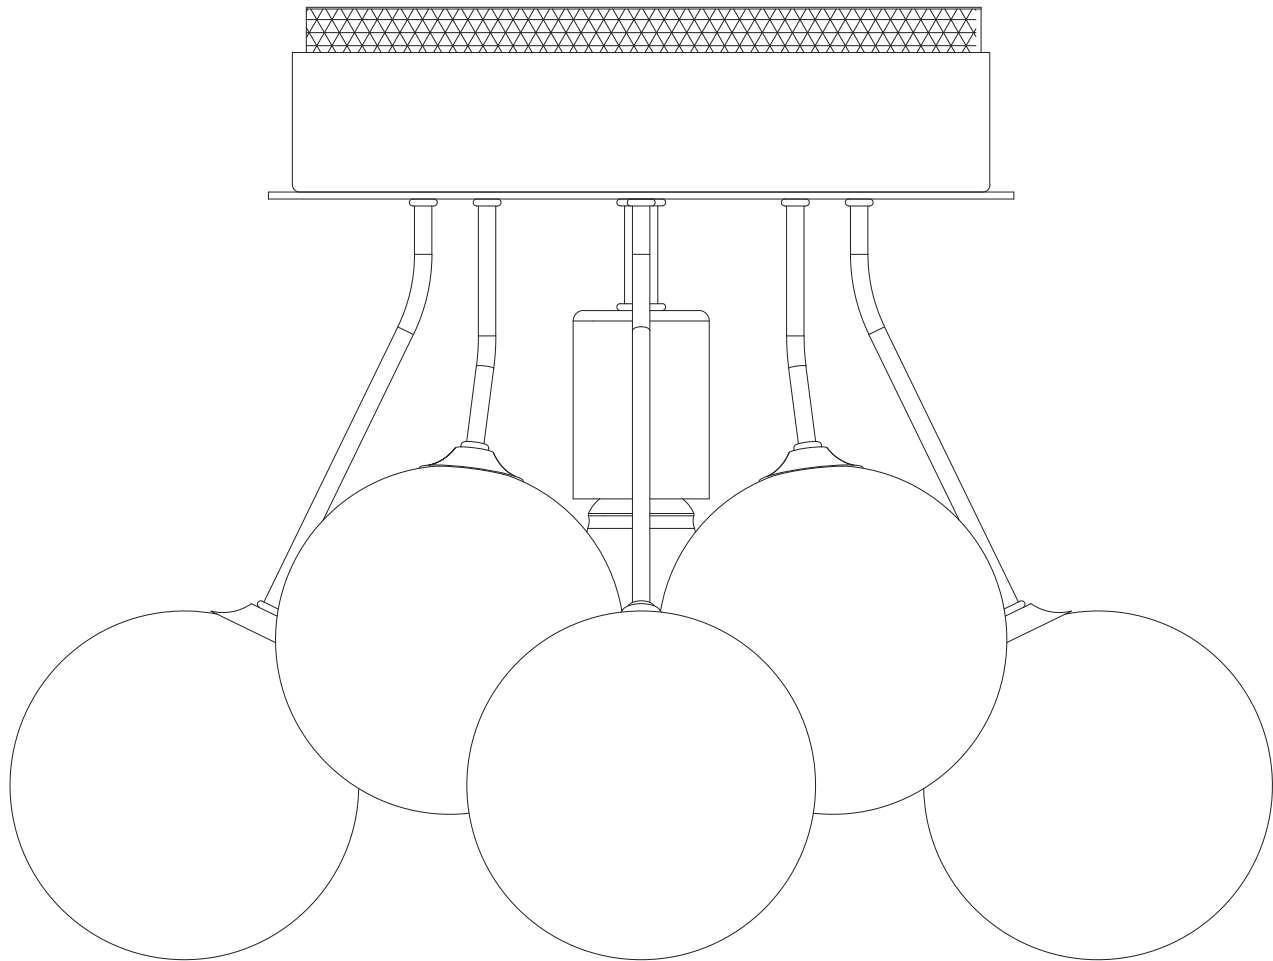

SAVE THESE INSTRUCTIONS!

Install the Fixture

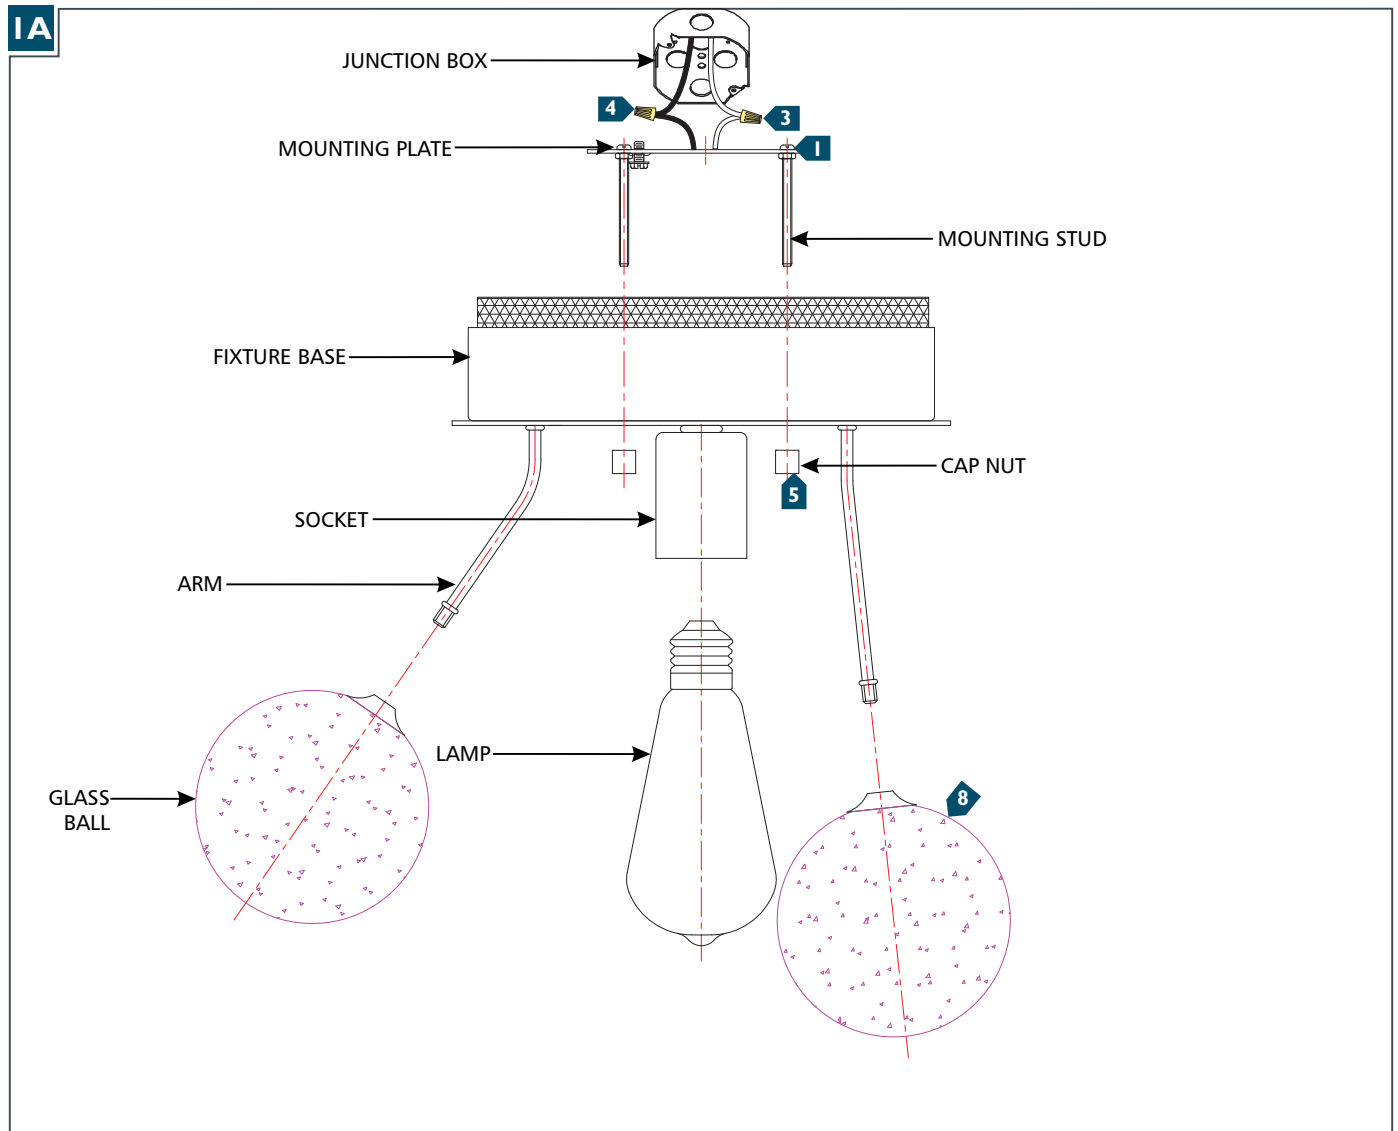

- 1 Secure the mounting plate to the junction box.
- 2 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 3 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 4 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 5 Neatly place all the wires into the junction box, place the canopy onto the mounting studs, and secure it in place by screwing the cap nuts onto the studs.
- 6 Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 7 Place two washers on the threaded pipe and slide the shade over the center rod and secure in place with two more washers and the other hex nut.
- 8 Carefully install the glass balls making sure to avoid making friction with the other glass balls. Screw the glass ball onto the ends of the arms until snug. Make sure the glass ball is installed correctly before releasing. Repeat for remaining glass balls.