
VISUAL COMFORT & CO.

STUDIO COLLECTION


BALLEROY MEDIUM SCONCE

LXW1071

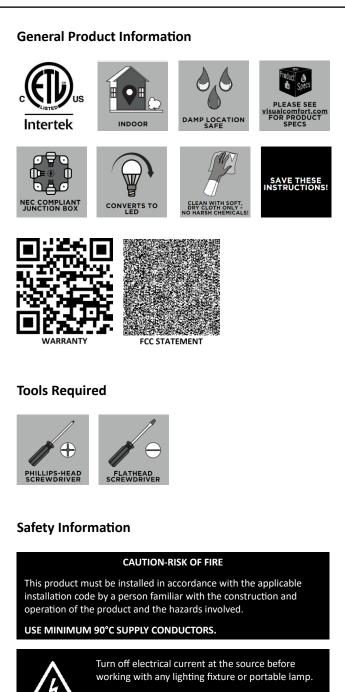

Install and use this product in adherence with local



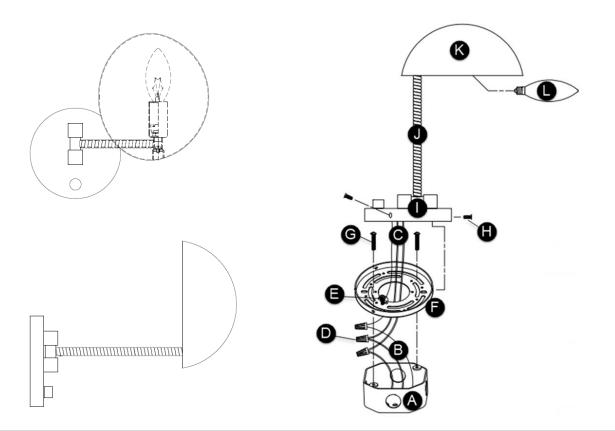

FIXTURE PARTS

A. Junction Box	D. Wire Nuts	G. Mounting Screws	J. Swing Arm
B. Junction Box Wires	E. Ground Screw	H. Fixture Screws	K. Shade
C. Fixture Wires	F. Mounting Plate	I. Fixture Base	L. Lamp (Not Included)
INSTRUCTIONS			

I. Preparing the Fixture

- 1. Separate the mounting plate from the fixture base by removing the fixture screws.
- 2. Install the mounting plate to the junction box and secure it using mounting screws.

II. Wiring the Fixture

- 1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
 - 2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
- 3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot fixture wire (black) and hot power line wire from the junction box (hot to hot)
 - b) Neutral fixture wire (white) and neutral power line wire from the junction box (neutral to neutral)
- 4. Carefully tuck all the wires behind the mounting plate into the junction box.

III. Installing the Fixture

- 1. Mount the fixture onto the mounting plate and secure it in place by tightening the fixture screws.
- 2. Install the bulb into the socket, referring to the label on the socket for Max Wattage information.
- 3. Adjust the swing arm and shade to desired position.