

### PENDANT INSTALLATION INSTRUCTIONS

# Coco Chain Link Swag Pendant 294979

#### PROFESSIONAL INSTALLATION REQUIRED

CAUTION: BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.

# **Important Safety Instructions:**

- These instructions are provided for your safety. It is important that they are read carefully before use to ensure safe
  operation of the product.
- Installation by a licensed professional electrician required.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A
  PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS
  INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to one (1) **60 watt maximum E26 medium-base bulb** (not included) or one (1) **9-watt maximum** LED light bulb (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- The lighting fixture is meant for indoor use, DRY LOCATIONS ONLY.
- Save these instructions.

#### **WARNING:**

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool
  prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- Check the cable properly for any loose or damaged connections.
- When the unit is no longer functioning, do not attempt to fix it by yourself. Only a qualified technician is allowed to disassemble and repair.
- If the external flexible cable cord of this luminaire is damaged it shall be exclusively replaced by a qualified electrician in order to avoid hazard.


# **Pre-Assembly:**

- Remove all parts and hardware from the box along with any plastic protective packaging. Do not discard contents until
  after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.
- The swag pendant is equipped with 9' of electrical cord that is pre-threaded through several chain links. If desired, the cord can be threaded through the full length of the swag pendant. To do this, unscrew the strain relief at the canopy and pull the cord out of the canopy. Thread the cord through the desired number of chain links and then reinsert the cord through the strain relief and canopy.
- Above the canopy, measure an additional 6" of electrical cord. Cut and discard any excess electrical cord. Starting at the cut end carefully strip the cord's outside insulation to expose about half of the cord above the canopy. Next, strip approximately 3/4" of the insulation on both of the inner cords.

**TOOLS REQUIRED (not included):** Ladder, Phillips Head & Flat Blade Screwdrivers, Side Cutter Plier, Wire Stripper & Electrical Tape.

# Parts List:

- A) Mounting Plate
- B) Mounting Screws (2x)
- C) Wire Connectors (3x)
- D) Ground Wire
- E) Ground Screw
- F) Canopy
- G) Canopy Screws (2x)
- H) Hook (2x)
- I) Hook Screws (8x)
- J) Fixture Wire
- K) E26 Socket

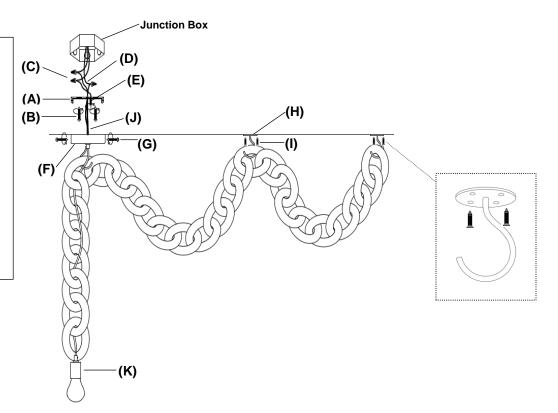

## **Installation Instructions:**

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 2. Gently pull existing wires down from the ceiling junction box and allow them to hang.
- 3. Secure the Mounting Plate (A) to the Junction Box with the Mounting Screws (B). Tighten until snug.
- 4. Fix the the Hook (H) onto the ceiling using Hook Screws (I).
- Establish electrical connections:
  - a) Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white or ribbed insulation). Fasten each together with a wire connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
  - b) Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black or smooth insulation). Fasten each together with a wire connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
  - c) Firstly, wrap the fixture's bare ground wire around the Green Ground Screw (E) marked as "GND" on the Mounting Plate (A), and tighten screw to secure the wire. Then connect this fixture's bare ground wire to the GROUND J-BOX WIRE (usually green insulation or bare wire) with a Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
- 6. After all connections are made, attach the Canopy (F) to the Mounting Plate (A). Align the holes of the side portions of the Mounting Plate (A) with the holes located in the side of the Canopy (F). Using a screwdriver, insert the Canopy Screws (G) through each hole of the canopy and into threaded engagement with the cross bar. Do not over-tighten the screws.
- 7. Insert one (1) **60 watt maximum E26 medium-base bulb** (not included) or one (1) **9-watt maximum** LED light bulb (not included) into the Socket (K). DO NOT EXCEED THE RECOMMENDED WATTAGE.
- 8. Restore power to ceiling outlet junction box and test fixture.
- 9. Installation is complete.

## Care Instructions:

- Do not use abrasive cleaning solution as it may cause damage to the fixture's finish.
- Wipe clean with a soft, dry cloth or static duster.