
## **ASSEMBLY INSTRUCTIONS**

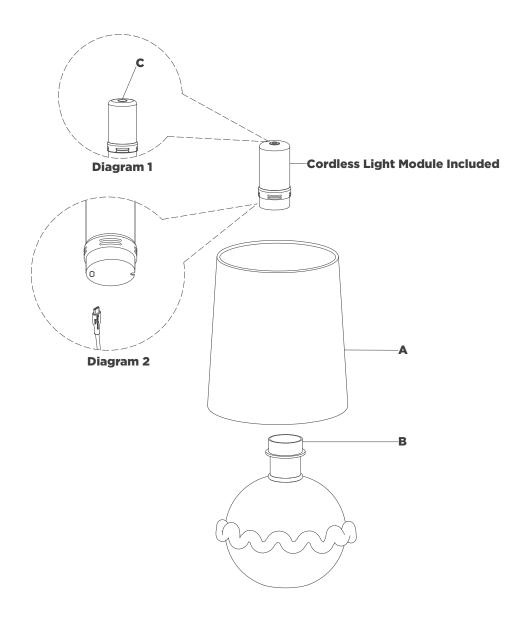

## Breslin 16" Cordless Accent Lamp

 
Item # ARN3905

## NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- 2. Remove shade (A) from packaging and place onto cordless module holder (B).
  - **NOTE:** If shade has additional packaging, carefully cut from interior of shade to avoid damage.
- 3. Place cordless light module into cordless module holder (B).
- 4. For best results fully charge battery before use.
- Test the lamp.
  Dimmer switch operation: Touch dimmer (C) to adjust between high, medium, low and off settings (see diagram 1).

**Charging Instructions:** Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2). **NOTE:** For convenience, USB-C to USB-A adapter is included.



**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

