ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: PFI19-754 NAME: KASH FLOOR LAMP

MATERIAL TYPE: Aluminium FINISH: Antiqued Aluminum

SOCKET TYPE: E26 SOCKET QTY: 1 Pc

BULB WATTAGE: 150WBulb/35W

ITEM NET WEIGHT: 32.80 Lbs

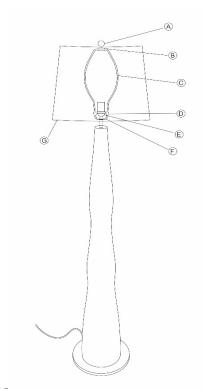

PARTS INCLUDED:

FINIAL (A)	Qty: 1 Pc
HARP TOP (B)	Qty: 1 Pc
HARP (C)	Qty: 1 Pc
HARP CAPS (D)	Qty: 2 Pc
SOCKET (E)	Qty: 1 Pc
SADDLE (F)	Qty: 1 Pc
SHADE (G)	Qty: 1 Pc

Note: Kindly check the hardware from time to time and tight it if found lose.



TO ASSEMBLE:

- 1. Insert the Harp (C) into the saddle (F) and lower the two harp caps (D) untill they cover the two pronged saddle.
- 2. Unscrew the Finial (A) from the harp top (B) place shade (G) over the assembled harp making sure the top of the harp extend through the hole at the top of the shade attach the finial (A) and tighten to screw the shade.
- 3. Insert 1 Type A 150 W / Bulb / 35 W Sbled Buld (not inculded) into the socket (E) do not Exceed Specified Wattage.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIORS