

# ASSEMBLY INSTRUCTIONS FOR YOUR ALLOY WALL SCONCE

## IMPORTANT SAFETY INSTRUCTIONS:


- \* These instructions are provided for your safety. It's important that all safety instructions are read before beginning installation of fixture.
- \* We **STRONGLY** recommend installation by a licensed electrician.
- \* Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- \* Do not connect the electricity until lamp is fully assembled.
- \* This fixture is UL rated for dry locations.

## CORD COVER ASSEMBLY INSTRUCTIONS:

1. Remove mounting plate (A) from backplate (C) by removing screws (D).
2. Determine desired location for light fixture on wall. Hold mounting plate (A) in a level position against the wall. Using a pencil, mark the location of the mounting holes in mounting plate (A) onto the wall.
3. Drill small holes at marked locations on the wall. Holes should be sized so wall anchors (R), provided, fit snugly inside the opening. Insert wall anchors into drilled holes.
4. Affix mounting plate (A) to the wall by threading mounting screws (Q) through holes in mounting plate (A) and into wall anchors (R).
5. Slide backplate (C) over mounting plate (A). Thread screws (D) back into holes at the top and sides of backplate (C) to secure fixture to the mounting surface.
6. Thread cord cover (F) into the bottom of the backplate (C). Thread cord cover (G) onto cord cover (F).
7. Remove flange (P) from socket (N).
8. Place shade (O) onto socket (N). Thread flange (P) back onto the socket to secure the shade to the fixture.
9. Insert one 60W MAX. Type A, medium base bulb into socket (N).
10. To adjust lamp into the desired position, loosen turnknob (M) and move arm (L) into desired position. Repeat step using turnknob (I) to adjust arm (J) and turnknob (K) to adjust shade (O). Note: Adjust the lamp into the desired position before turning it on. When making any adjustments to the position of the lamp, turn the lamp off and allow the shade to cool if necessary as the shade can get very hot.
11. Insert three prong plug (H) into wall outlet.
12. Control power to the fixture by using the switch located on backplate (C).

## DIRECT WIRE ASSEMBLY INSTRUCTIONS:

1. **SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.**
2. Remove mounting plate (A) from backplate (C) by removing screws (D).
3. Cut three prong plug (H) from the end of the electrical cord.
4. Remove cord covers (F) and (G) from the electrical cord. From the back side of backplate (C), pull the electrical cord up through hole in the bottom of backplate.
5. Cut the cord to the desired length for making an electrical connection. At least six inches of wire will be needed to make proper electrical connection.
6. Thread plug (E) into hole at the bottom of backplate (C).
7. Carefully pull the wiring from wall outlet box. Thread wires through the center hole in mounting plate (A).
8. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
9. Lift fixture to mounting plate and make proper electrical connections described in steps 10-12. **A LICENSED ELECTRICIAN IS RECOMMENDED.**
10. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (S) and tightly wrap the connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (S) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (S) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into wall outlet box. Slide backplate (C) over mounting plate (A).
14. Thread screws (D) into holes at the top and sides of backplate (C) to secure the fixture to the mounting surface.
15. Follow steps 7-10 from cord cover assembly instructions above.
16. Control power to the fixture by using the switch located on backplate (C).

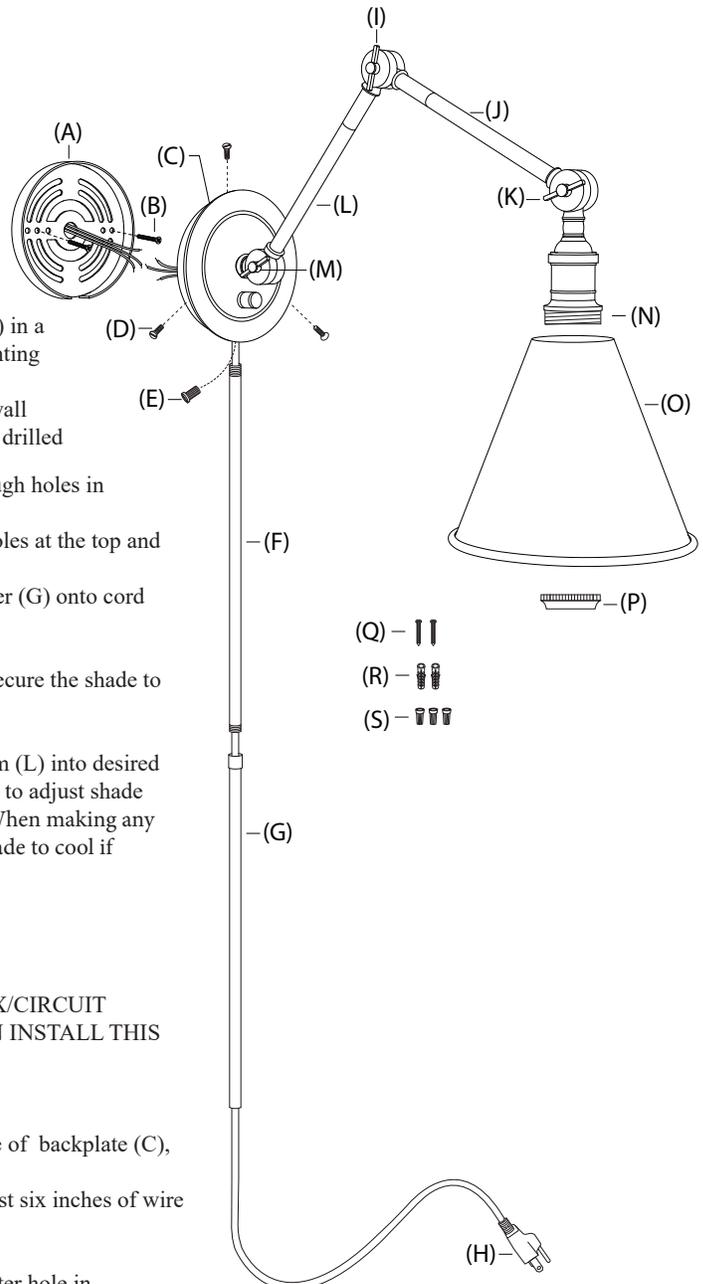

- (Q) - ||
- (R) - |||
- (S) - ||||