


ARN1010

ASSEMBLY & INSTALLATION GUIDE

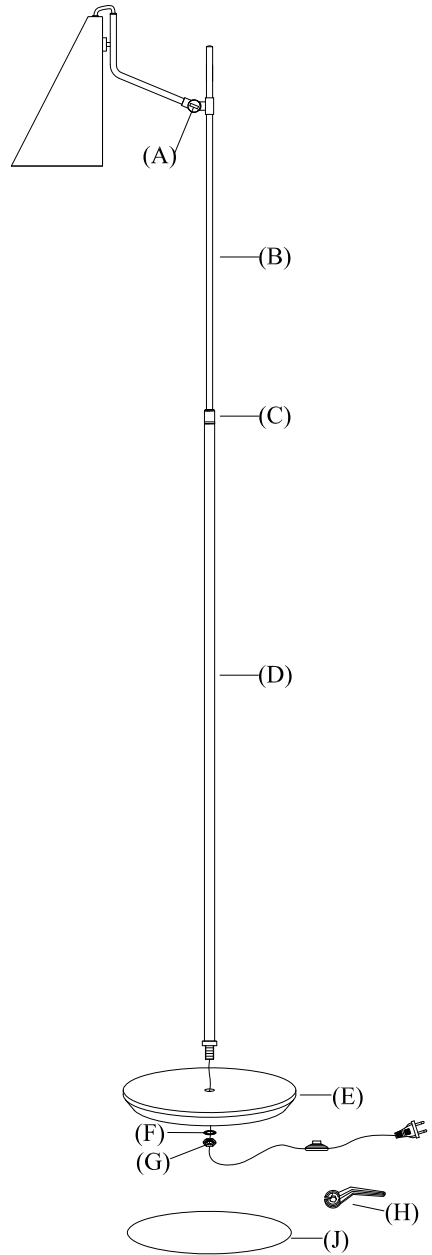

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Join lamp pole (D) and lamp base (E) together, letting bottom threaded rod of pole (D) pass through the center hole of lamp base (E). Slide the washer (F) and screw the nut (G) onto the threaded rod and tighten with wrench (H) provided.
2. Remove backing sheet from felt paper (J), and affix the felt paper to the underneath of the lamp base.
3. Insert light bulb into the lamp holder.
4. Plug lamp into wall outlet.
5. ADJUSTMENT INSTRUCTION:
 - A. Loosen adjustment key (A) and break (C).
 - B. Adjust lamp by swinging shade to desired angle OR pulling or pushing lamp pole (B) up or down to desired height.
 - C. Tighten the adjustment key (A) and break (C).
6. CAUTION:

If the external cable is damaged, it must be replaced by the manufacturer or its service agent or similar qualified person in order to avoid a hazard.
7. DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.