

# Shade Installation Instructions

C72

Henry Floor Lamp 242215 & 242215 C

## Install Bulb (Figure 1)

### Component Parts

- A Socket
- B Bulb

1. This fixture is shipped assembled. Carefully unpack the fixture from the carton.
2. Install bulb (B) in socket (A). *Bulb is included with the "C" version only.*

## Adjusting the Toothed Hinges (Figure 2)

### Component Parts

- C Adjustable Hinge
- D Teeth
- E Thumbscrew

This fixture is supplied with 3 adjustable hinges. Each adjustable hinge (C) has internal teeth (D) and a thumbscrew (E) lock. To adjust fixture, loosen thumbscrew (E) 2 turns while supporting the weight of the fixture. Set the hinge (C) in the desired position, making sure to engage the teeth of one side of the hinge with the teeth of the other side. Hand tighten thumbscrew (E) to lock hinge. From a neutral position the hinges have an adjustment range of 105 degrees maximum to either side. (Figure 2).

### WARNINGS:

- Do not attempt to adjust a fixture hinge without first unlocking the thumbscrew.
- Hand-tighten the thumbscrew to secure, do not overtighten. Do not use pliers.
- Do not exceed the maximum angular setting of the hinge.


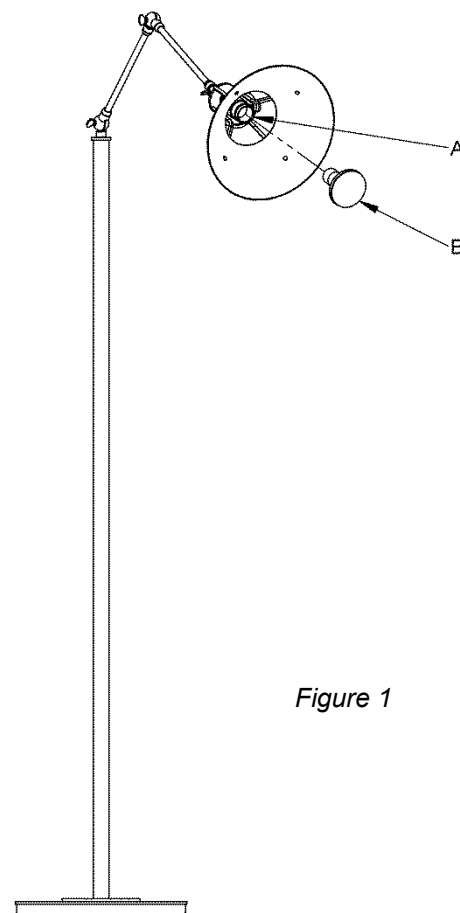


Figure 1

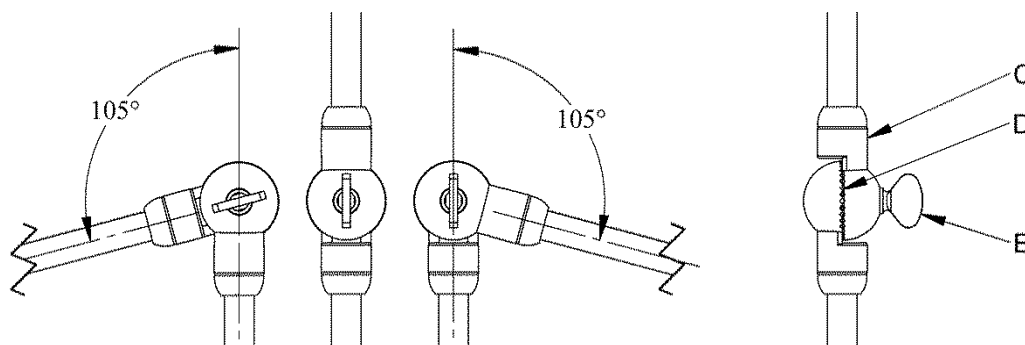

(Figure 2)

MAX TVL  
TO LEFT

NEUTRAL  
POSITION

MAX TVL  
TO RIGHT

SIDE VIEW TO  
HIGHLIGHT TEETH

*If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!*

\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.