

UTTERMOST

ASSEMBLY INSTRUCTIONS

21408

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed electrician for all fixture installations

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
2. Position the back plate on the ceiling, and mark location of the two plastic anchors. Drill the holes on the wall, and then insert the plastic anchors.
3. Thread the wires through the needed stems and swivel on the canopy, then assemble the stems together using the nipple. Attach the bottom end of stem onto the coupling tightly, then secure the swivel onto the top end of stem.
adjust the wire length as needed, remove excess wire.
4. Secure the back plate by inserting the wood screws through the holes on the back plate into the plastic anchors, Thread the Ground screw into the hole of the back plate. Secure the back plate to the outlet box with the Outlet box screws
5. According to the prompt of FIG:1, first connect the red wire on the LED DRIVER and the black wire on the fixture wire, and the yellow wire on LED DRIVER and the white wire on the fixture wire
6. Make Wire connections with Wire Connector:
 - The smooth wire (w/ marking) or black wire from fixture to Black Wire from power source.
 - The ribbed wire (w/o marking) or white wire from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw. Carefully tuck wires back into the Outlet Box.
7. Place the fixture Canopy over the outlet box and let the two mounting screws protrude through the mounting holes on the Canopy and secure with ball nuts until the canopy is snug against the ceiling.
8. Assemble the glass shade over the cap.
9. Turn on the power at fuse or Circuit Box.

