

UTTERMOST

ASSEMBLY INSTRUCTIONS

21643

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed electrician for all fixture installations

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
2. Assemble the bottom end of the lower nipple into the coupling.
3. If needed, assemble the swivel onto the canopy and secure with steel washer, washer & hex nut tightly. adjust the wire length as needed, remove excess wire.
4. Thread the wires through the needed stems and swivel on the canopy, then assemble the stems together using the nipple. Attach the bottom end of stem onto the coupling tightly, then secure the swivel onto the top end of stem.
5. Thread the Mounting screws into the matching holes of the Mounting bar, and tighten with the Hex nut. Thread the Ground screw into the hole of the Mounting bar. Secure the Mounting bar to the outlet box with the Outlet box screws.
6. Make Wire connections with Wire Connector:
 - The smooth wire (w/ marking) from fixture to Black Wire from power source.
 - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw. Carefully tuck wires back into the Outlet Box.
7. Place the fixture Canopy over the outlet box and let the two mounting screws protrude through the mounting holes on the Canopy and secure with ball nuts until the canopy is snug against the ceiling.
8. Install the light bulb in accordance with the fixture's specifications.
DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
9. Assemble the glass shade onto the aluminum cup.
10. Turn on the power at fuse or Circuit Box.

