

oxygen

Model: 3-8-110-0

HANDHELD REMOTE CONTROL

SETTING THE CODE

NOTE: This handheld remote control unit is equipped with 16 code combinations to prevent possible interference from or to other remote units. The frequency switches on your receiver and transmitter have been preset at the factory. Please recheck to make sure the switches on transmitter and receiver are set to the same position, any combination of settings will operate the fan as long as the transmitter and receiver are set to the same position.

This unit has 16 different code combinations. To set the code, perform these steps:

SETTING THE CODE ON THE TRANSMITTER AND RECEIVER:

Slide the code switches to the same positions as set on your receiver (included with your fan) and transmitter. Slide the code switches to your choice of up or down position. (Factory setting is all up). Do not use this Position. Use a small screwdriver or a ballpoint pen to slide firmly up or down. (Fig. 1)

INSTALL THE BATTERY

Remove the set screw on the back of transmitter, take out the battery cover. Insert the 3 volt battery (included) and make sure they are seated correctly in each recess with the Positive + sign facing up. When remove or insert the batteries, use a suitable screwdriver to loosen or tighten the screws and open the back cover. (Fig. 2)

⚠ WARNING: Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. IF you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The batteries shall be disposed of properly, including keeping them away from children; Even used cells may cause injury.

OPERATING INSTRUCTIONS

A. H, M and L buttons: (Fig. 3)

These three buttons are used to set the fan speed as follows:

H= high speed

M= medium speed

L= low speed

B. ■ button:

This button turns the fan off.

C. The "☀" button:

The "☀" button turns the light ON or OFF and also controls the brightness setting. Press and hold the button to dim and brighten the light. Press and hold the button and release the button at desired brightness. The light key has an auto-resume, it will stay at the same brightness as the last time it was turned off.

NOTE: The distance between the transmitter and receiver should not be greater than 30 feet.

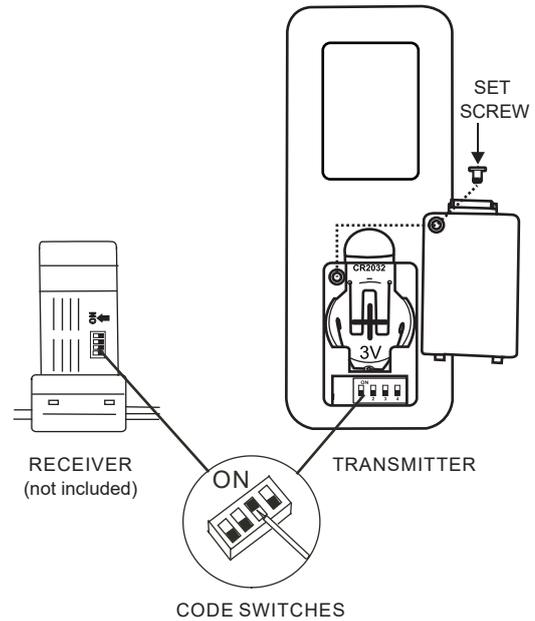


Fig. 1

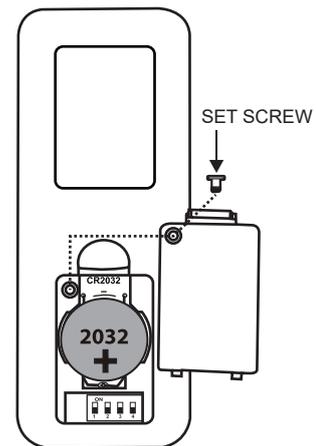


Fig. 2

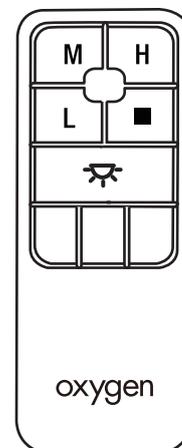


Fig. 3