oxygen

Model: 3-8-2000-0

HANDHELD TRANSMITTER

• Specified DC motor fan use.

NOTE: Each fan will need to be connected to the wall control provided with the fan for the handheld remote to function.

This handheld remote will work with two different types of DC motors. Therefore if the "Pairing Process" doesn't work, follow the "Control Setting Process" to match handheld remote with fan.

Pairing Process

Install batteries included with the transmitter. **NOTE:** To prevent damage to the transmitter, remove these batteries if not used for long periods of time (months).

With the fan's power off, restore power to the fan. Press and hold "0" button for about 5 seconds and release. If optional light kit is installed, the light kit will flash twice and the signal light on the handheld remote will come on when the button is pressed. The fan has completed the pairing process with the handheld remote and is ready for use.

If this "Pairing Process" doesn't work, follow the "Control Setting Process" to match handheld remote with fan.


Control Setting Process

Step 1. Turn the power off and restore power to the fan. Press and hold "0 " button for about 5 seconds and release once the fan begins rotating (the signal light will come on when button is pressed). **DO NOT** press any other buttons during this process. Patience is a virtue

NOTE: The "**0**" button must be pressed within 60 seconds of restoring power.

Step 2. The fan will run and begin the control setting process. The fan will run in both directions for a total of approximately 5 minutes.

Step 3. When the fan stops, the control and speed setting process is complete and the fan is ready for use.

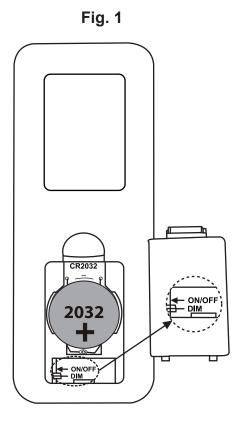

OPERATING INSTRUCTIONS

A. 1, 2, 3, 4, 5 and 6 buttons:

These six buttons are used to set the fan speed as follows:

- 1= minimum speed
- 2 = low speed
- 3= medium low speed
- 4= medium speed
- 5= medium high speed
- 6= high speed

B. **0** button:

This button turns the fan off.

C. The " - The " - The " - C. The

The " \overleftarrow{r} " button turns the upper light ON or OFF and also controls the brightness setting. The " \overleftarrow{r} " button turns the bottom light ON or OFF. Press and hold the button to set the desired brightness. The light key has an auto-resume, it will stay at the same brightness as the last time it was turned off.

D. The " \checkmark " button is used to set the fan forward or reverse, press the button forward (for warm weather) or reverse (for cool weather).

E. "DIM" and "ON/OFF" dip switch: (Refer to Fig. 1) The "DIM" selection is the light dimmable selection and is to be used with all bulbs except for CFL bulbs. The "ON/OFF" selection is the light on only (no dimmable function) and is to be used with CFL and LED bulbs as CFL bulbs cannot be dimmed properly.

NOTE: To operate the reverse function on this fan, press the reverse button while the fan is running.

