INSTALLATION INSTRUCTION

Ocularc 3020W-CS LED Monopoint

MO-3020W-CS



SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

AVERTISSEMENT

IMPORTANT: Coupez l'électricité avant TOUTE manipulation.


- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt («OFF»).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

INSTALLING THE FIXTURE (FIG.1):

- Loosen the three canopy screws, twist and separate the canopy cover from the base plate. (keep screws on base plate)
- Remove a knock out from the base plate and install the appropriate connector.
- 3. Attach the base plate to the surface using slotted holes for mounting screws (supplied).
- 4. Connect fixture wires to 120 277 VAC power wire, with wire nuts (supplied). See dimming report in order to select a compatible dimmer.
- 5. Connect ground wire to the green wire from fixture.
- Mount the canopy to the base plate by twisting key holes over three screws in base plate.
- 7. Tighten screws to secure canopy.
- 8. After the light is on, rotate the luminaire body horizontally or vertically to aim properly.

CCT SELECTION:

- The fixture features an on-board CCT selection switch.
- Prior to powering the fixture, use the slider switch to select the desired fixture CCT.

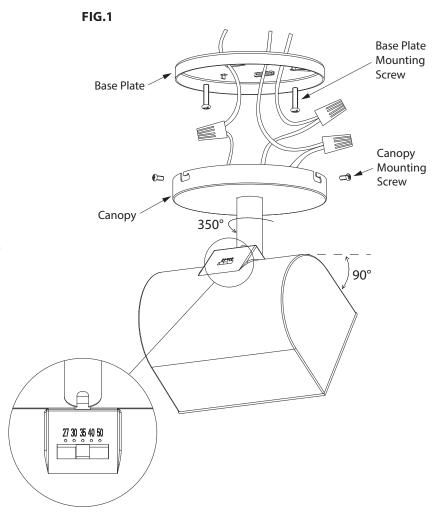

NOTE: All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the ETL/cETL listing of this fixture.

waclighting.com Phone (800) 526.2588

(800) 526.2585

Headquarters, East Manufacturing Facility 44 Harbor Park Drive Port Washington, NY 11050

South East Manufacturing Facility 1600 Distribution Ct Lithia Springs, GA 30122 Central Manufacturing Facility 1700 South J Elmer Freeway, Ste 100 Cedar Hill, TX 75104 West Manufacturing Facility 1750 S Archibald Ave Ontario, CA 91761

1