

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 30822

Carefully unpack all Assembly Parts from the carton.

1. Place the lamp on a level surface.
2. Use a Philips screwdriver to loosen Screw C on top of the Plate per the diagram below.
3. Looking at the bracket on the Fabric Shade, place Hole A and Hole B over Screw A and Screw B. Turn clockwise to lock into place. Tighten Screw C to secure.
4. Install the correct bulb referring to fixture markings and/or labels for maximum wattage. (Bulb not included)
5. Place the Glass Shade over the bulb and turn clockwise by hand until secured into place.

