



UTTERMOST

ASSEMBLY INSTRUCTIONS





ITEM.: 50390

Page 1 of 1

PART LIST


NO.	DESCRIPTION	QTY
1	Table top 	1 Set
2	Table legs 	3 Pcs

HARDWARE

A	Flat washer 	12 pcs
B	Lock washer 	12 pcs
C	Bolt 	12 pcs
D	Allen wrench 	1 pc

Step 1 Take all parts carefully out of the carton and place them on a flat, soft surface to be sure no parts are missing or damaged. **When assembling, install all bolts before securing any one bolt.**

Step 2 Place the Table Top (1) upside down on a flat, soft surface. Place the Table Legs (2) on the Top lining the holes in the Legs up with those in the Top. **NOTE: The rounded side of each leg should face outward.** As shown in the diagram below, attach the legs by hand-threading all bolts and washers into each hole. Once all bolts are attached by hand, use the provided Allen Wrench (D) to fully tighten.

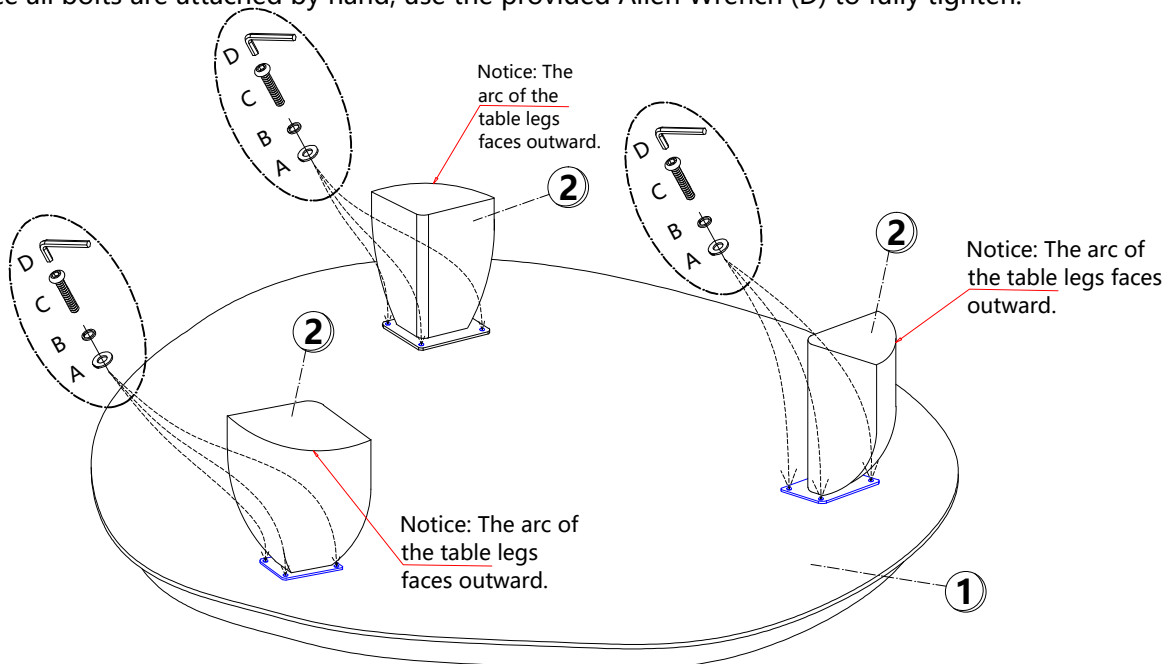

Step 3 Turn over the table and the assembly is complete.

Notice:

To Clean, wipe with soft dry cloth.

