



UTTERMOST

ASSEMBLY INSTRUCTIONS





ITEM.: 50391

Page 1 of 1

PART LIST


NO.	DESCRIPTION	QTY
1	Table top 	1 PC
2	Table leg 	1 PC

HARDWARE

A	Flat washer 	4 pcs
B	Lock washer 	4 pcs
C	Bolt 	4 pcs
D	Allen wrench 	1 pc

Step 1 Take the parts carefully out of carton and place on a flat, soft surface to be sure no parts are missing or damaged. **When assembling, install all bolts before securing any one bolt.**

Step 2 Place the Table Top (1) upside down on a soft, flat surface. Place the Table Leg on the Top and line up the holes in the Leg with those in the Top. (**Note: Be sure the hole marked "A" in the Top lines up with the hole marked "A" in the Leg for correct assembly.**) Hand-thread the hardware as shown in the diagram below until all bolts and washers are in place. After all bolts are attached, tighten using the provided Allen Wrench (D).

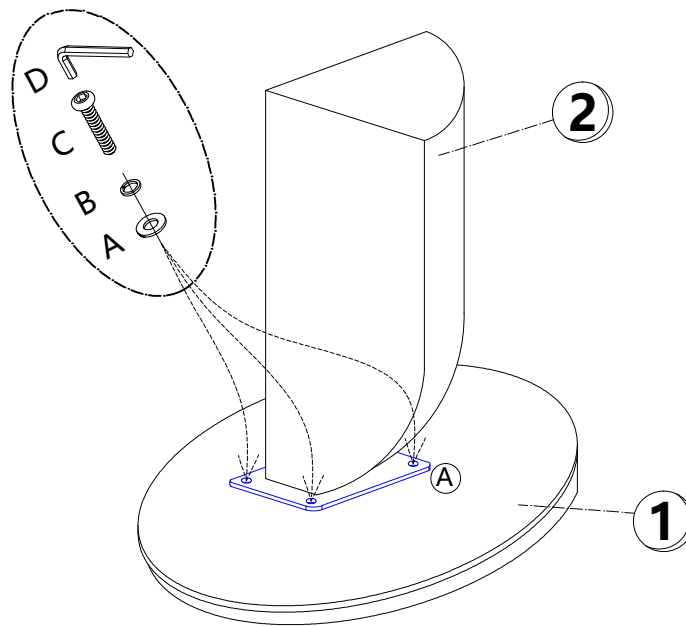

Step 3 Turn over the table and the assembly is complete.

Notice:

To Clean, wipe with soft dry cloth.

