





1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com



# Installation Instructions for Monorail Wall Telie

#### **IMPORTANT SAFETY INSTRUCTIONS**

To reduce the risk of fire, electrical shock, exposure to excessive UV radiation, or injury to persons:

- Use this fixture indoors only.
- Do not look directly at the lamp while the fixture is on.
- **RISK OF FIRE:** Use only the type of lamp and maximum wattage indicated in this instruction manual.
- Never cover the halogen lamp with anything other than a lamp shield provided by Edge Lighting and never place flammable material close to the fixture.
- Never turn the fixture on and off by connecting and disconnecting the halogen lamp.
- Do not touch the fixture head, shade or lamp shield while the fixture is on. These surfaces may be **VERY HOT**.
- Do not touch lamp at anytime. Use a soft cloth. Oil from skin may damage lamp.
- It is normal for a new halogen lamp to produce minor smoke when first turned on.
- Do not operate the luminaire with a missing or damaged shield.
- Turn power off and allow to cool before replacing lamp.




#### IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- This product is not restricted to certain height installation. It is approved to be used at any height above the floor.
- Applicable accessories are Hexcell Louver, Glass Lenses, MR16 Snoot, Louver Lens Holder, Solid Back Shade (S6), and Perforated Back Shade (S7).


**SAVE THESE INSTRUCTIONS!** 

### **Install the Fixture to Monorail Wall**

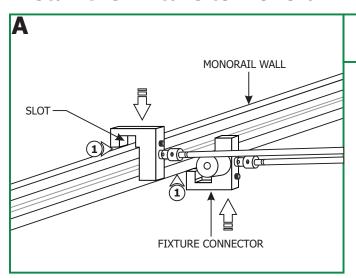


1: Place one fixture connector slot from the top and the other one from the bottom onto the Monorail Wall.

- **2:** Slide the fixture connectors toward each other so that the plastic bushing between them keeps them apart.
- **3:** Tighten the M3 set screw on each fixture connector with the 1.5 MM Allen wrench provided.

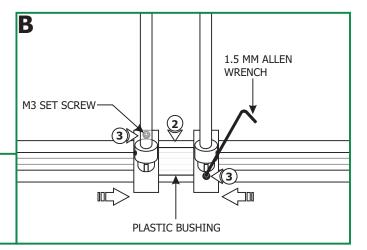

## **Install the Lamp**

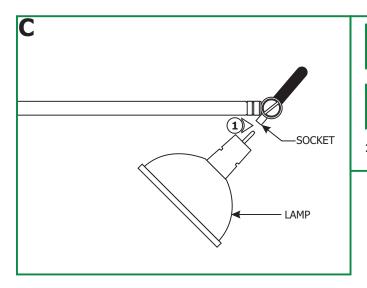


**CAUTION:** To reduce risk of a burn or electrical shock during lamping, disconnect the power to the fixture.


Use MAX 75 Watt, Type MR16 Front Glass Cover Halogen Lamp.



1: Push the lamp pins completely into the socket holes.

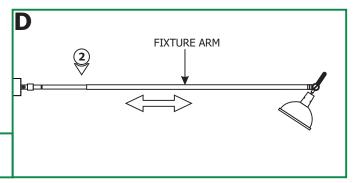

2: Extend the fixture arms to the desired length.

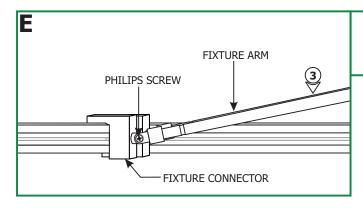

**3:** Rotate the fixture arms to the desired position. If necessary tighten the Phillips screws on the fixture connector to hold the fixture in place.