

## **IMPORTANT SAFETY INSTRUCTIONS**

To reduce the risk of fire, electrical shock, exposure to excessive UV radiation, or injury to persons:

- Use this fixture indoors only.

IGHTING

© 2009 Edge Lighting. All Rights Reserved.

- Do not look directly at the lamp while the fixture is on.
- **<u>RISK OF FIRE</u>**: Use only the type of lamp and maximum wattage indicated in this instruction manual.
- Never cover the halogen lamp with anything other than a lamp shield provided by Edge Lighting and never place flammable material close to the fixture.
- Never turn the fixture on and off by connecting and disconnecting the halogen lamp.
- Do not touch the fixture head, shade or lamp shield while the fixture is on. These surfaces may be **VERY HOT**.
- Do not touch lamp at anytime. Use a soft cloth instead as oil from skin may damage lamp.
- It is normal for a new halogen lamp to produce minor smoke when first turned on.
- Do not operate the luminaire with a missing or damaged shield.
- Turn power off and allow to cool before replacing lamp.

## **Install the Fixture**



1718 W. Fullerton Ave

Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com

info@edgelighting.com

M-VES-

904-VESPA-02






## **IMPORTANT INFORMATION**

- This product is ETL listed for indoor dry locations.
  This product is not restricted to certain height installation. It is approved to be used at any height above the floor.
- Applicable accessories are Hexcell Louver, Glass Lenses, Little Shady Mesh Back Shade, Little Shady Solid Back Shade & Round Glass Back Shade.

## SAVE THESE INSTRUCTIONS!

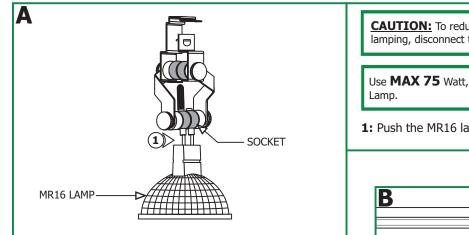

**<u>CAUTION</u>**: To reduce risk of a burn or electrical shock during lamping, disconnect the power to the fixture.

Use **MAX 75** Watt, Type MR16 Front Glass Cover Halogen

1: Push the MR16 lamp pins completely into the socket holes.

- **2:** Place the open part of the fixture spring arms onto bottom of the Monorail.
- **3:** Rotate the fixture until the tab of the long spring arm snaps completely onto the top of the Monorail.
- **4:** After aiming the fixture lamp, tighten the two knurled screws to ensure proper power connection.

