

JAMIE YOUNG C^o

Rowan Floor Lamp, Natural

9ROWANFLNA

SAFETY, INSTALLATION & CARE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY:

1. This lighting fixture is for indoor use only.
2. This lamp is equipped with a polarized plug (one blade is wider than the other). Do not modify the plug in any way.
3. Do not exceed the recommended bulb wattage. Use only the specified type of bulb.
4. Keep flammable materials away from the bulb.
5. Do not open the product or alter the wiring in any manner.
6. If using an extension cord, follow all safety precautions provided with it.
7. Use care when unpacking the lamp.
8. Locate all included parts before disposing of packaging materials.

ASSEMBLY, CARE AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

PARTS INCULDED (refer to figure):


- A. Harp (Styles may vary)
- B. Saddle
- C. Shade (packed in separate box)
- D. Finial
- E. Socket (attached, no assembly required)
- F. Plug cap

Assembly Procedure (refer to figure):

1. Insert Harp (A) into Saddle (B).
2. Install shade (C) onto the Harp (A).
3. Tighten the finial (D) onto Harp (A) to secure the shade.
4. Install light bulb into Socket Saddle (E).
5. Remove plug cap (F) from plug.

Care and cleaning:

1. Wipe with a soft dry cloth.
2. AVOID cleaners, scouring pads, etc.
3. Before changing bulb, unplug lamp and allow bulb to cool.

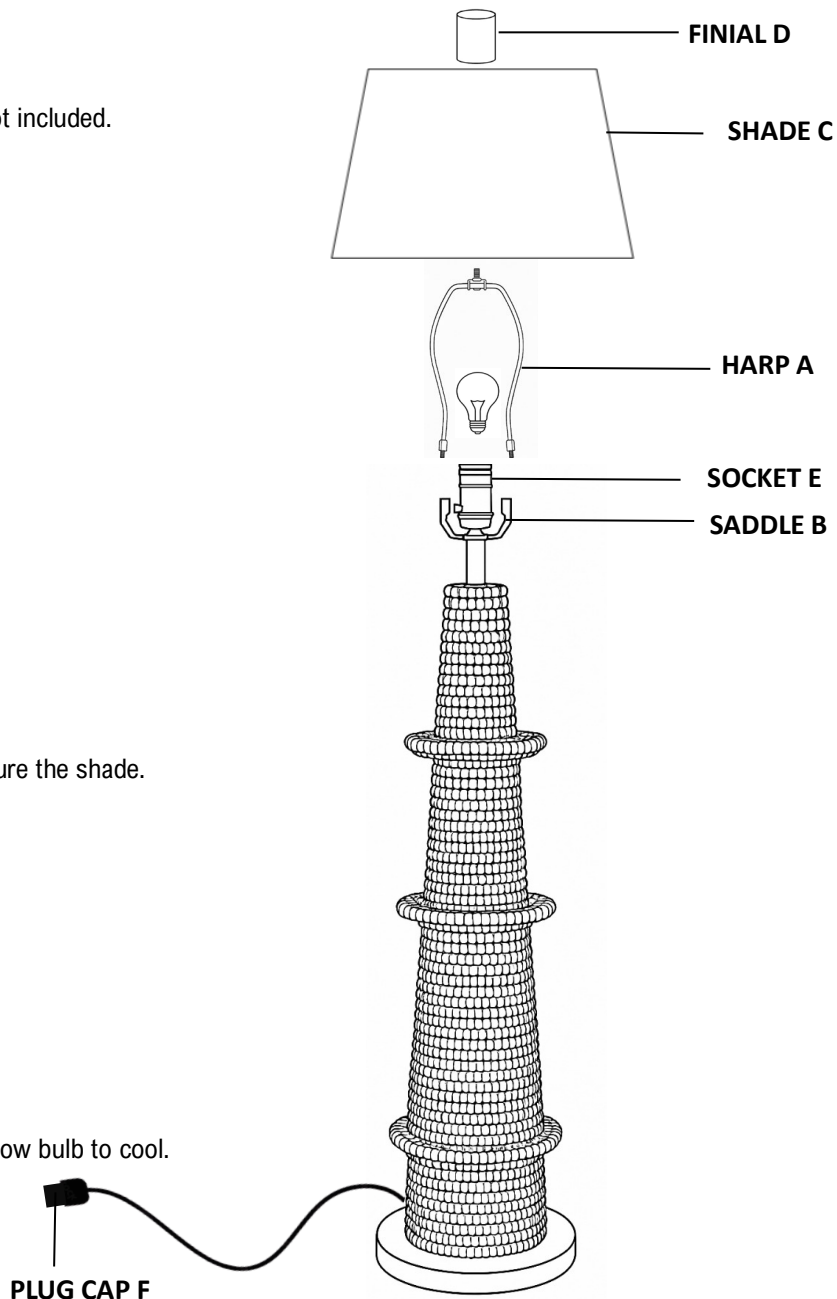

Troubleshooting:

Problem:	Possible cause:	What to DO:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

ASSEMBLY

INSTRUCTIONS FOR SHADES				
MAX WATT.		MINIMUM DIMENSIONS		
		R	H	C.D
25 W	MAX	1 5/8"	2 3/4"	3"
40 W	MAX	2"	3 1/4"	3 1/2"
60 W	MAX	2 1/2"	3 1/4"	3 1/2"
75 W	MAX	2 7/8"	3 1/4"	3 1/2"
100 W	MAX	3 1/2"	3 1/4"	4"
150 W	MAX	4 3/4"	3 1/4"	4 1/2"

The diagram shows a trapezoidal lamp shade mounted on a lamp base. A light bulb is shown inside. Dimension lines indicate: 'H' for the height of the shade, 'R' for the radius from the center to the side edge, and 'C.D' for the center diameter at the top edge.

The diagram shows a lamp shade tilted at an angle, with a light bulb inside. This illustrates an incorrect assembly position.

**DO NOT
USE LAMP
SHADES
IN THIS
POSITION**