4194/4195/4196

ASSEMBLY INSTRUCTIONS

Ensure that the rated luminaire voltage requirements are compatible with the available

All LEDS are included in your lamp. Never touch the LED surface with your bear hands as

mains supply in which it will be installed.


this may reduce the life of your LED.

USA & CANADA



WARNING!

Be sure electrical power is OFF before and during installation or maintenance. The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

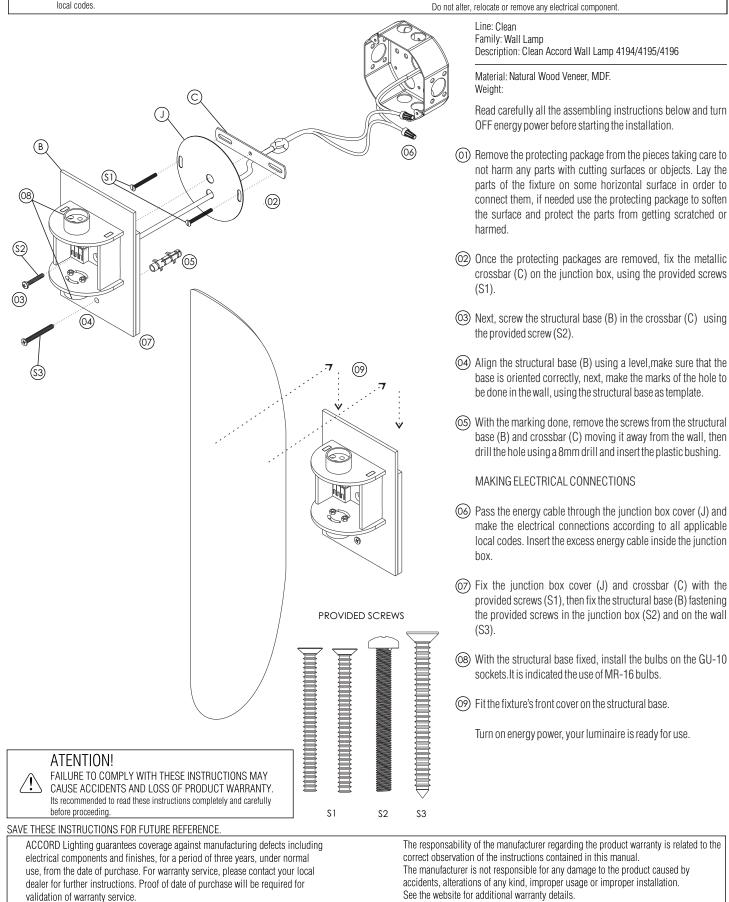

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.