



USER MANUAL

for Genesis™ 2

REMOTE CONTROL

The remote control buttons are explained in the chart to the left. Please refer to the chart for a description of each button and instructions for proper use.



BUTTON	FUNCTION
OFF	Power Off
ON	Power On
0 - 9	Display Channel Guide
Dash (-)	Select TV Signal Input Source
Last	N/A
CC	Display Closed Captioning
Volume ▲/▼	Adjust Volume Up or Down
Mute	Toggle Volume Off and On
Channel + / -	Scroll Up or Down Through Channel Numbers
Menu Arrows	Navigate Through On-Screen Menus
Enter	Select An Option or Sub-Menu
⏮	Rewind Program
■	Stop Program
▶	Play Program
⏭	Fast-Forward Program
Sleep	Set Time for TV To Play Before It Turns Off
🏠	Display On-Screen Menu
List	Display Channel List for Digital TV
Info	Display Current Signal Source
Red, Gree, Yellow, Blue	Available for Custom VOD Content

BASIC OPERATIONS

1. TURNING YOUR TV ON

- Connect the TV to an electrical outlet (NEMA-5-15) using the power cable. The LCD blinks blue and your TV enters a power on standby mode.
- Press the ON button on the remote control.

2. TURNING YOUR TV OFF

- With your TV on, press the OFF button on the remote control. Your TV will return to the power on standby mode.

3. ADJUSTING YOUR TV VOLUME

- Press **Volume Buttons** to adjust the TV volume up or down.
- Press **Mute** to turn the sound off.
- Press **Mute** to turn the sound back on again.

4. SELECTING A TV CHANNEL

- To scroll up or down the list of channels on your TV, use the **Channel + and - Buttons**.
- To enter a channel number, use the **0 to 9 Buttons**.

5. SELECTING YOUR INPUT SOURCE

- To display a list of input source options, press the **Dash (-)** **Button** on the remote control. Input sources toggle in a small window. Choices include HDMI, HDMI2 and USB.
- Press **Up to Down Arrows** to scroll through the choices. Press Enter to select and exit the menu.


6. NAVIGATING THE ON-SCREEN MENU

- Use the remote control to navigate the on-screen menu. From here you will set up your TV's programmable options and settings.
- Press **Home Button** to display the on-screen menu.
- Press **Up and Down Arrows** to scroll up and down the list of sub-menus.
- Press **Right Arrow** to access the sub-menu controls.
- Press **Left Arrow** to return to menu.
- Press **Home Button** to exit and save your settings.



7. SELECTING THE ON-SCREEN LANGUAGE


- Press the **Home Button** to display the on-screen menu.
- Press the **Up and Down Arrows** to scroll and select the Settings sub-menu.
- Press the **Right Arrow** to access the sub-menu controls.
- Press **Left and Right Arrows** to select the language you want.
- When you are satisfied with your settings, press the **Home Button** to select and exit.

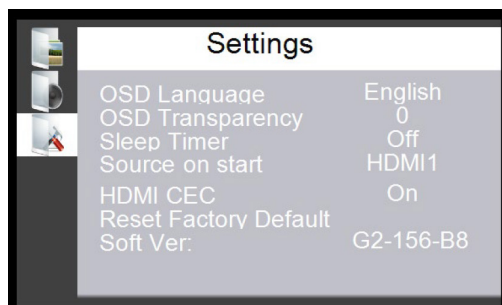

LANGUAGE MENU	DESCRIPTION
OSD Language	Select the language for your on-screen display.
OSD Transparency	Set the transparency value for your on-screen display.
Sleep Timer	Set the time clock for your on-screen display.
Source on start	Default input upon startup.
HDMI CEC	Allows devices connected to the TV through the HDMI port to communicate back and forth with your TV.
Reset Factory Default	Return all settings to the factory defaults.

8. DISPLAY MENU OPTIONS

- Press the **Home Button** to display the on-screen menu.
- Press the **Right Arrow** to select the Display sub-menu.
- Press the **Up and Down Arrows** to scroll and select the sub-menu controls.
- Press the **Left and Right Arrows** to adjust the control settings.
- When you are satisfied with your settings, press the **Home Button** to select and exit.

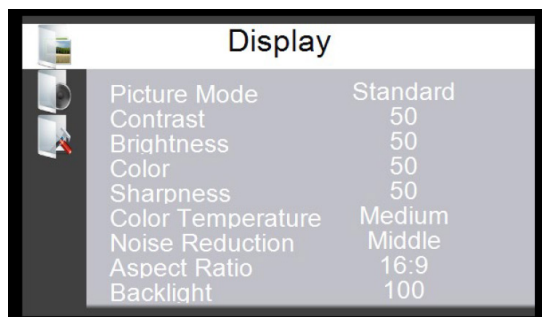

DISPLAY MENU	DESCRIPTION
Picture Mode	You can use present modes (Soft, Standard, Vivid) or you can customize your own settings by choosing the User Mode.
Contrast	Controls the difference between the darkest and the lightest areas of your TV image.
Brightness	Controls the color of dark pixels on screen from gray to black.
Color	Controls the color saturation of your TV image.
Sharpness	Controls the focus of your TV image.
Color Temperature	Controls the warmth or coolness of the colors in your video image. Picture mode must be in User mode. Use the Left and Right Arrows to cycle through options.
Noise Reduction	Controls Visual "noise" that appears in video images.
Aspect Ratio	Image ratio between width and height

9. AUDIO MENU OPTIONS

- Press the Home Button to display the on-screen menu.
- Press the Up and Down Arrows to scroll and select the Audio sub-menu.
- Press Enter to access to sub-menu.
- Press Up and Down Arrows to scroll and select the sub-menu controls.
- Press Left and Right Arrows to adjust the control settings
- When you are satisfied with your settings, press the **Home Button** to select and exit.

10. TELEVISION CONNECTION

Your Genesis 2 TV features 10 connection ports for various devices and functions. Refer to the box on the left and the image below to identify each connection and understand its purpose.

AUDIO MENU	DESCRIPTION
Balance	Adjust the balance between left and right speaker.
Bass	Adjust the level of the lower-pitched sounds.
Treble	Adjust the level of the higher-pitched sounds.
Starup Volume	Default volume upon turning on TV. (Requires Password - 2022)
Volume Limit	Set TV's maximum volume limit. (Requires Password - 2022)

NUMBER	DESCRIPTION
1	Ouput for Right Speaker
2	Output for Left Speaker
3	Line Out
4	IR Out
5	IR In
6	RS-232 Port
7	HDMI 2 Video & Audio in (HDC)
8	HDMI 1 CEC Video & Audio In (HDCP)
9	USB
10	Power Plug (IEC320 C13)





INTEGRATION GUIDE

for Genesis 2™ Residential TV

INTEGRATION INSTRUCTIONS

The Genesis 2™ TV is a display designed for easy integration with a cable box or streaming media device. The television does not include a tuner for broadcast TV. However, an external RF tuner may be purchased separately. See below for details on how to integrate your source with the Genesis 2™ TV.

CABLE TV SET-TOP BOX

To integrate the Genesis 2™ TV with a cable box requires a programmable RF remote control from the provider.

- For Xfinity, program the remote control with LG code #12731.
- For Dish, visit: <https://my.dish.com/support/products/remotes/how-to/program-to-tvother>, select your remote control, then choose LG for the TV to receive the code.
- For other providers, look up the LG code on the provider's website and program the remote accordingly.

APPLE TV

Connect an Apple TV to the Genesis 2™ TV with an HDMI cable. Plug the cable into the HDMI 1 (CEC) port on the Genesis 2™ TV. You will need to teach the Apple TV the volume and mute commands from the Electric Mirror remote control. On the Apple TV, go to: Settings > Remote and Devices > Volume Control > Learn New Devices.

ROKU

Connect a Roku device to the Genesis 2™ TV with an HDMI cable. Plug the cable into the HDMI 1 (CEC) port on the Genesis 2™ TV. Use the Roku remote control for menu navigation and the Electric Mirror remote control for volume. To turn the TV off, use the voice command "turn off". You may also scroll to the power off icon in the Roku Menu.

AMAZON FIRE TV

Insert the Fire Stick into the HDMI 1 (CEC) port on the Genesis 2 TV. Use the Fire TV remote control for all functions. To turn the TV on, use the home button. To turn the TV off, use the voice command "turn off".

