

SAFETY INFORMATION

Released Date: 2021-03-18

Please read and understand this entire manual before attempting to assemble, install or operate the product.


WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.

TOOLS REQUIRED

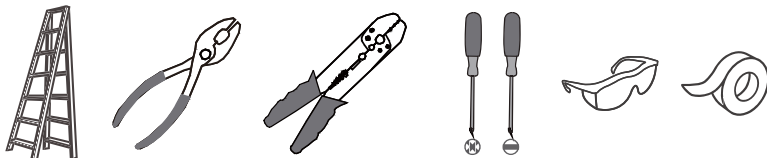


Ratings	120Vac, 60Hz	
	Model No.	Wattage
	PCKR336EK	36W

CARE AND MAINTENANCE

- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quoizel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quoizel.com.

PACKAGE CONTENTS

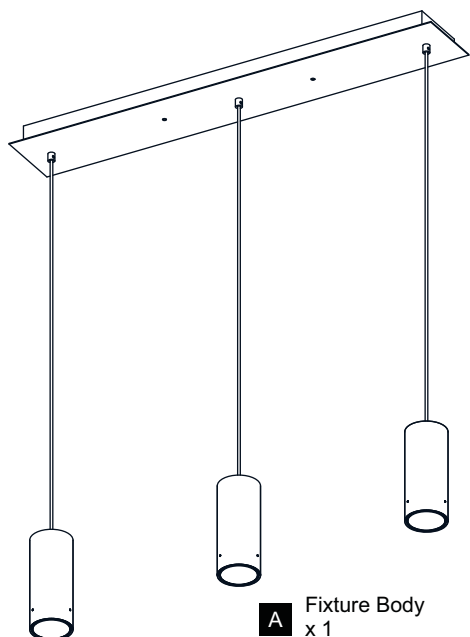


B Lock Rod
x 9



C Lock Screw
x 9




D Diffuser
x 3

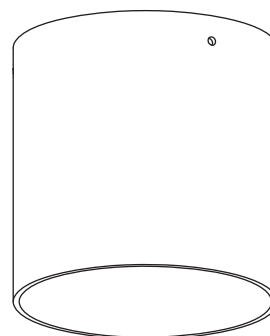

E Glass Shade
x 3

A Fixture Body
x 1

MOUNTING HARDWARE

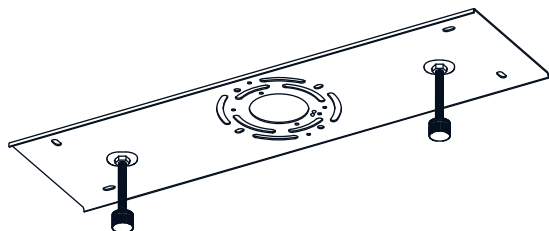


AA Crossbar Assembly
x 1



BB Wall Anchor
x 4



 CC Washer
x 4



DD Screw
x 4




EE Wire Connector
x 3




FF Outlet Box Screw
x 2

1 Adjust Cord Length: Fixture Height Adjustable 15" to 111"


Unlock set screw on the cord relief and slide the safety clip to adjust the cord length according to desired hanging height. Always tighten the set screw after adjustment.

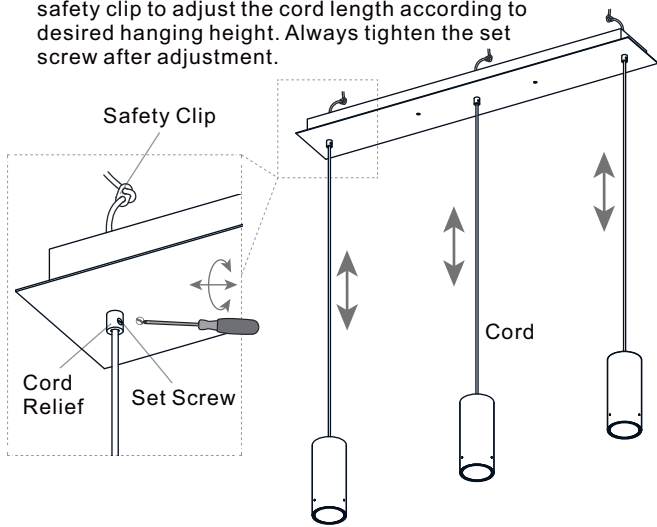


2 Install Crossbar Assembly

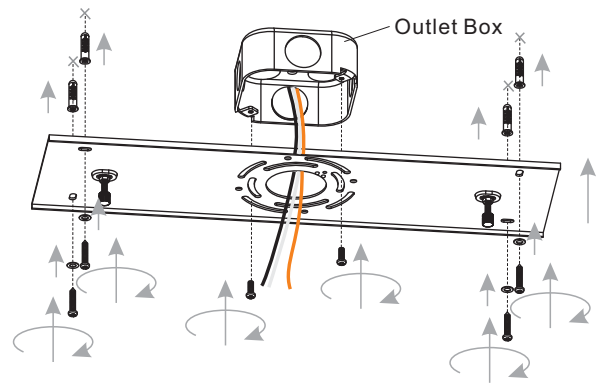


3 Install Lanyards

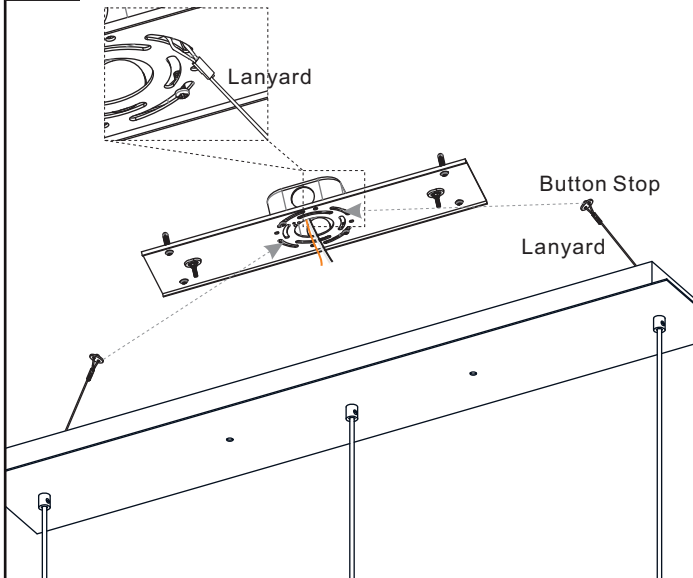


4 Wiring

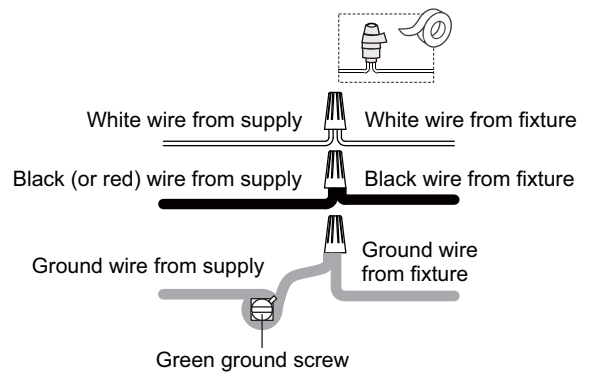


5 Install Ceiling Canopy

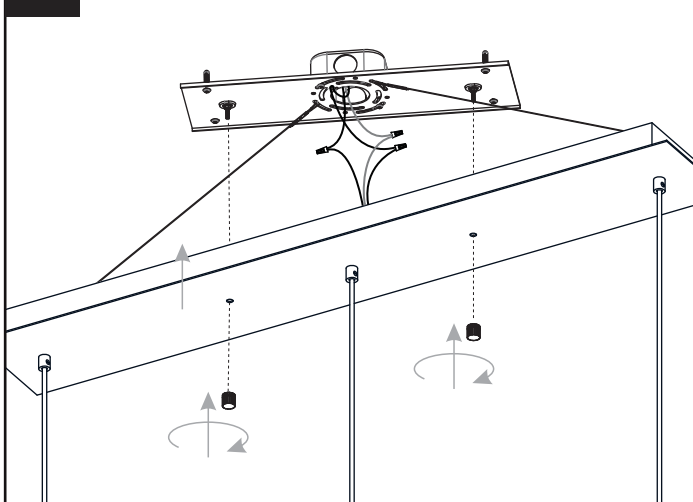

6 Install Diffuser

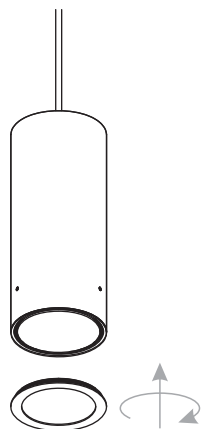

7 Install Glass Shade

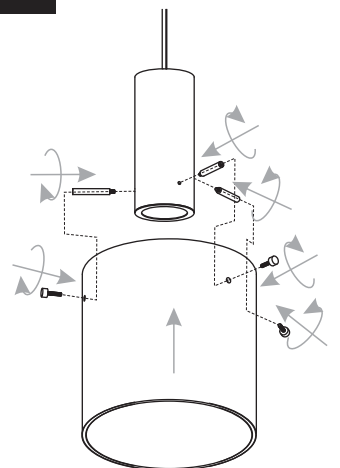

Your installation is now complete! Restore electricity and save this sheet for future reference.