


Tools Required

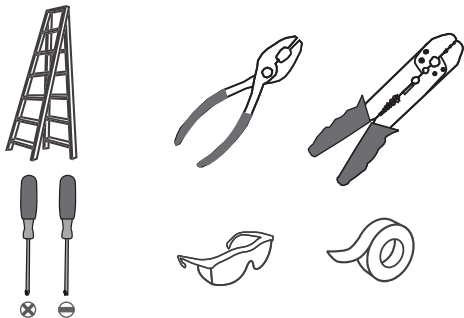

Light Source

40W
MAX



**BULB SHAPE
TYPE G9 XENON**

**6 BULBS REQUIRED
BULBS NOT INCLUDED**

**Fixture Height Adjustable
15" to 97"**

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

 
Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG



A Inner Backplate
x 1

B Lock Screw
x 2


E Screw
x 3

C Wall Anchor
x 3

F Outlet Box Screw
x 2

D Flat Washer
x 3

G Wire Connector
x 3

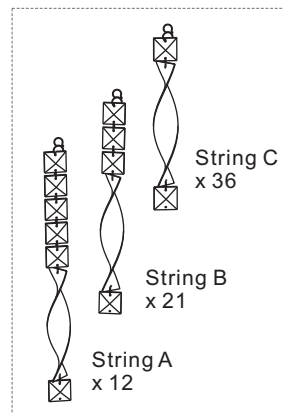


H String



I Allen Wrench
x 1



J Bulb
x 6

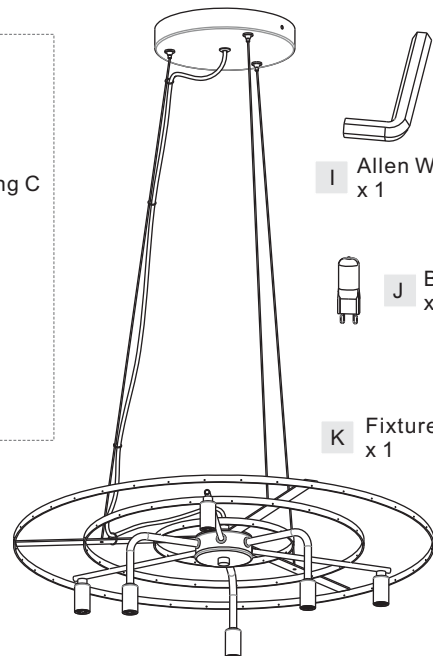

K Fixture Body
x 1


Table of Contents

| Adjust Cord Length | Inner Backplate | Wiring | Ceiling Canopy | Bulb | Strings |
|-----------------------|-----------------|---------------|----------------|---------------|---------------|
| | | | | | |
| STEP 1 | STEP 2 | STEP 3 | STEP 4 | STEP 5 | STEP 6 |

STEP 1

1


Loosen screws on cable clamp and cord clamps

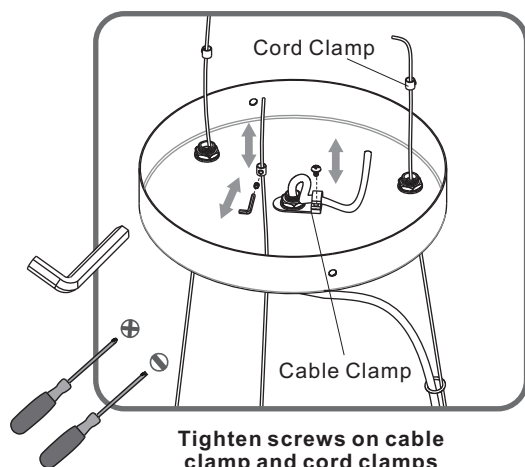

Tighten screws on cable clamp and cord clamps

2

Adjust cord and cable length

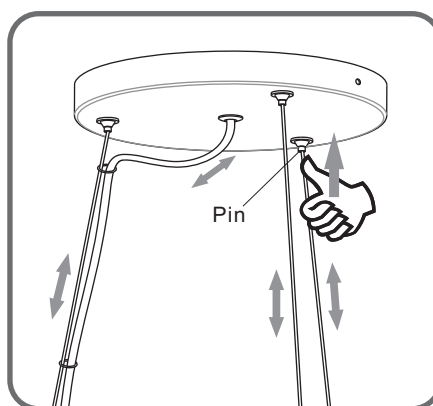


3

STEP 2


1

Fit inner backplate to outlet box

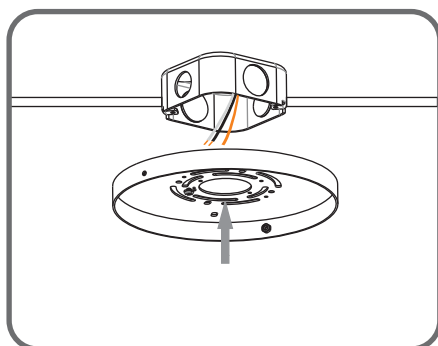




2

Mark anchor holes location on the ceiling

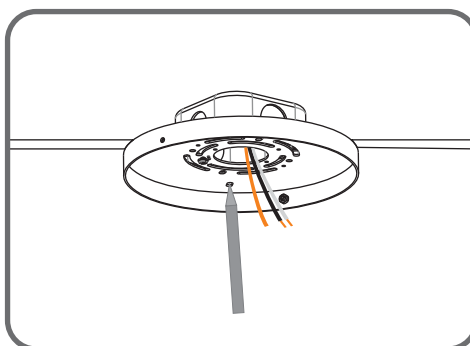


3

Drill holes for anchors from marks

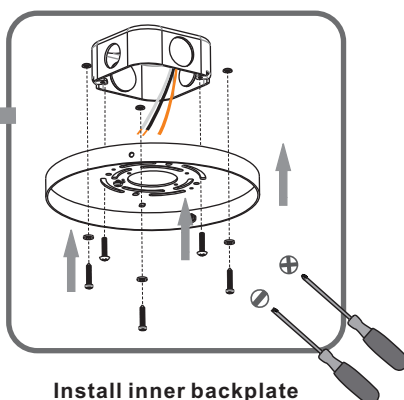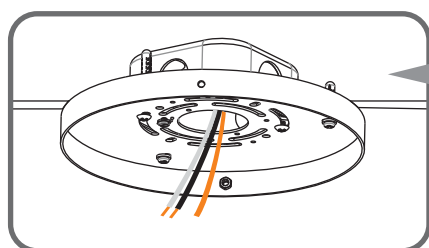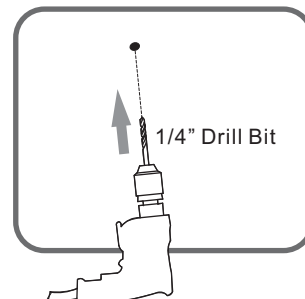

Install inner backplate

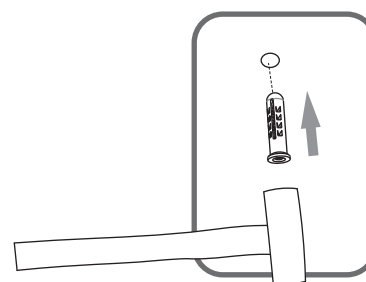


Install wall anchors


5

4


STEP 3

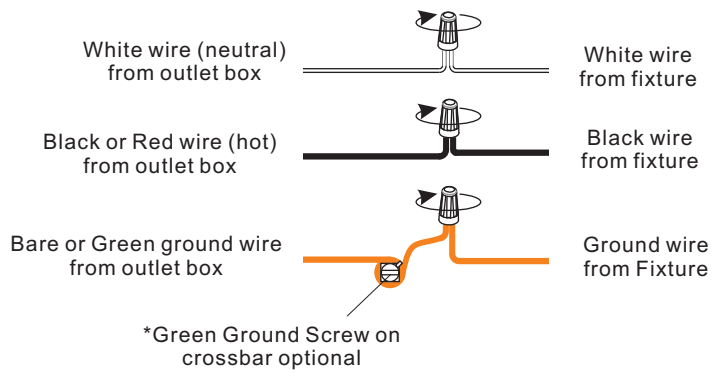

STEP 4

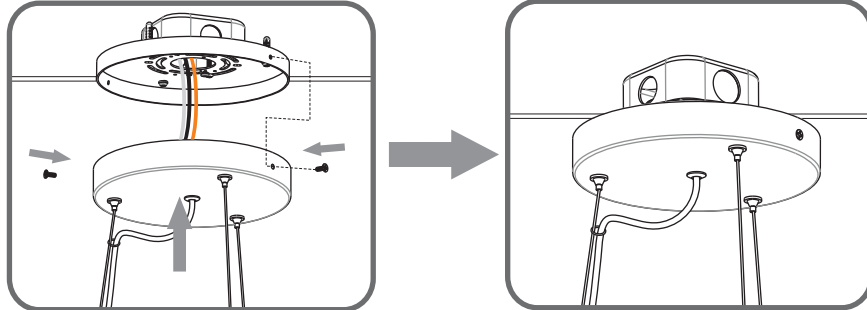

STEP 5

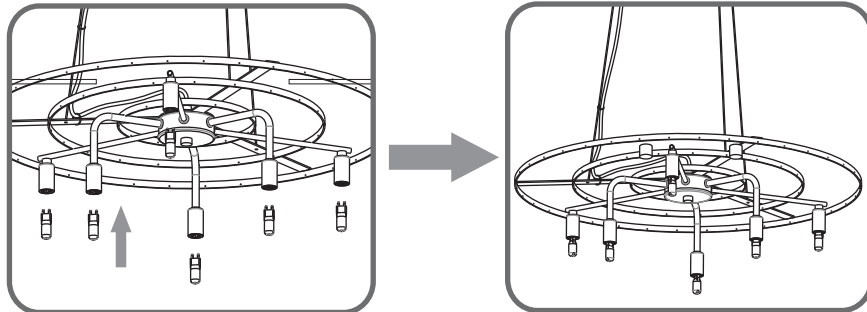

STEP 6

