Verso Surface Mount Assembly Guide



Thank you for choosing In Common With. Please confirm that you received all of the components pictured in this guide, and reach out to us if anything is missing. It's rare, but it happens. We hope you enjoy your fixture. With proper care, it should last a lifetime.

Have questions? Please contact us at support@incommonwith.com.



CAUTION!

Electrical shock risk. Turn off electrical power at the main fuse box or circuit panel before beginning installation, servicing the light, or installing accessories. We recommend working with a qualified electrician familiar with the type of work you'd like done.

ATTENTION!

Risque de choc électrique. Coupez l'alimentation électrique au niveau de la boîte à fusibles principale ou du panneau de circuits avant de commencer l'installation, l'entretien de la lumière ou l'installation d'accessoires. Nous vous recommandons de travailler avec un électricien qualifié familier avec le type de travail que vous souhaitez effectuer.

Verso Surface Mount, Small Components







Before beginning installation, turn off electrical power at the main fuse box or circuit panel.

If junction box cover is necessary for installation, use Philips head screwdriver to mount junction box cover over junction box.

If cover is not necessary, continue to step 3.



Mount the backplate to the junction box or junction box cover using a Phillips head screwdriver to tighten the mounting screws.

Use the wago clips to connect the fixtures wires to the corresponding wires from the junction box in the wall. White is neutral; Black is live; Green/Yellow is ground. One ground wire will be from the canopy backplate, and the other ground wire(s) should come from the junction box. If you are using 0-10V dimming connect the pink and purple wires to the dimming system. If you are using TRIAC or ELV dimming, simply cap the wago on the ends of the purple and pink wire. If needed, use a wire stripper to remove 3/8" insulation from each wire before inserting them into the corresponding wago clip.

Align the holes of the assembly with holes on the backplate. Secure canopy screws with the screwdriver found in the hardware pack.



Align the holes of the assembly caps with the holes on the backplate. Secure countersunk screws with the screwdriver found in the hardware pack.

Carefully align the holes of the glass shade with holes on either side of the assembly. Thread embellishment screws (four for small, six for medium) through the holes. Tighten in place and adjust the embellishment so that it is in the shape of a square.



Turn the power back on at the main fuse box or circuit panel you disabled before installation. Turn on the light :)

Verso Surface Mount, Small, Plug-in Components



Verso Surface Mount, Medium, Plug-in Components





Mount the Backplate to the wall using anchors appropriate for your wall material (not provided). Consult a qualified professional if needed.



Use the wago clips to connect the fixtures wires to the corresponding wires from the plug-in cord. White is neutral; Black is live; Green/Yellow is ground. One ground wire will be from the canopy backplate, and the other ground wire comes from the plug-in cord. If you are using 0-10V dimming connect the pink and purple wires to the dimming system. If you are using TRIAC or ELV dimming, simply cap the wago on the ends of the purple and pink wire. If needed, use a wire stripper to remove 3/8" insulation from each wire before inserting them into the corresponding wago clip.



Align the holes of the backplate with the holes of the assembly. Secure assembly in place with the canopy screws and screwdriver found in the hardware pack.

Align the holes of the assembly caps with the holes on the backplate. Secure assembly caps with the countersunk screws and the screwdriver found in the hardware pack. Make sure the cord is safely in the mouse hole while tightening the cap.



Carefully align the holes of the glass shade with holes on either side of the assembly. Thread embellishment screws (four for small, six for medium) through the holes. Tighten in place and adjust the embellishment so that it is in the shape of a square.

Plug in the cord.



Turn on and dim the light as desired using the inline dimmer located at the middle of the cord.

Verso Surface Mount, Small, Plug-in, Corner Assembly Components



Verso Surface Mount, Medium, Plug-in, Corner Assembly Components





Mount the corner bracket to the wall using anchors appropriate for your wall material (not provided). Consult a qualified professional if needed.

Mount the backplate to the corner bracket using a Phillips head screwdriver to tighten the mounting screws.



Use the wago clips to connect the fixtures wires to the corresponding wires from the plug-in cord. White is neutral; Black is live; Green/Yellow is ground. One ground wire will be from the canopy backplate, and the other ground wire comes from the plug-in cord. If you are using 0-10V dimming connect the pink and purple wires to the dimming system. If you are using TRIAC or ELV dimming, simply cap the wago on the ends of the purple and pink wire. If needed, use a wire stripper to remove 3/8" insulation from each wire before inserting them into the corresponding wago clip.



Align the holes of the backplate with the holes of the assembly. Secure assembly in place with the canopy screws and screwdriver found in the hardware pack.



Align the holes of the assembly caps with the holes on the backplate. Secure assembly caps with the countersunk screws and the screwdriver found in the hardware pack. Make sure the cord is safely in the mouse hole while tightening the cap.

Carefully align the holes of the glass shade with holes on either side of the assembly. Thread embellishment screws (four for small, six for medium) through the holes. Tighten in place and adjust the embellishment so that it is in the shape of a square.



Plug in the cord.

Turn on and dim the light as desired using the inline dimmer located at the middle of the cord.

Care Instructions

Never use scouring pads or abrasive cleaning solutions. If it comes in a bottle, it is bad for your fixture. Instead, we recommend using soft microfiber cloths, which are gentler on our products and the planet.

For Metal: Wipe with a damp or dry microfiber cloth. Please note that our brass is unlaquered, and will darken naturally over time.

For Glass: Wipe clear or colored glass with a damp microfiber cloth. For sandblasted or etched glass, use a dry microfiber cloth. Removable glass shades can be washed carefully in a sink using warm or hot water.

For Ceramic: Wipe with a damp microfiber cloth. Do not submerge in water.