

INSTALLATION INSTRUCTION

PATH LIGHT

WAC

LC-253305 / LC-253401 / LC-253507

SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Place the wall switch in the "OFF" position.
- Go to the main fuse box, or circuit breaker. Unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the space that you are working on.

WARNING: Risk of electric shock. Install all luminaires 10 feet (3.05 m) or more from a pool, spa, or fountain.

CAUTION:

All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the UL listing of this fixture.

AVERTISSEMENT

IMPORTANT : COUPEZ L'ÉLECTRICITÉ AVANT TOUTE MANIPULATION.


- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Placez l'interrupteur mural en position d'arrêt (« OFF »).
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).

MISE EN GARDE


Toutes les pièces doivent être utilisées tel qu'il est indiqué dans ces instructions. Ne remplacez pas les pièces, n'en laissez pas de côté et ne les utilisez pas si elles sont usées ou brisées. Le non-respect de ces instructions peut annuler l'homologation UL du luminaire.

**Note: Transformer is required to power the fixture. (sold separately)*


THIS INSTRUCTIONS APPLY TO THE MODELS BELOW:

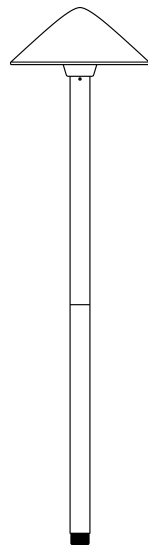

LC-253507

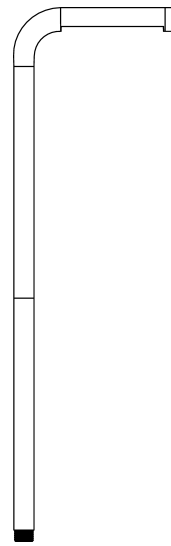


LC-253401

 

LC-253305

 Mounting Accessories (included in box)




Mounting Stake
Qty: 1pc



Outdoor Rated Wire Nut
Qty: 2pcs



 Hex Screw
Qty: 2pc



Ball Ended Hex Key
Qty: 1pc

wacighting.com

Phone (800) 526.2588
Fax (800) 526.2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1750 S Archibald Ave
Ontario, CA 91761

INSTALLATION INSTRUCTION

PATH LIGHT

LC-253305 / LC-253401 / LC-253507

WAC

Step 1: Assemble the fixture

1. Assemble two poles and light head together, as shown in fig.1.
2. Secure the light head on the pole using Hex screws via Ball Ended Hex Key.
3. Screw the fixture onto the stake provided, leading the wire from the fixture through the wire slot in the stake.
4. If desired, bury your wire by digging a small trench. When finish burying the wires, close the trench.
5. Repeat steps for other fixtures in the same electrical circuit.

Step 2: Install the fixture

1. Gently drive the stake into the ground via the footplate at your chosen location as shown in fig.2..
2. In the case of hard soil, dig a hole and place the stake in so that the bottom of the stake flange is flush with the ground. Fill the rest of the hole with the removed soil and pack it tight to secure the stake.




Step 3: Wiring the Fixture

**Note: Transformer is required to power the fixture. (sold separately)*

1. Cut the power supply wire from the transformer at the location of the fixture as shown in fig.3.
2. Separate the power supply wire into two individual wires by lightly pulling on each side so that a couple inches is separated.
3. Strip off ½ inch of the insulating material from each wire and connect one to each of the wires from the fixture using the outdoor rated wire nuts provided.

Step 4: Select color temperature

1. Select the desire color temperature and install the cover of light engine or the plate of the color temperature switch as shown in fig.4.
2. Turn the main power supply back on.

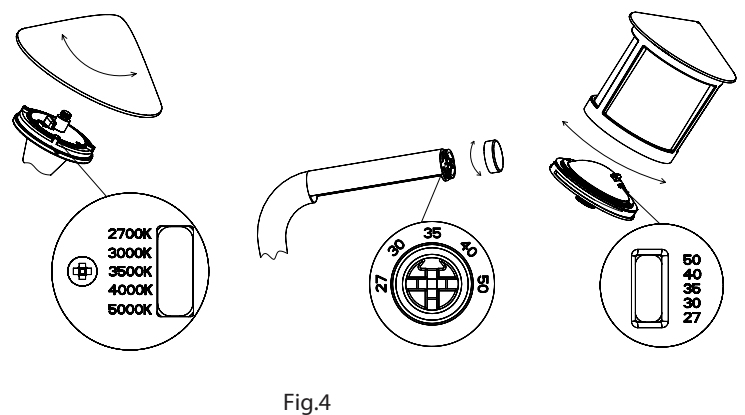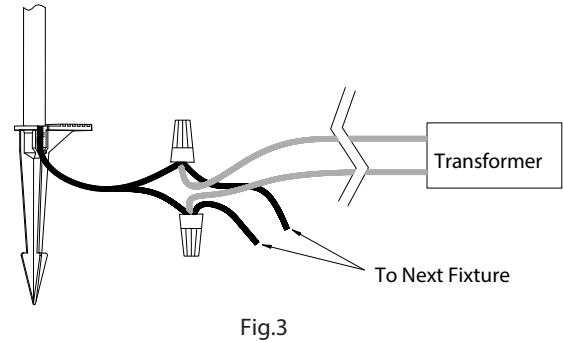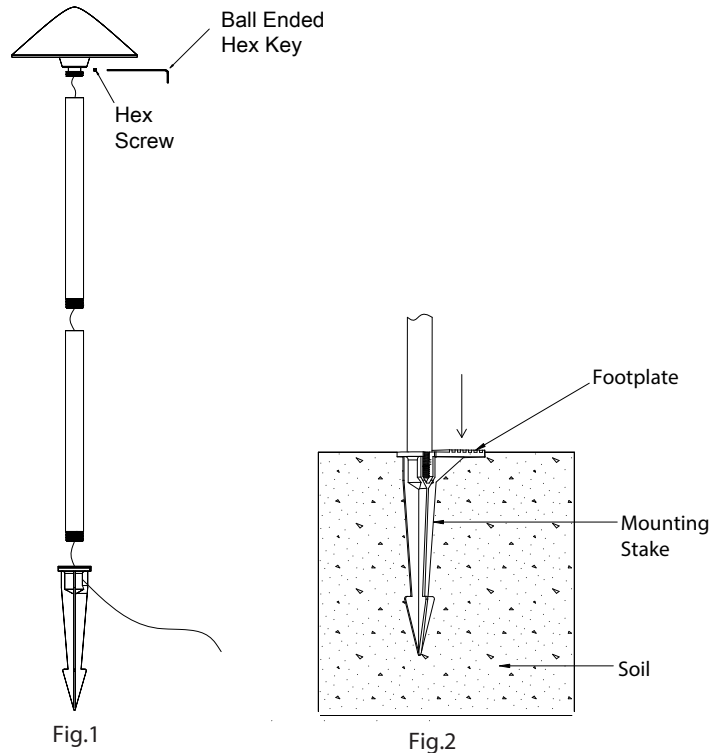

wacighting.com

Phone (800) 526.2588
Fax (800) 526.2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1750 S Archibald Ave
Ontario, CA 91761