

UTTERMOST

ASSEMBLY INSTRUCTIONS

21655

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed professional electrician for installation

Installation Steps

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Thread the Rod onto the coupling on Fixture body. Hand-tighten until snug.
4. Adjust the Chain & wire to the desired length remove links and extra wire as needed. Place the Canopy lock ring and the Canopy over the Chain. Connect the other end of the Chain to the Canopy chain loop with the remaining Quick Link.
5. Thread the Ground screw into the hole of the Crossbar. Secure the Crossbar assembly to the outlet box with the Outlet box screws.
6. Make Wire connections with Wire Connector:
 - The Smooth side of Wire from Fixture to Black Wire from power source.
 - The Ribbed side of Wire from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Crossbar with the green Ground screw.
7. Carefully tuck wires back into the Outlet Box.
8. Attach the Canopy over the Canopy chain loop.

Secure with Canopy lock ring.

9. Install the light bulb (Not Supplied) in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
10. Align the slots on the Shade to the studs on the cap on the fixture body and twist the Shade until it is secure.

