




1
Disconnect the power by turning off the circuit breaker, or by removing the fuse in the fuse box before assembling and mounting the canopy. Fix the mounting plate to the ceiling with the dowels and screws.

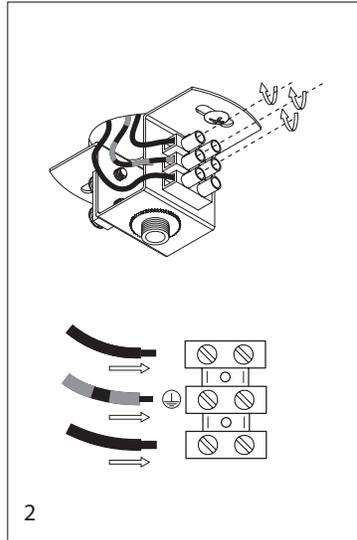


2
Connect the cable to the terminal block.

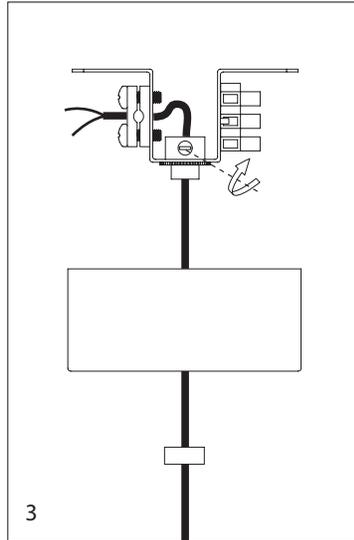


3
Fix the lamp cable with the fixing screw on the ceiling box. Take care to screw the screw gently but firmly.

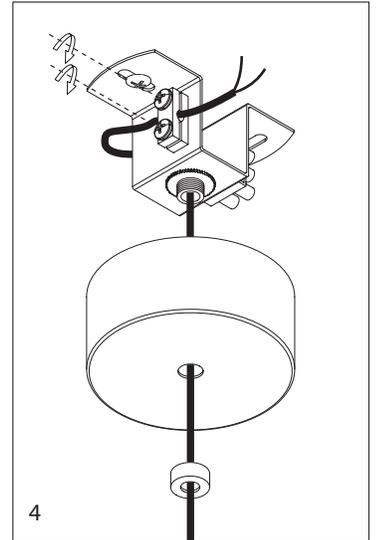

4
Fix the lamp cable with the fixing bracket on the ceiling box. Take care to screw the screw gently but firmly.

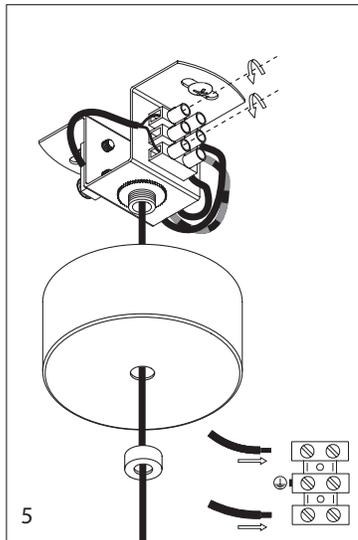


5
Connect the cable of the lamp to the terminal block.

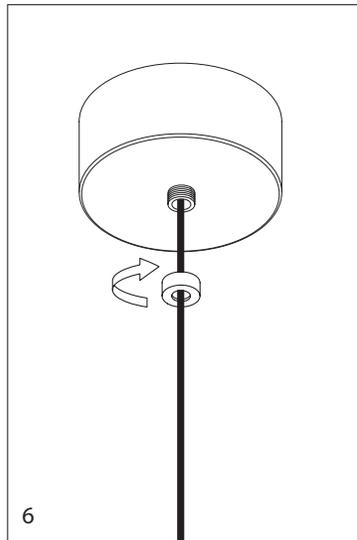

6
Fix the ceiling rose cover with the fixing nut.


Bulb change

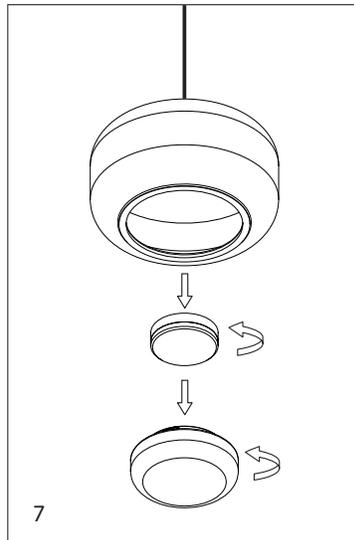

7
Spin off the inside white glass, then spin off the GX53 bulb.

Warning: Use LED only. Switch off the electricity. Use gloves while taking out the glass.

Lamp Position

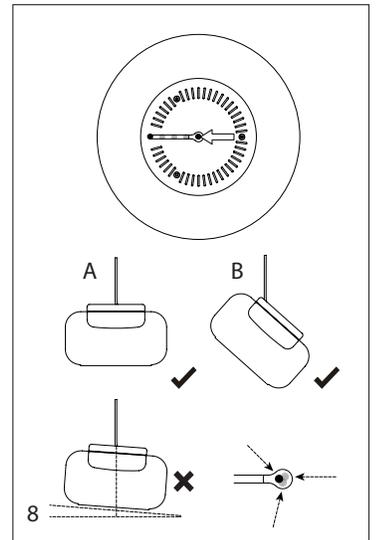

8
B Gently pull the cable through the rail to fix position and place into the opposite edge.

A Adjust the cable until the piece is centered.

safety instruction

Lamp suitable only for indoor use. The electrical connections must be carried out by specialized personnel. If this electrical wire or cord is damaged, it should be replaced exclusively by the manufacturer, its technical team or someone with an equivalent qualification in order to avoid any risk. The manufacturer is not responsible for improper use of the product.

product care

Powder coated metal
Dust gently with a duster or soft cloth. Do not use commercial cleaners. A clean soft damp rag may also be used.

Glass
Using a lightly damp cloth, clean the glasses

