

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO.: 30841

Carefully unpack all assembly parts from the carton.

1. Insert the bottom of the post into the threaded opening in the base. Carefully pull the power cord through the bottom of the base while rotating the post clockwise to tighten. Continue pulling the cord as needed to prevent it from twisting or becoming pinched during assembly.
2. Insert the harp into the socket saddle. Place the shade on the harp and secure it with the Uttermost disk and finial.
3. Install the appropriate bulb according to the fixture markings and/or labels for the maximum wattage. Bulb not included.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, the plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.

To clean wipe with a soft dry cloth.

