

INSTALLATION INSTRUCTION

457-Outdoor Wall Sconce

WS-W45714/WS-W45720/WS-W45726/WS-W45714F/WS-W45720F/WS-W45726F

dweLED

CAUTION: TO PREVENT ELECTRICAL SHOCK, ENSURE ELECTRICITY HAS BEEN TURNED OFF AT THE CIRCUIT BREAKER BEFORE BEGINNING.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by dweLED. Substitution of parts or accessories not designated for use with this product by dweLED could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licencié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits dweLED. Remplacer des pièces ou accessoires non conçus pour ce produit dweLED pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidus sur le luminaire. Nous recommandons aux clients qui résident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

HARDWARE

A



Assembly Screw
Qty: 1pcs
1/8-40x5/16 SS

B



Wire Connector
Qty: 3pcs+1 Extra

C



Gasket
Qty: 1 Extra

D



Mounting Screw
Qty: 1 Extra
5/32-32x1/2 SS
Black

E



Plastic Anchor
Qty: 2pcs+1 Extra
Ø7.5x24

F



Wood Screw
Qty: 2pcs+1 Extra
Ø4x22

dweLED.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive
Port Washington, NY 11050

Central Distribution Center
1600 Distribution Ct
Lithia Springs, GA 30122

Western Distribution Center
1750 Archibald Ave
Ontario, CA 91761



INSTALLATION INSTRUCTION

457-Outdoor Wall Sconce

WS-W45714/WS-W45720/WS-W45726/WS-W45714F/WS-W45720F/WS-W45726F

dweLED

Fig.1

 
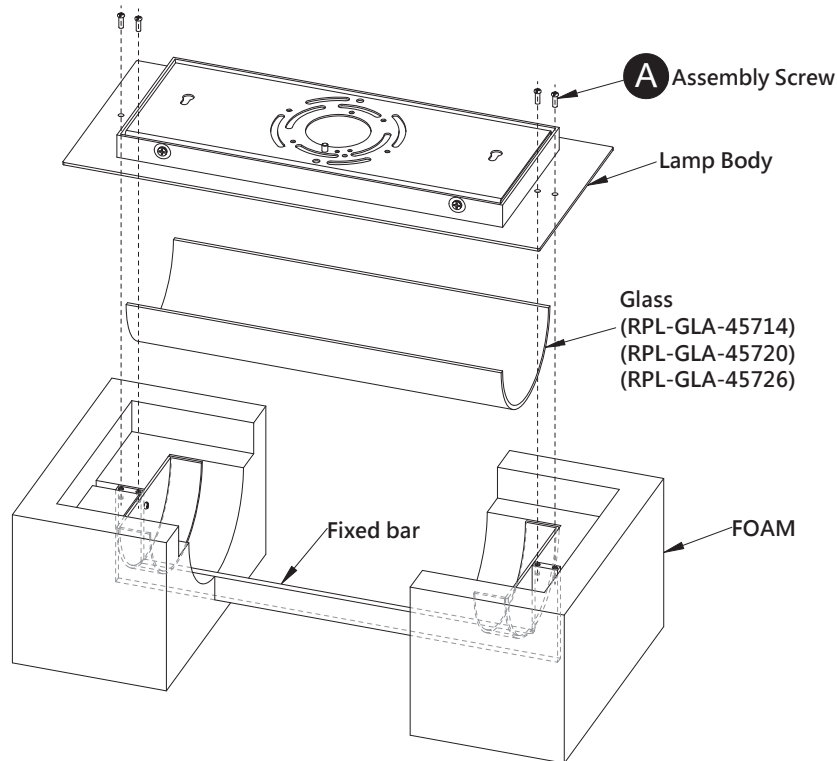 


Fig.2

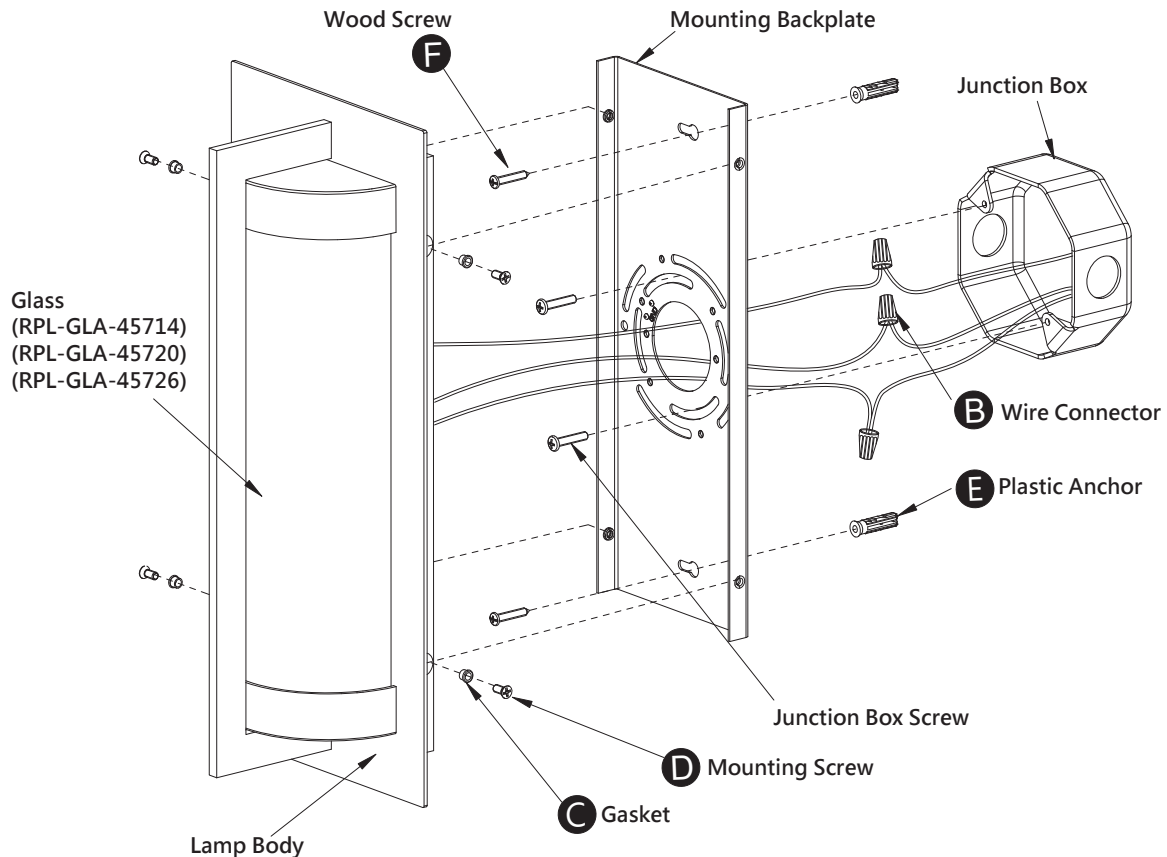

dweLED.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive
Port Washington, NY 11050

Central Distribution Center
1600 Distribution Ct
Lithia Springs, GA 30122

Western Distribution Center
1750 Archibald Ave
Ontario, CA 91761

 


INSTALLATION INSTRUCTION

457-Outdoor Wall Sconce

WS-W45714/WS-W45720/WS-W45726/WS-W45714F/WS-W45720F/WS-W45726F

dweLED

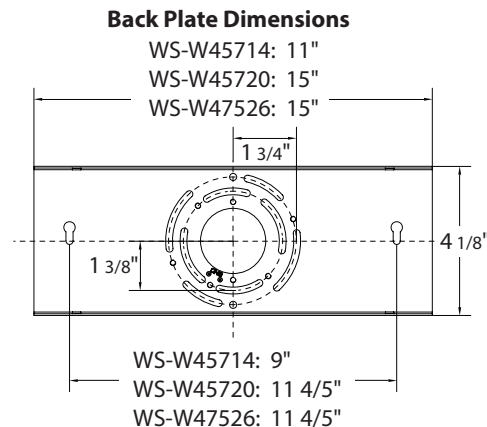

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture .

ASSEMBLY THE GLASS SHADE (Fig. 1)

3. Take out the glass shade, leave the fixture in the box for easy installation.
4. Remove the assembly screw (A) and lamp body from the fixture, carefully put the glass onto the fixed bar which fixed by foam, fasten the glass between the fixed bar and lamp body using the assembly screw(A).

MOUNTING THE FIXTURE (Fig. 2)

5. Take out the whole fixture from the box, remove the mounting screw (D) and gasket (C) from the fixture.
6. Drill holes in the wall aligned with the key holes located on the back plate, insert the plastic anchor (E).
7. Secure the mounting back plate to the junction box using standard junction box screws that comes with the junction box. Fasten the back plate to the wall with the plastic anchors(E) using the wood screws(F) provided.

Note: (i) Using any other non-original-manufacturer provided junction box screw may result in safety issue;
(ii) The side of the mounting plate marked "GND" must face out .

CONNECTING THE WIRES (Fig. 3)

8. Connect the fixture's input wires to junction box wires as shown (Fig. 3). Make sure that all wire connectors (B) are secure. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the junction box.

COMPLETING THE INSTALLATION

9. Secure the fixture to the mounting back plate using the mounting screw (D) and the rubber gasket (C).
10. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. indoor/outdoor silicone sealant) to outline the outside of fixture back plate where it meets the wall. Leave a space at the bottom to allow moisture to escape (Fig.4).

Fig. 3 Wiring

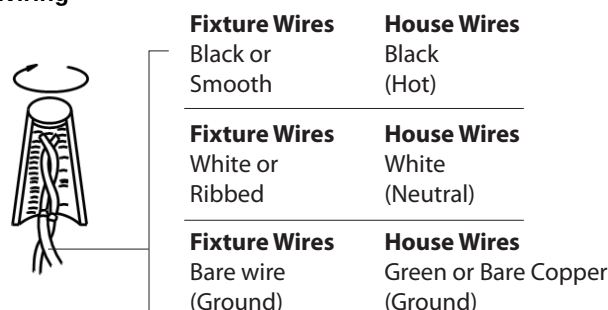 


Fig. 4 Sealing

