

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

### CAREFULLY UNPACK ALL PARTS FROM THE CARTON

1. Place Harp onto Saddle, and place Uttermost Disk onto the Harp.
2. Place Shade onto Uttermost Disk, then fasten Finial onto Harp to secure Shade
3. Install the correct Bulb (Included) referring to fixture markings.

**The included remote control is required to operate the lamp.**

**Before using the Rechargeable LED Bulb, check that the battery is fully charged. If the light is dim, fully charge the Rechargeable LED Bulb.**

**During charging, the indicator will turn red. It will turn green after fully charged.**

