

# Installation Instructions For Aurora Dual MR16 Round & Square Edge 3.3"

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.purelighting.com Info@purelighting.com

### General Information

Fixture must be installed by a qualified electrician (check with local and national codes for proper installation). To prevent electrical shock, disconnect electrical supply before installation or servicing. Compatible only with traditional, level 5 surface finishing, not self-leveling, PVA primer systems. Not for use in wood or tile cellings.

# **WORKFLOW CHART** ELECTRICAL CONTRACTOR 1. Locate and mount housing

- 2. Screw and lock-in housing 3. Connect wires un housing
- 3. Connect wires un nousing

## DRYWALL CONTRACTOR

 Install and cut drywall around housing.

## ELECTRICAL CONTRACTOR

- 1. Adjust plaster flange frame
- and tighten wing nuts.
- 2. Connect the MR16 and LEDS
- wiring to the plaster plate.
- 3. Screw plaster plate into housing.
- 4. Test MR16 and LEDs.

# DRYWALL CONTRACTOR

- 1. Plaster, sand & paint.
- 2. Clean aperture with
  - clean damp towel.

# ELECTRICAL CONTRACTOR

 Clean aperture with clean damp towel, where the drywall contractor missed.
Adjust pan rotation ring and aim lamp. You're done!



### Important

Scan with your mobile device to watch the installation video or visit www.purelighting.com/auror a-install

#### Importante Escanear con el dispositivo móvil para ver el video de instalación o visite www.purelighting.com/auror a-install







e.

## DRYWALL CONTRACTOR

















# ) ELECTRICAL CONTRACTOR









# ) ELECTRICAL CONTRACTOR

