

Operational Guide for **Controller Dial with Power Supply**

Selecting Modes

Configure your CDP by setting the DIP switches on the front:



COLOR MODE




CHASE MODE


NOTE: The DIP switches must remain accessible after installation. When making changes in the DIP switch settings, disconnect and reconnect the power supply to activate new settings.

Operating CDP


1- Turn the light on

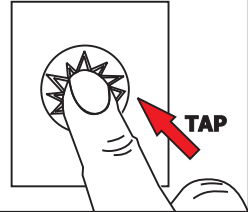

2- Change brightness

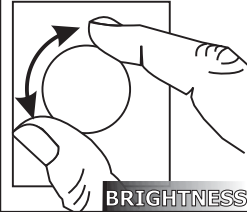


3- Turn the light off

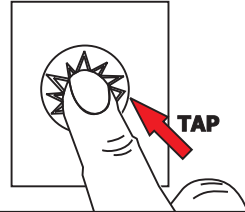


Advanced Operation for Color Mode


1- Turn the light on

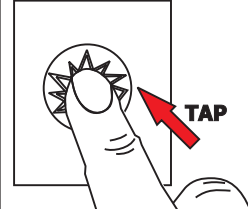


2- Activate configuration mode

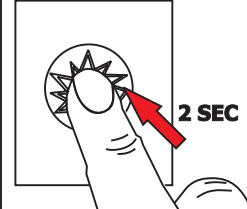

3- Set Color

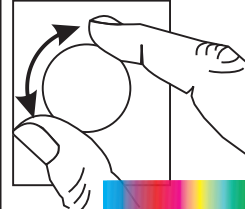


4- Save color saving

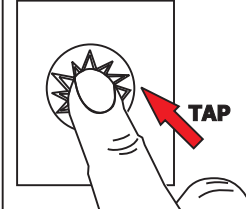


Advanced Operation for Chase Mode


1- Turn the light on

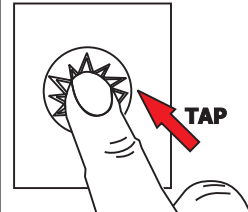


2- Activate configuration mode

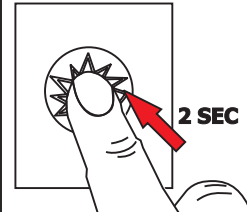

3- Set show speed

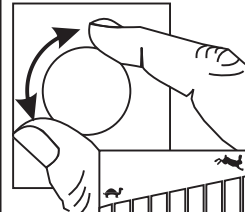


4- Save color setting

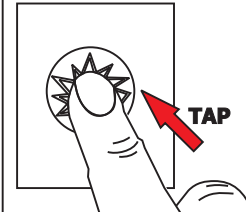


Advanced Operation for RGBW


1- Turn the light on

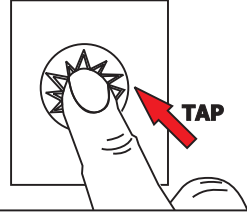


2- Activate configuration mode

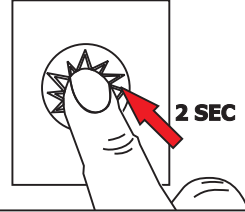


3- Set Color

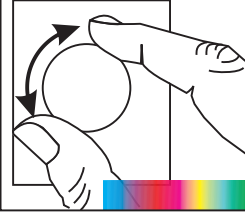


4- Activate White

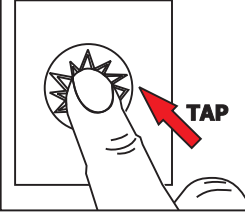

5- Set White

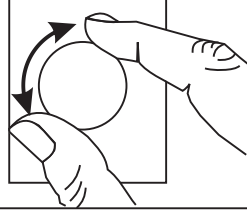

6- Save settings

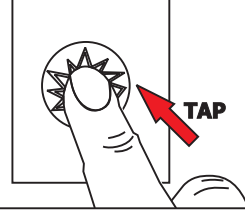

7- Dim

