

1718 W. Fullerton Chicago, IL 60614 Ph: 773.770.1195 • Fax: 773.935.5613 www.PureEdgeLighting.com • info@PureEdgeLighting.com © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for Angle and Kurve Display Sign with Feed-Through Power Stem

 
AD-7WDC-FTP-_

KD-7WDC-FTP-_


IMPORTANT INFORMATION


- This instruction shows a typical new construction installation.
- This product is powered with a 24VDC power supply such as PSB-96W-010-24VDC.

SAVE THESE INSTRUCTIONS!




Section One: Resize the Stem (Optional)

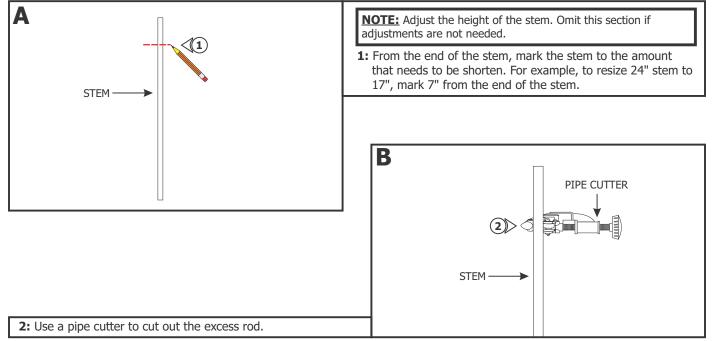

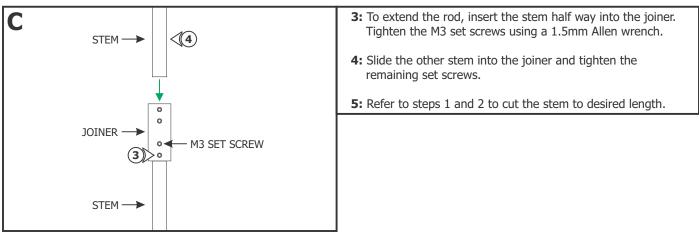



Section Two: Install the Fixture


D (1) MEASURE — HINGE — R	 NOTE: Depending on fixture length, the fixture is provided with 2 to 4 hinges. 1: Measure the distance from center of each hinge to the other hinge. Typically, the most left hinge contains the power wires.
CHANNEL HINGE OF OUR CHANNEL OF OUR O	E MEASUREMENTS FROM STEP 1 MARK MARK

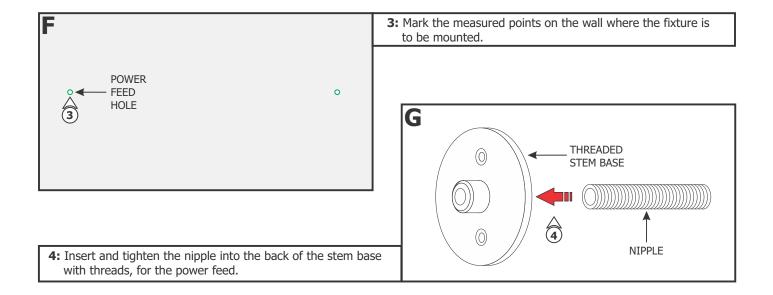

ANCHOR FOR6	NOTE: The base holes should be in a vertical position at 90° angle to the direction of the fixture.
	5: Mark additional points at 0.6" to the top & bottom of the drilled and marked points.
APART MARKED 0.6" APART	6: Use a hammer to tap in the anchors on the (new) marked points up to the threaded portion.
	7: Screw in the threaded portion of the anchors with a Phillips screwdriver.
WALL SIDE VIEW	

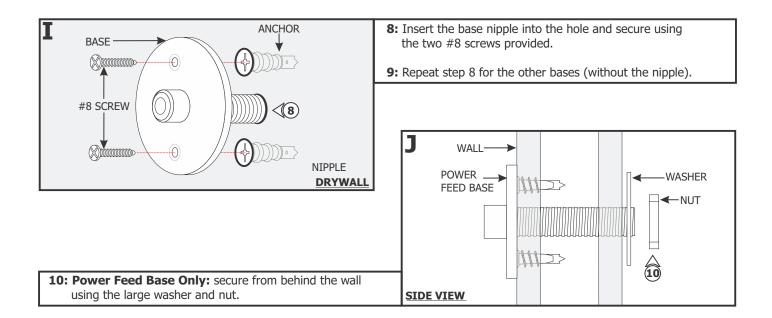

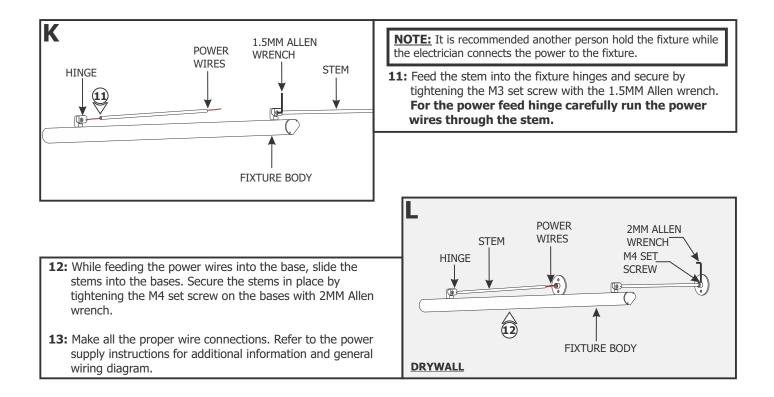

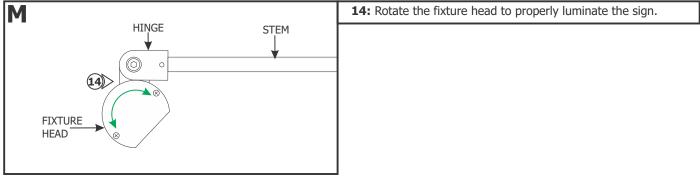

General Wiring Diagram

