



Installation Instructions For <u>Down Light Gear Cover (AGG)</u>


1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.purelighting.com info@purelighting.com

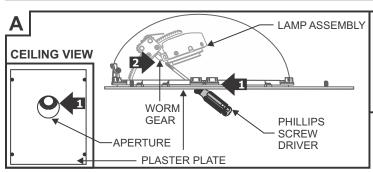


- 1: Insert a Phillips screw driver into the plaster plate aperture <u>carefully</u>.
- 2: Tighten the worm gear by rotating the Phillips screw driver clockwise to position the lamp assembly to the desired position.

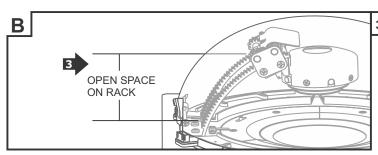


3: Measure the distance of open space on the rack.

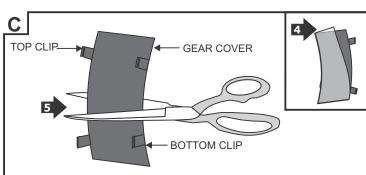

- 4: Remove the protective film from the gear cover.
- 5: Cut the gear cover to fit the space if necessary.

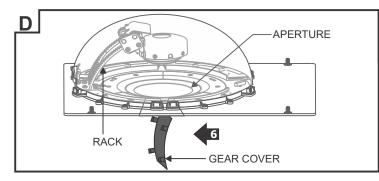

6: Insert the gear cover (make sure the gear cover clips are facing the lamp assembly rack) from the bottom of the aperture.

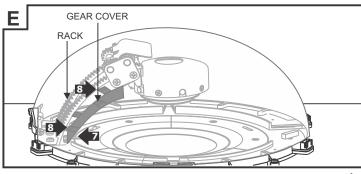

- 7: Position the gear cover edge to the bottom edge of the
- **8:** Secure by snapping in the two bottom clips of the gear cover first to the bottom edge, then snap in the top two clips to the top edge.