

Maintenance and spare parts

mammalampa will happily answer all questions regarding the assembly and use of the lighting objects, when writing to support@mammalampa.com

The design elements of lighting object that are not part of the standard equipment, as well as spare parts can be purchased for an additional fee, by writing to support@mammalampa.com

In order for the lighting object to maintain its original look, we recommend:


Cleaning the shade on a regular basis with a microfibre (only outside) or strong airflow.

Not placing the lighting object in rooms where air humidity exceeds 60 %, and the temperature is below + 50°F, to prevent its shade changing from its original shape.

Don't touch the lighting object's lampshade with your fingers. Always use gloves to avoid residual fingerprint marks!

The shade of the lamp is hand-made and the outer look of each lighting object is unique and individual, which is an advantage of the product.

Please keep the User manual during whole period of use of the lighting object!

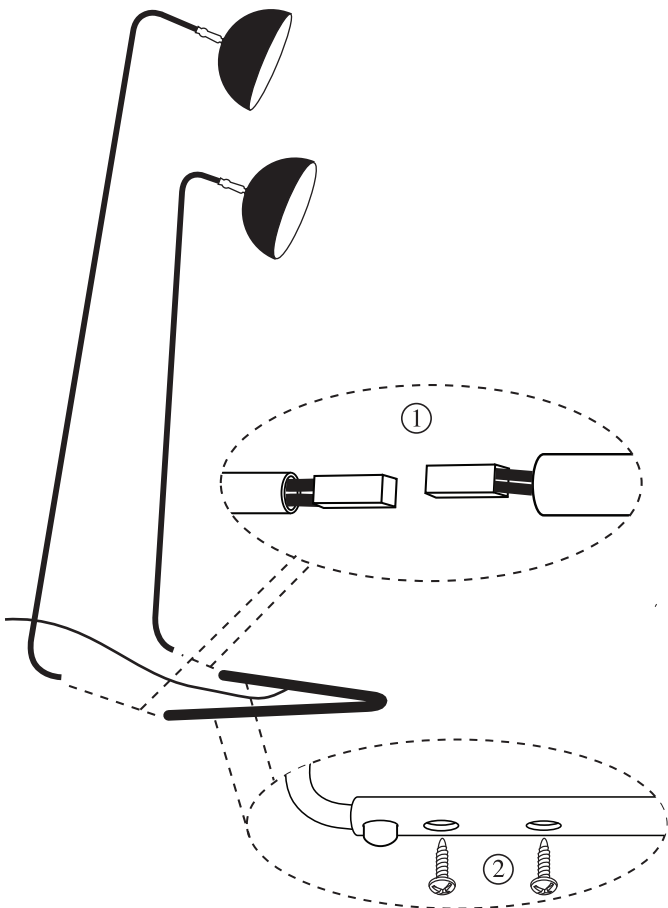

„mammalampa”

the queen medium floor double

assembly & user manual

the queen

floor lamp

product code — que m f d

Technical information

voltage — 120 V ~ 60 Hz

light-bulb type 2 x max 30W LED

light-bulb socket — E12


material — rusted steel & golden plates (23.75 carat)

environment — indoor

handmade in EU

“mammalampa” is trademark of “mammastudio” Ltd. registered in Latvia / EU

copyright © mammalampa 2026

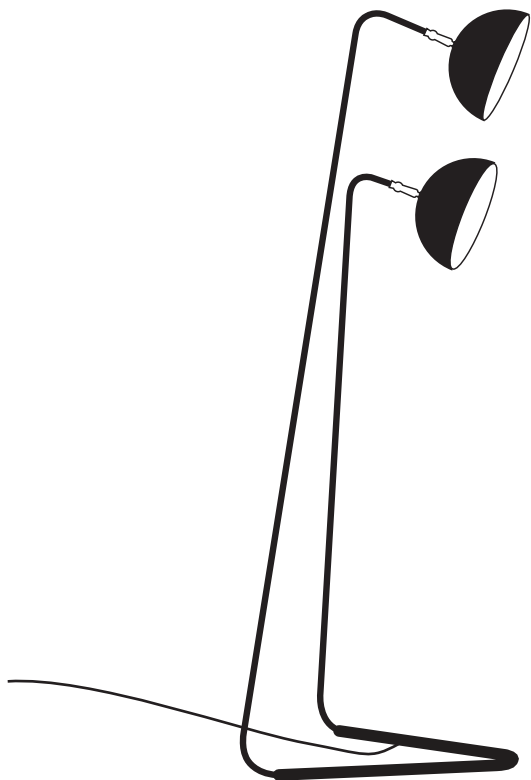

General warnings about indoor lighting objects



This symbol shows that the lighting object is suitable for placing on a flammable surface. Luminous objects that do not bear such a symbol are suitable for placing only on fireproof surfaces.



This symbol shows the minimum distance from lighting objects, lamps that may heat up other luminous objects, or from a wall.



This symbol shows that the lighting object is equipment of the II class (defence tools against electric shock).

The manufacturer does not accept liability for damage or injuries that are result of ill-judged activities.

Enclosed

Lighting object for assembly, assembly and user manual.

The assembling of the lighting objects is carried out in
SIA Mammastudio / Latvia / EU

Assembly manual

Unpack the lighting object, place it on a clean surface and place the parts of the lighting object in the order that is shown in the technical diagram.

During assembling process grasp the lighting object only to both legs and base elements. Avoid to grasp lampshades of the lighting object (corroded and golden surfaces)

Shorter leg place in the same side where the power cord is located in the base.

Make sure to switch off the electrical power!

Connect the power connection elements ① of the lighting object as shown in the technical diagram.

Both "legs" of the lighting object should be fastened to the base element. Screw the "legs" in to the base element with the screws attached in the packaging. ②

Please make sure that cords and fastening elements are firmly connected and are not at risk of becoming disconnected!

Turn the lighting object in the right direction.

Screw the light bulb into the lighting object.

Switch on the electrical power contact.

Assembly

Power cords must be attached according to the technical diagram and the usage and assembly manual.

Connection to the electrical power network can be carried out by professional electricians only.

User manual

Before you start any work with the lighting object, switch off the power supply.

The lighting object can only be used indoors.

Only the lampshade can be cleaned. No humidity is permitted in the connection parts or power conducting parts.

The producer does not accept responsibility if the lighting object or its construction is dismantled and then re-assembled, or if its parts are changed and it is used afterwards.

Do not look directly at the light-bulb when it is switched on. It damages eyesight!

Keep away from open flames!

Use only light bulbs of the voltage and type that are given in the manual, because there is a risk of overheating and fire if the given parameters are exceeded