EMBER S6 Pendant | Installation Instructions

DO NOT CONNECT DRIVERS TO THE FIXTURES WHILE THE POWER IS ON. POWER TO THE DRIVERS MUST BE OFF WHEN CONNECTION TO THE FIXTURES IS MADE. PERMANENT DAMAGE MAY OCCUR IF CONNECTED WITH POWER ON.

DO NOT CONNECT FIXTURES DIRECTLY TO LINE VOLTAGE,

CAREFULLY UNPACK THE CONTENTS OF THE BOX AND PLACE FIXTURES ON NON-SCRATCHING SURFACE.

THE MIRROR POLISHED FINISH IS EXTREMELY DELICATE, USE SUPPLIED GLOVES AND REMOVE ALL HAND ACCESSORIES THAT COULD SCRATCH THE SURFACE

- 1. Unpack carefully on a soft non-scratch surface. Leave microfoam layer on pendant portion until the fixture is fully installed for protection.
- 2. Locate the canopy bracket to mount to the junction box. Secure in place.
- 3. Connect LED driver to fixture power cord. Purple > Black / Blue (Negative) Red > Red (Positive)
- 4. Connect LED driver to power feed. Black > Black (L) White > White (N) Connect ground wires (Green)

(test electrical connection)


5. Position the pendant below the junction box and align with the mounting holes on the canopy. Secure in place with canopy screws provided. 6. Locate the ceiling grippers and remove the top threaded portion to secure to the ceiling. Make sure each point is structurally sound for hanging the weight of the fixture. Use a plumb line to laser from the point on the fixture up to the ceiling.

Do not release fixture weight unless all 3 grippers have been installed.

Thread part C3 on to part C1 and tighten securely.

Level the fixture accordingly.

Installation is complete.

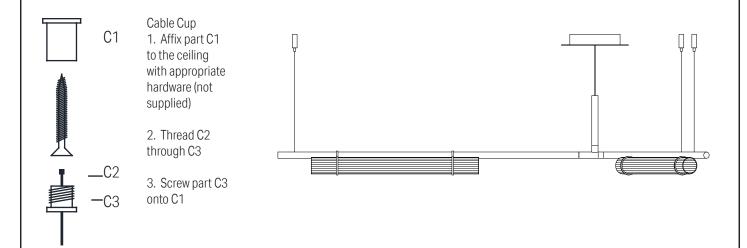

NOTE

The installation of this fixture depends on the materials into which the bracket will be anchored to and are not supplied by Ridgely Studio Works. The testing of the substrate strength is the responsibility of the installer. The substrate should be able to hold the entire weight of the fixture or more for added strength/safety. Carefully evaluate the substrate and fixture weight prior to mounting in order to make sure the substrate is not overloaded. The fixture must be installed into a solid structure (ie. cross members, beams, joists. etc) in the ceiling These instructions do not claim to cover all details or variations in the equipment. procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. RSW does not take any responsibilities in installation of product in this manual. Person in charge of installation MUST have a proper certification and is fully responsible...