GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction hoves

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.


CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

SAVE THESE INSTRUCTIONS!

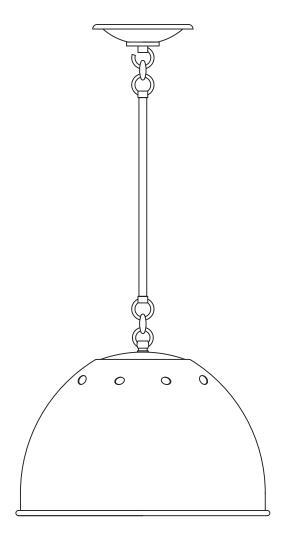


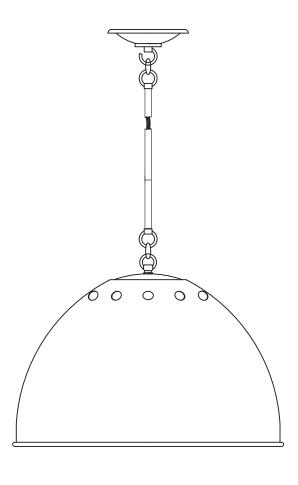

GENERATION LIGHTING

7400 Linder Ave., Skokie, IL 60077 T 847.410.4400 | F 847.410.4500 www.generationlighting.com

Install the Fixture

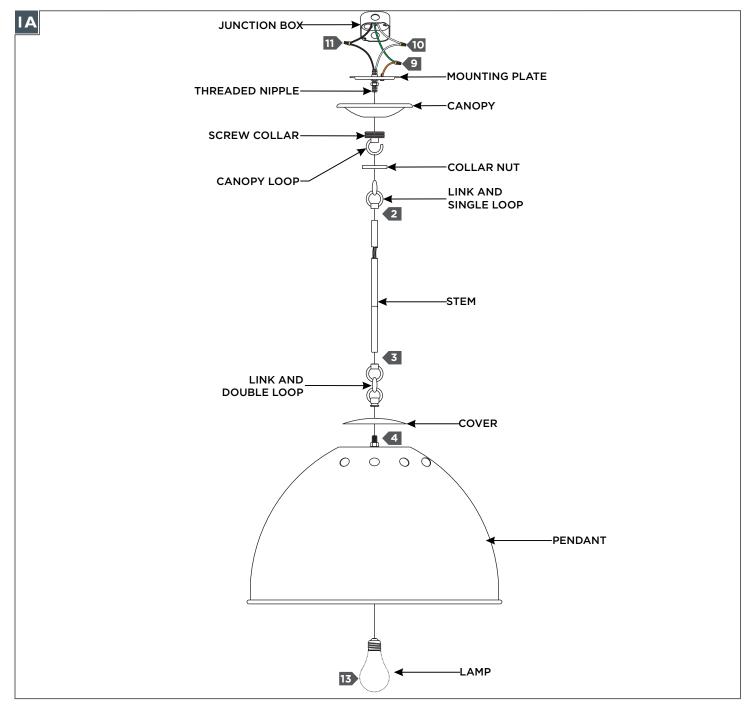

- 1 Determine the wanted height or look of the fixture with the provided stems and assemble them by screwing them together.
- 2 Screw the link and single loop to the top of the stem assembly.
- 3 Screw the link and double loop to the bottom of the stem assembly.
- 4 Feed the fixture wires through the cover, stem/loops and screw the stem assembly to the top of the pendant.
- 5 Unscrew the collar nut off the screw collar and place it onto the stem/loop followed by the canopy.
- 6 Screw the screw collar onto the threaded nipple.
- 7 Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem/loop assembly.
- 8 Align and secure the mounting plate to the junction box.
- 9 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 10 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 11 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly onto the screw collar.
- Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.