






## **Adjusting Cable Position**

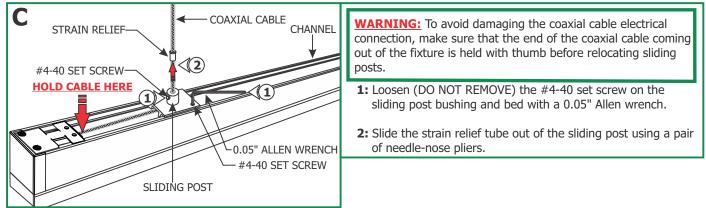


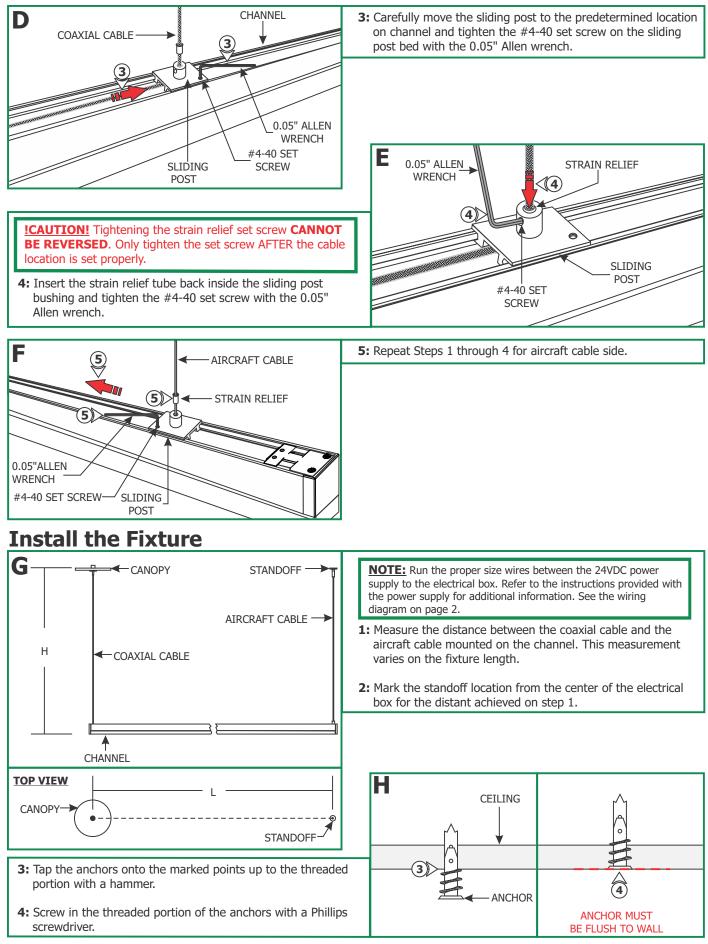

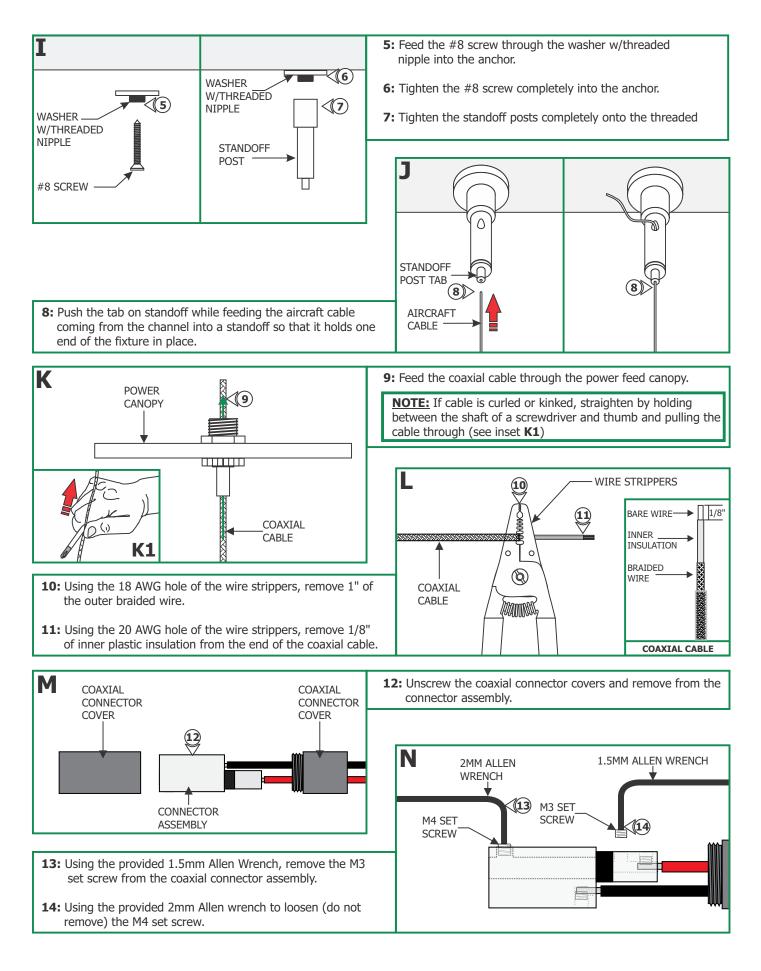


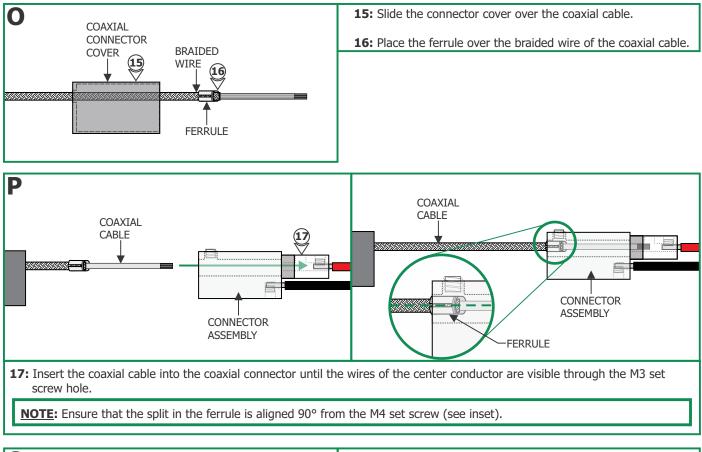

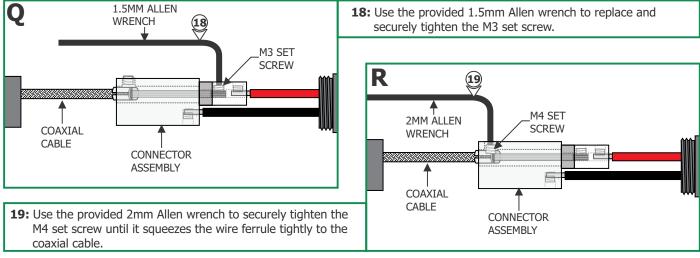

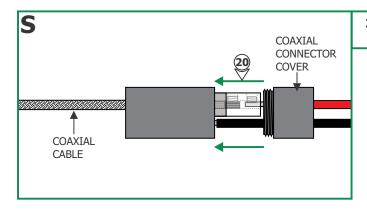


**20:** Replace the coaxial connector cover and tighten into place.

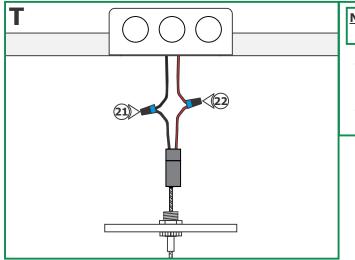

NOTE: Ensure remote DC power supply wires are present in


- **21:** Connect the black remote power supply wire to the black coaxial connector wire using a wire nut.
- **22:** Connect the red remote power supply wire to the red coaxial connector wire using a wire nut.

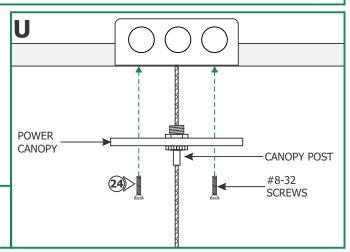


23: Place all connections into the junction box.


**24:** Secure the power canopy to the junction box using two #8-32 screws.

## **Height Adjustments**

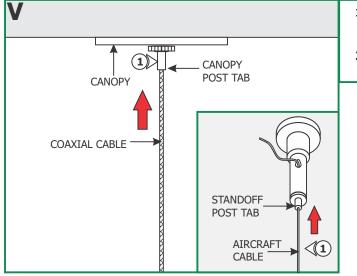

- **1:** Adjust the fixture height by pushing the aircraft cable & coaxial cable in to the standoff posts & canopy post.
- **2:** If necessary push the tab on the standoffs & canopy post to release the wire.



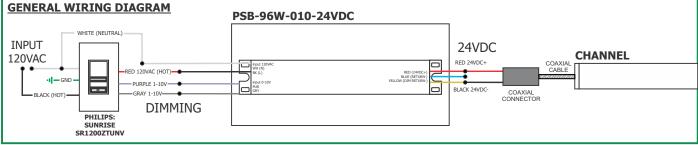

## **IMPORTANT INFORMATION REGARDING INSTALLATION AND REWORK OF SOFT STRIP LED**

