PURE EDGE
LIGHTING

Installation Instructions for **Fast Jack LED Bubble Pendant**
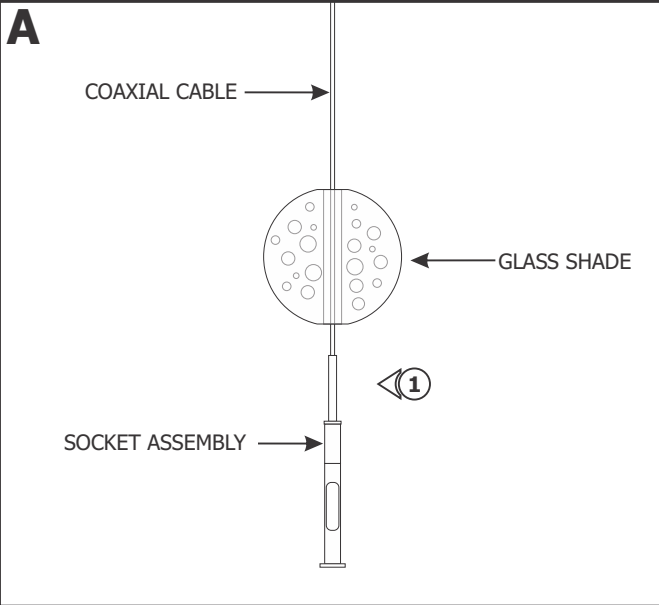
FJ-BBCL27-_

ETL
c LISTED us
Intertek

IMPORTANT INFORMATION
- This instruction shows a typical installation.
- This product is ETL listed for indoor dry locations.
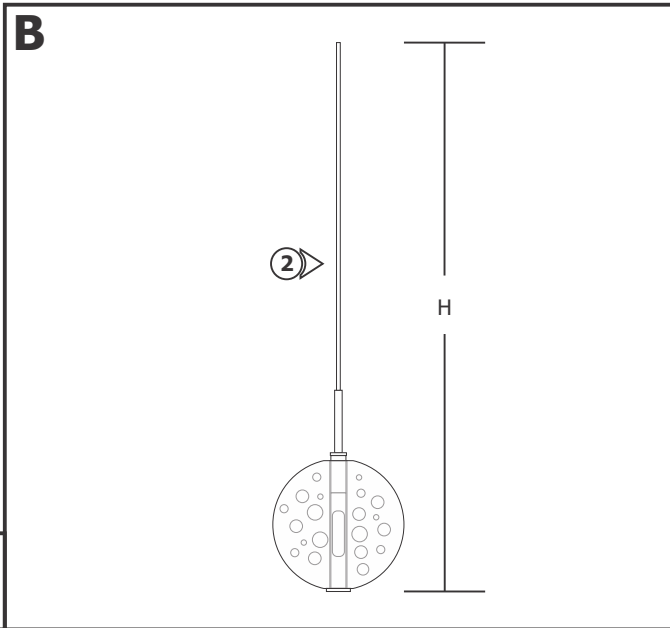- The product is intended to be used with PureEdge Lighting Monorail systems only.
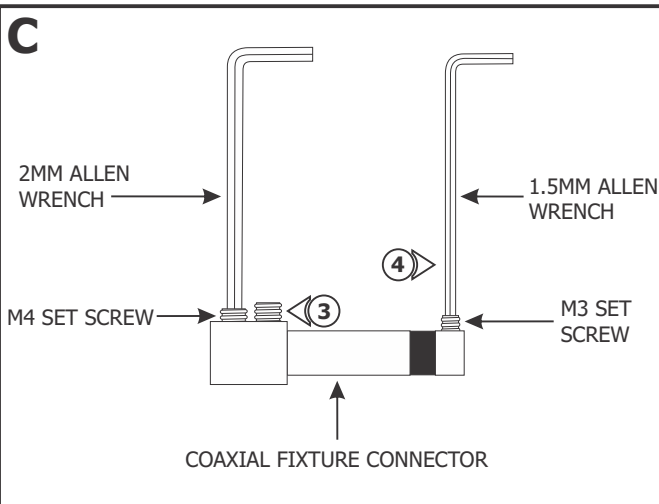
SAVE THESE INSTRUCTIONS!

Adjust the Fixture Height

A

COAXIAL CABLE

GLASS SHADE

①

SOCKET ASSEMBLY

1: Feed the coaxial cable through the glass shade, and rest the glass shade over the socket assembly.
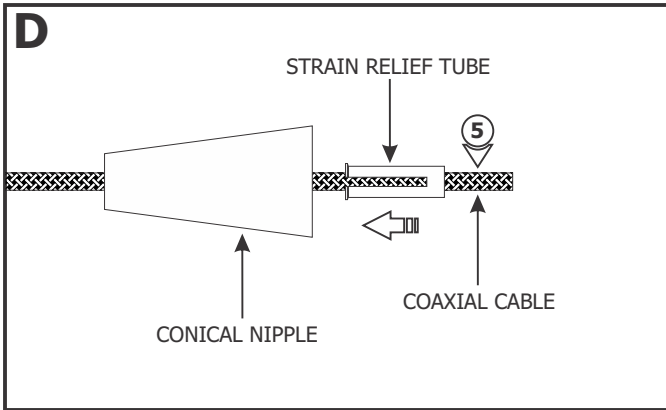
B

②

H

2: Cut the coaxial cable to the desired height (H) with a sharp cutter. The overall fixture height is measured from the bottom of the glass shade to the end of the coaxial cable.
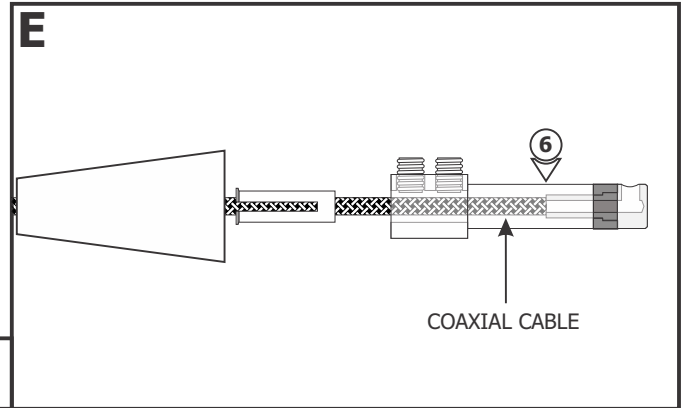
C

2MM ALLEN WRENCH

1.5MM ALLEN WRENCH

④

M4 SET SCREW

③

M3 SET SCREW

COAXIAL FIXTURE CONNECTOR

3: Loosen the two M4 set screw on base of the coaxial fixture connector with the 2mm Allen wrench provided. **<u>Do not remove these set screws.</u>**
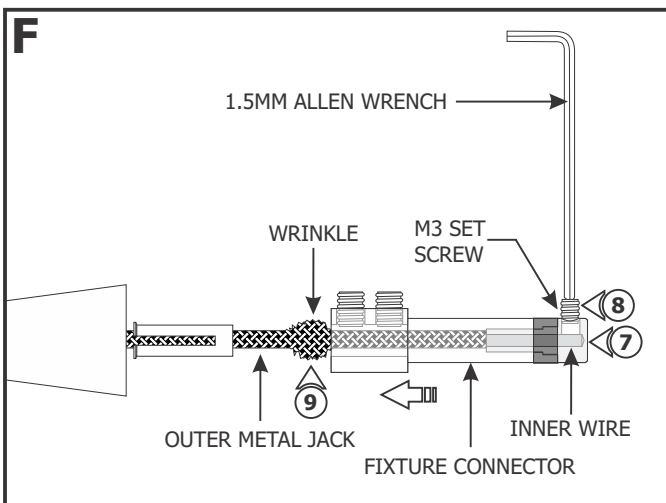
4: Remove the M3 set screw on tip of the connector with the 1.5mm Allen wrench provided.

D

STRAIN RELIEF TUBE

⑤

CONICAL NIPPLE

COAXIAL CABLE

5: Feed the coaxial cable through the conical nipple and flared side of the strain relief tube. Slide the conical nipple and strain relief tube down the coaxial cable.
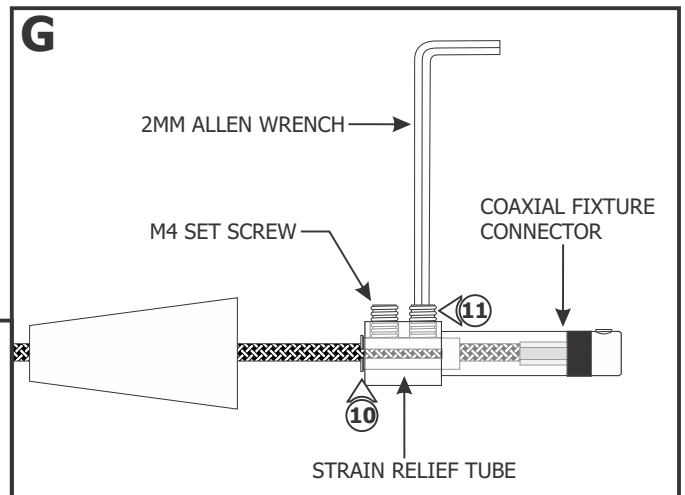
E

⑥

COAXIAL CABLE

6: Feed the coaxial cable into the coaxial fixture connector. The coaxial cable will come to a stop point.

F

1.5MM ALLEN WRENCH

WRINKLE

M3 SET SCREW

⑧

⑦

⑨

OUTER METAL JACK

INNER WIRE

FIXTURE CONNECTOR

7: Keep feeding the coaxial cable in until the inner wire is visible in the screw hole of the fixture connector tip. The outer metal jacket will start to wrinkle.
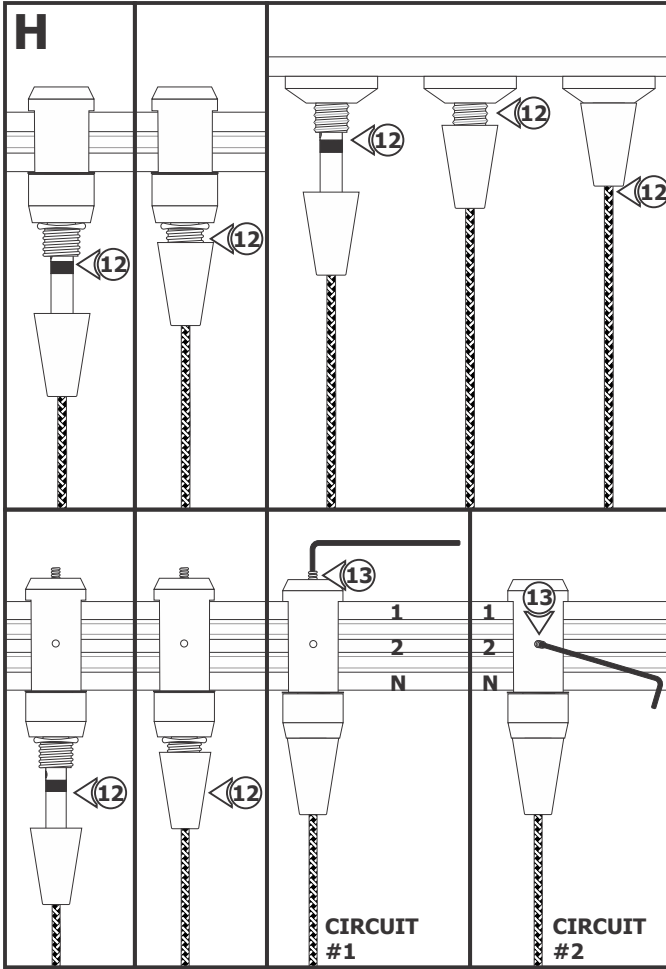
8: Hold the fixture connector in place. Replace and tighten the M3 set screw on fixture connector tip with the 1.5mm Allen wrench.

9: Pull down the outer metal jacket to smooth the wrinkles.

G

2MM ALLEN WRENCH

COAXIAL FIXTURE CONNECTOR

M4 SET SCREW

⑪

⑩

STRAIN RELIEF TUBE

10: Push the strain relief tube completely into the coaxial fixture connector. Make sure the slot on the strain relief tube is not inline with the M4 set screw.
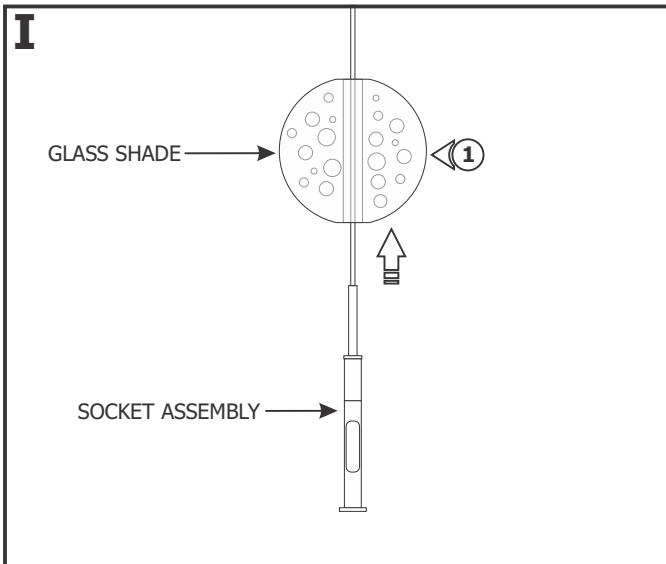
11: Tighten the two M4 set screws with the 2mm Allen wrench.

H

12: Use fingers to tighten the Fast Jack fixture connector into the Fast Jack system connector (Monorail, Monorail Wall, Monorail 2 Circuit, or multi-port and mono-point canopies. Refer to the instructions provided with the system connector or canopy).

13: Refer to the instructions provided with the Monorail 2 Circuit fixture connector to choose the Circuit #1 or Circuit #2.

1
2
N

1
2
N

CIRCUIT #1

CIRCUIT #2

Install the Lamp

I

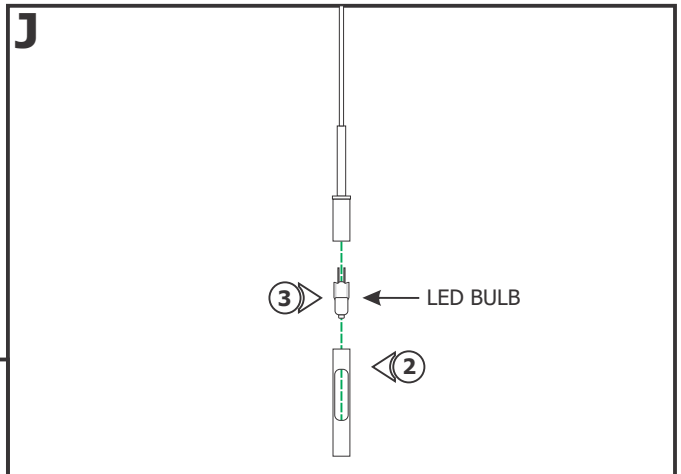GLASS SHADE

SOCKET ASSEMBLY

CAUTION: To reduce risk of a burn or electrical shock during lamping, disconnect the power to the fixture.

1: Lift the glass shade up to expose the socket assembly.

NOTE: Do not loosen or otherwise modify the power cable set screw. This will cause damage to the fixture.

J

LED BULB

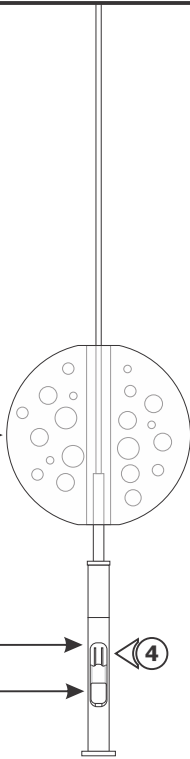**2:** Unscrew the bottom portion of the fixture to attach lamp.

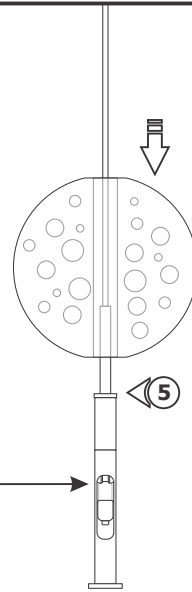**3:** Insert LED bulb into 2-pronged socket, and re-attach the bottom portion of the fixture.

K

4: Push the lamp pins completely into the socket holes.

GLASS SHADE

SOCKET ◁④

LED LAMP

L

SOCKET ◁⑤

5: Carefully lower the glass shade onto the socket assembly.

NOTE: Use only a clean damp towel to clean the bubble balls. Do not use any cleaning solutions which may cause the colored bubble balls to get damaged.