Maintenance and spare parts

mammalampa will happily answer all questions regarding the assembly and use of the lighting objects, when writing to support@mammalampa.com

The design elements of lighting object that are not part of the standard equipment, as well as spare parts can be purchased for an additional fee, by writing to support@mammalampa.com

In order for the lighting object to maintain its original look, we recommend:


Cleaning the shade on a regular basis with a dust brush or strong airflow.

Not placing the lighting object in rooms where air humidity exceeds 60 %, and the temperature is below + 50°F, to prevent its shade changing from its original shape.

Avoiding placing the lighting object in direct sunlight, in order to prevent the shade losing its colour.

The shade of the lamp is hand-made and the outer look of each lighting object is unique and individual, which is an advantage of the product.

Please keep the User manual during whole period of use of the lighting object!

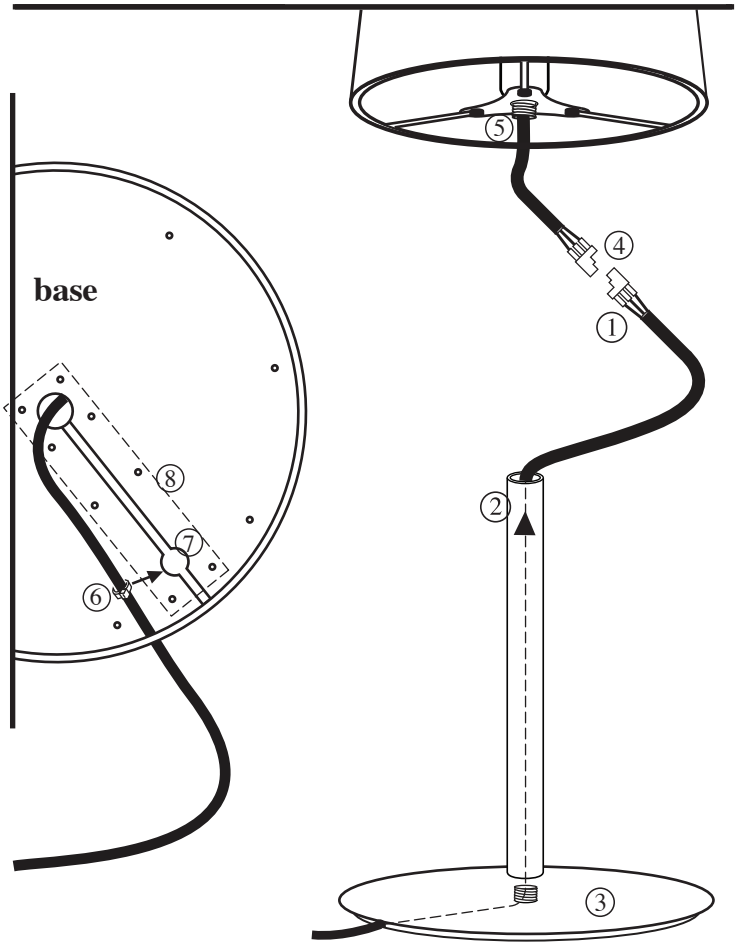

„mammalampa"

the sisters meduim | floor

assembly & user manual

the sisters

floor lamp

product code —— sis m f

Technical information

voltage —— 120 V ~ 60 Hz

light-bulb type - 1 x max 50W LED

light-bulb socket —— E26


material —— painted canvas, steel

environment —— indoor

handmade in EU

"mammalampa" is trademark of "mammastudio" Ltd. registred in Latvia / EU

copyright ©mammalampa 2026

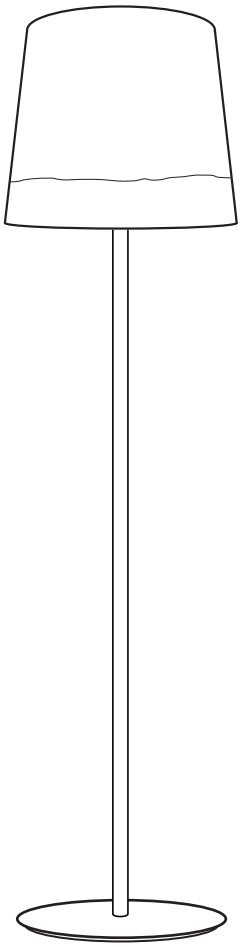

Assembly manual

Unpack the lighting object, place it on a clean surface and place the parts of the lighting object in the order that is shown in the technical diagram.

Make sure to switch off the electrical power!

Assemble the electric wire ① through "leg" ② as shown in the technical diagram.

The“leg” of the lighting object ② should be fastened to base ③

Connect the power connection elements ① and ④ of the lighting object as shown in the technical diagram. During assembling process grasp the lampshade only to metallic element

Screw the "leg" ② together with the lampshade ⑤

Fix the electric wire with plastic element ⑥ in the cutout ⑦

Fix the electric wire with the platic plate ⑧

Turn the lighting object in the right direction.

Screw the light bulb into the lighting object.

Switch on the electrical power contact.

General warnings about indoor lighting objects

	This symbol shows that the lighting object is suitable for placing on a flammable surface. Luminous objects that do not bear such a symbol are suitable for placing only on fireproof surfaces.
	This symbol shows the minimum distance from lighting objects, lamps that may heat up other luminous objects, or from a wall.
	This symbol shows that the lighting object is equipment of the II class (defence tools against electric shock).

The manufacturer does not accept liability for damage or injuries that are result of ill-judged activities.

Enclosed

A shade and its fixing elements, support element of the lighting object, base of lighting object, assembly and user manual.

The assembling of the lighting objects is carried out in SIA Mammastudio / Latvia / EU

User manual

If the power cord is damaged, then in order to avoid risk, it can be replaced only by the manufacturer, its service agent or a person with a similar qualification.

The equipment is not intended for use by such persons (including children) who have limited physical, sensory or mental skills or a lack of experience or knowledge.

Children must be looked after to ensure that they do not play with the equipment.

Before you start any work with the lighting object, switch off the power supply.

The lighting object can only be used indoors.

Only the lampshade can be cleaned. No humidity is permitted in the connection parts or power conducting parts.

The producer does not accept responsibility if the lighting object or its construction is dismantled and then re-assembled, or if its parts are changed and it is used afterwards.

Do not look directly at the light-bulb when it is switched on. It damages eyesight!

Keep away from open flames!

Use only light bulbs of the voltage and type that are given in the manual, because there is a risk of over-heating and fire if the given parameters are exceeded