

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com




Installation Instructions for Scope LED Head

IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with Edge Lighting Monorail systems only.

SAVE THESE INSTRUCTIONS!

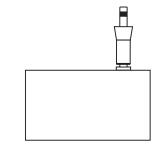


M-SCO-1-

M2-SCO-1


FJ-SCO-1

Install the Fixture to Monorail Connector (MC-FJ-_)

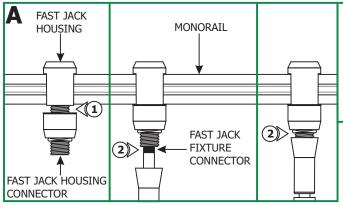


- 1: Place the Fast Jack housing onto the Monorail and use fingers to tighten the Fast Jack housing connector to the Fast Jack housing. <u>Make sure that the Fast Jack housing</u> <u>connector is not cross threaded.</u>
- **2:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack housing connector.

Install the Fixture to Monorail 2 Circuit Connector (M2C-FJ-_)

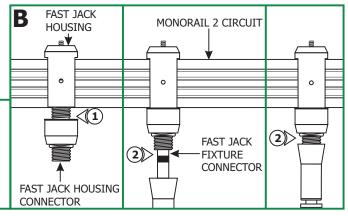

- 1: Place the Fast Jack housing onto the Monorail 2 Circuit and use finger to tighten the Fast Jack housing connector to the Fast Jack housing. <u>Make sure that the Fast Jack housing</u> <u>connector is not cross threaded.</u>
- **2:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack housing connector.

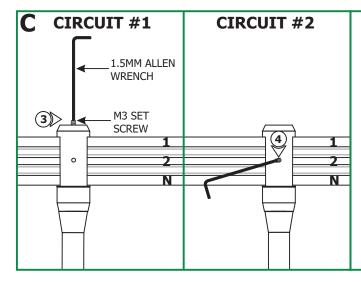

- 3: To power the fixture from circuit #1, top and bottom (neutral) rails, tighten the M3 set screw on top of the housing with the 1.5mm Allen wrench. <u>Make sure this set</u> <u>screw connection is very tight.</u>
- 4: To power the fixture from circuit #2, middle and bottom (neutral) rails, remove the M3 set screw from top of the housing and tighten it into the side threaded hole with the 1.5mm Allen wrench. <u>Make sure this set screw</u> <u>connection is very tight.</u>

NOTE: To avoid shorting the system, do not use more than one set screw to select a circuit on the Monorail 2 Circuit connector.

 $\underline{\textbf{NOTE:}}$ Do not load either circuit over the maximum system rating.

Install the Fixture to Fast Jack LED Canopy (FJP-2SQ-LED_, FJP-4SQ-LED_, FJP-4RD-LED_)

