


- **2:** Tap the anchors onto the marked locations up to the threaded portion with a hammer.
- **3:** Screw the threaded portion of the anchors in with a Phillips screwdriver.

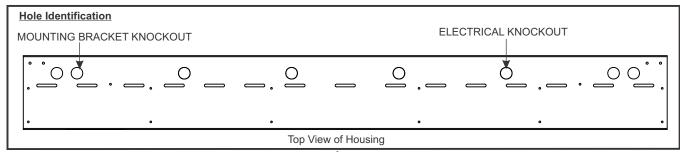

60

