

Mounting Instruction

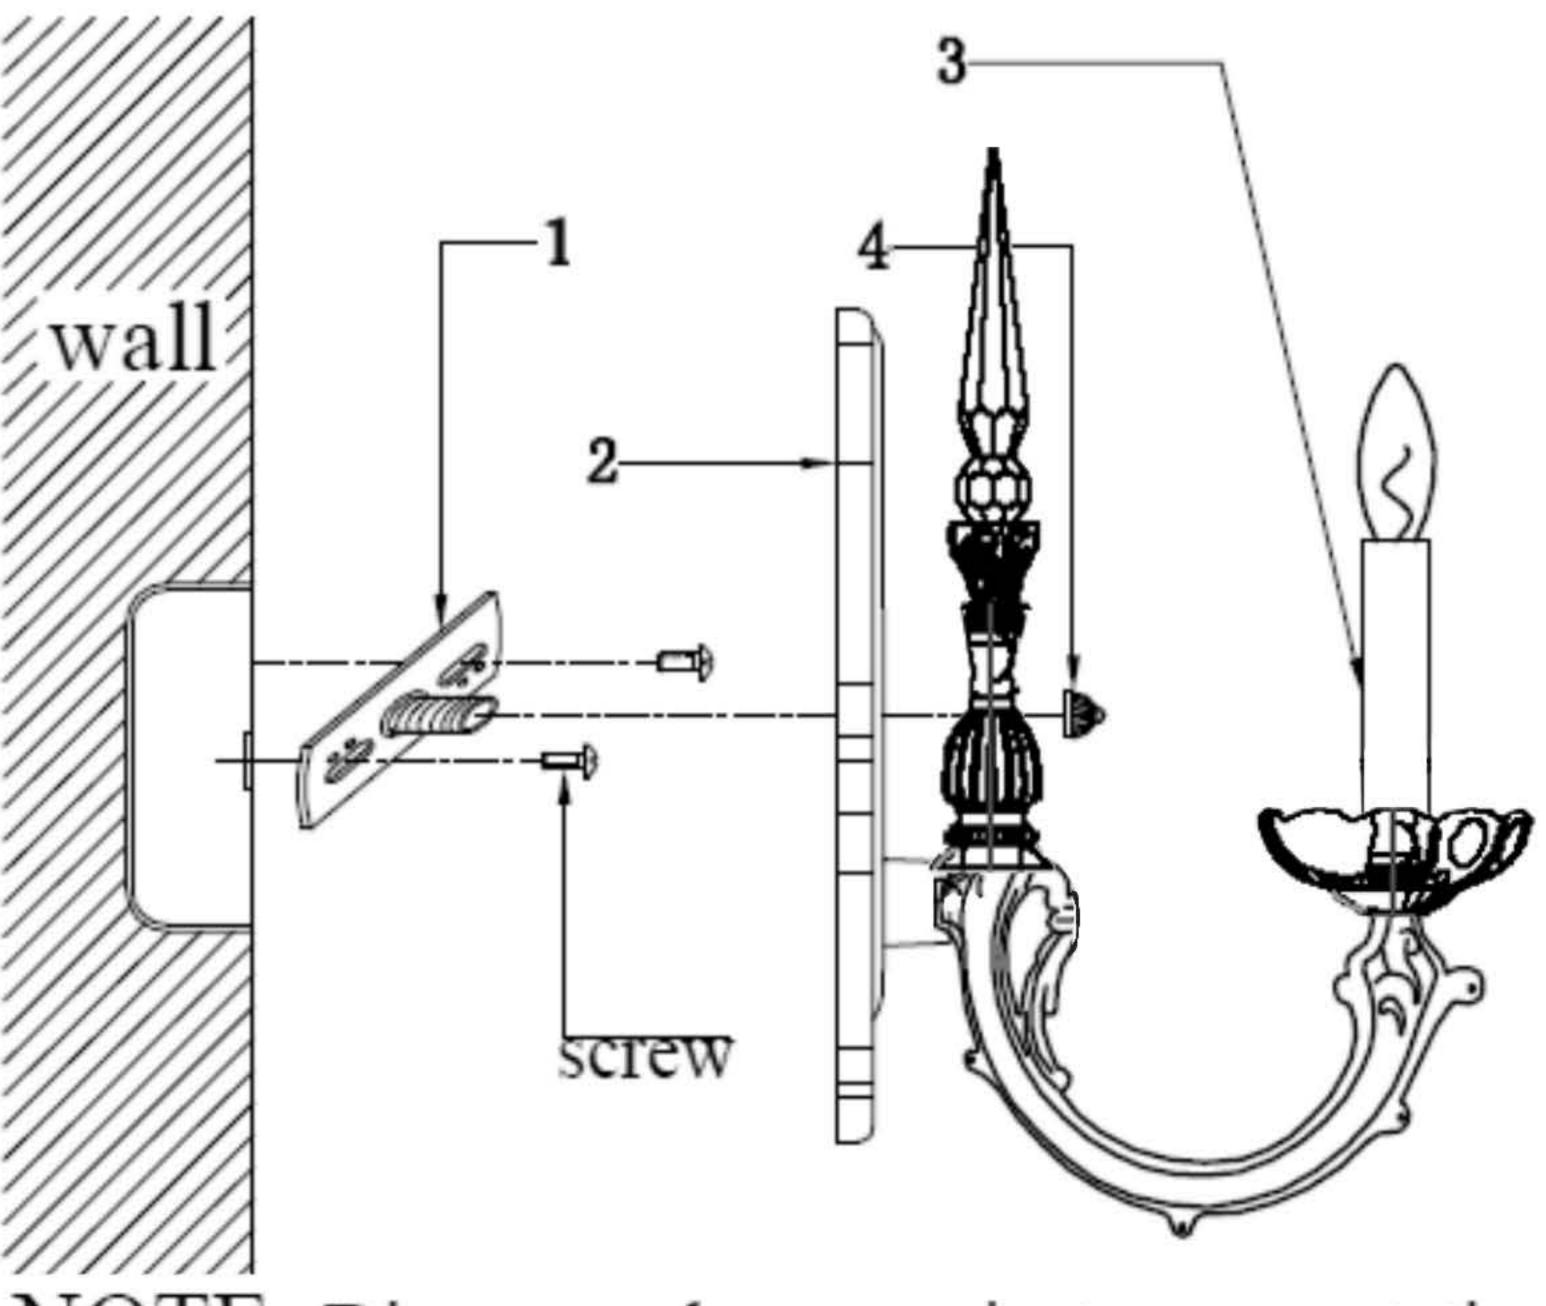


NOTE: Diagrams above are just representative.

1. mounting block 2. main body 4.nipple

Electrical Diagram

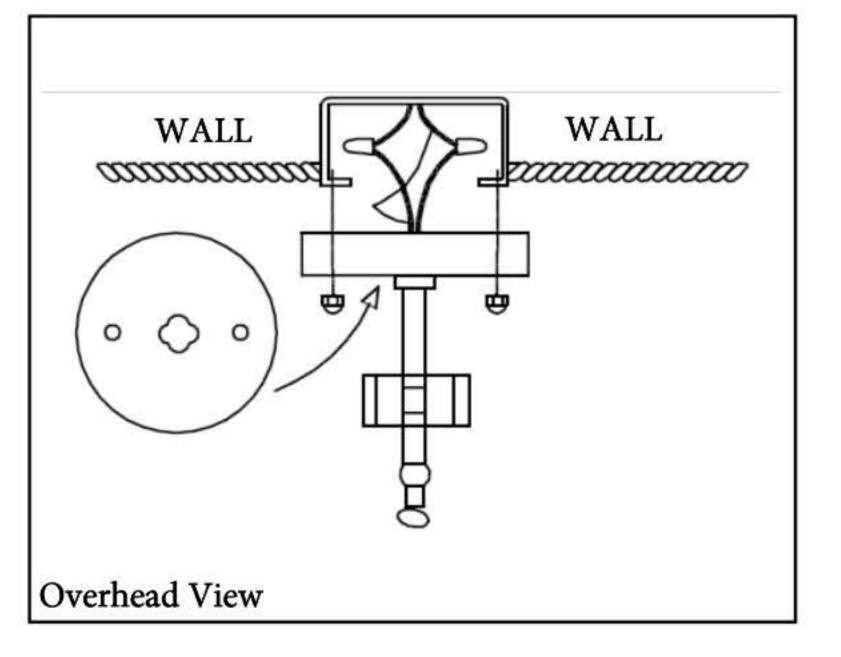

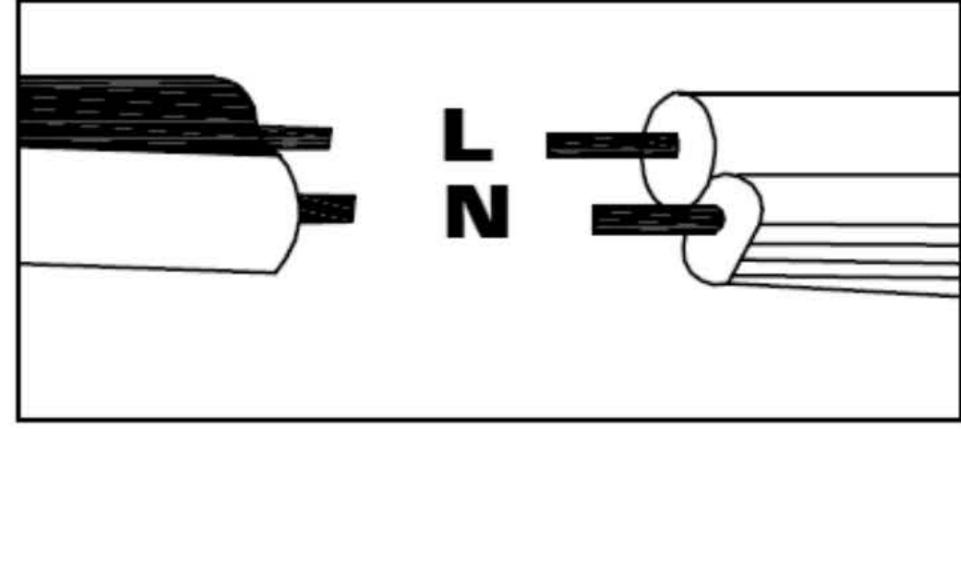

All electrical components must be installed by a liscensed electrician and in accordance with the National Electric Code and the appropriate local electrical codes.

3.candle pipe






American Brass and Crystal provides the finest quality components manufactured, designed and finished by master artisans. We take great pride in our production abilities and we empower our valued customers with the ability to custom create the light that is perfect for them. Enclosed are detailed instructions on how to properly assemble and install your sconce. If you have any questions please call our toll free customer service hotline at: <u>1-(877)-465-5617</u>

 \mathcal{B} American Brass and Crystal 835 Lehigh Avenue, Union, NJ 07083

www.abclighting.net





Crystal Component Detail

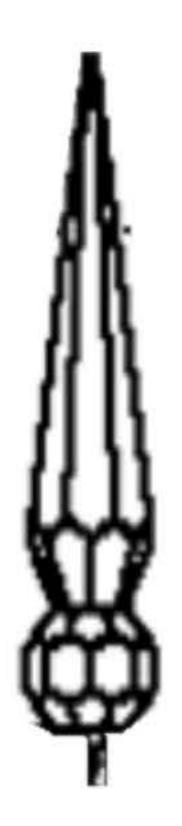

Crystal Spike Quantity: 1

Screw into center spindle on wall sconce.

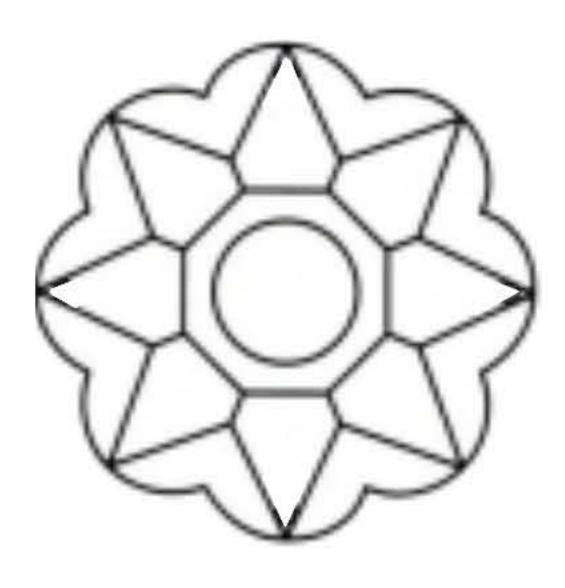

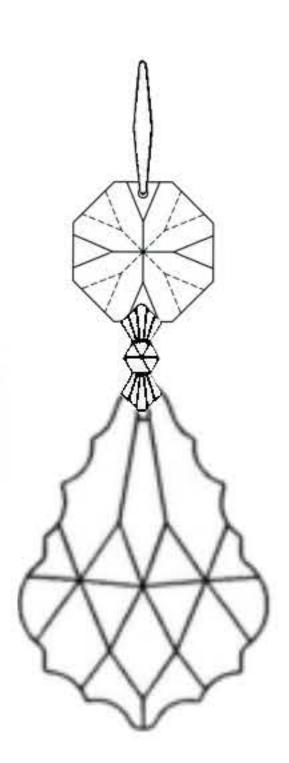

Letter: A Quantity: 14 2"A w/Octagon

Connect to middle and front holes on left arm and right arm.

Connect to 5 holes around each crystal bobeche

Letter: B Quantity: 1 30mm Ball w/Octagon


Connect to bottom center finial




Crystal Bobeche Quantity: 2

Place over socket before sliding on candle cover.

Begin trimming your chandelier after all of the electrical connections have been made, the lights have been tested and the chandelier is in good working order. Begin trimming in Alphabetical order. Do not unwrap the next letter until previous one is complete.

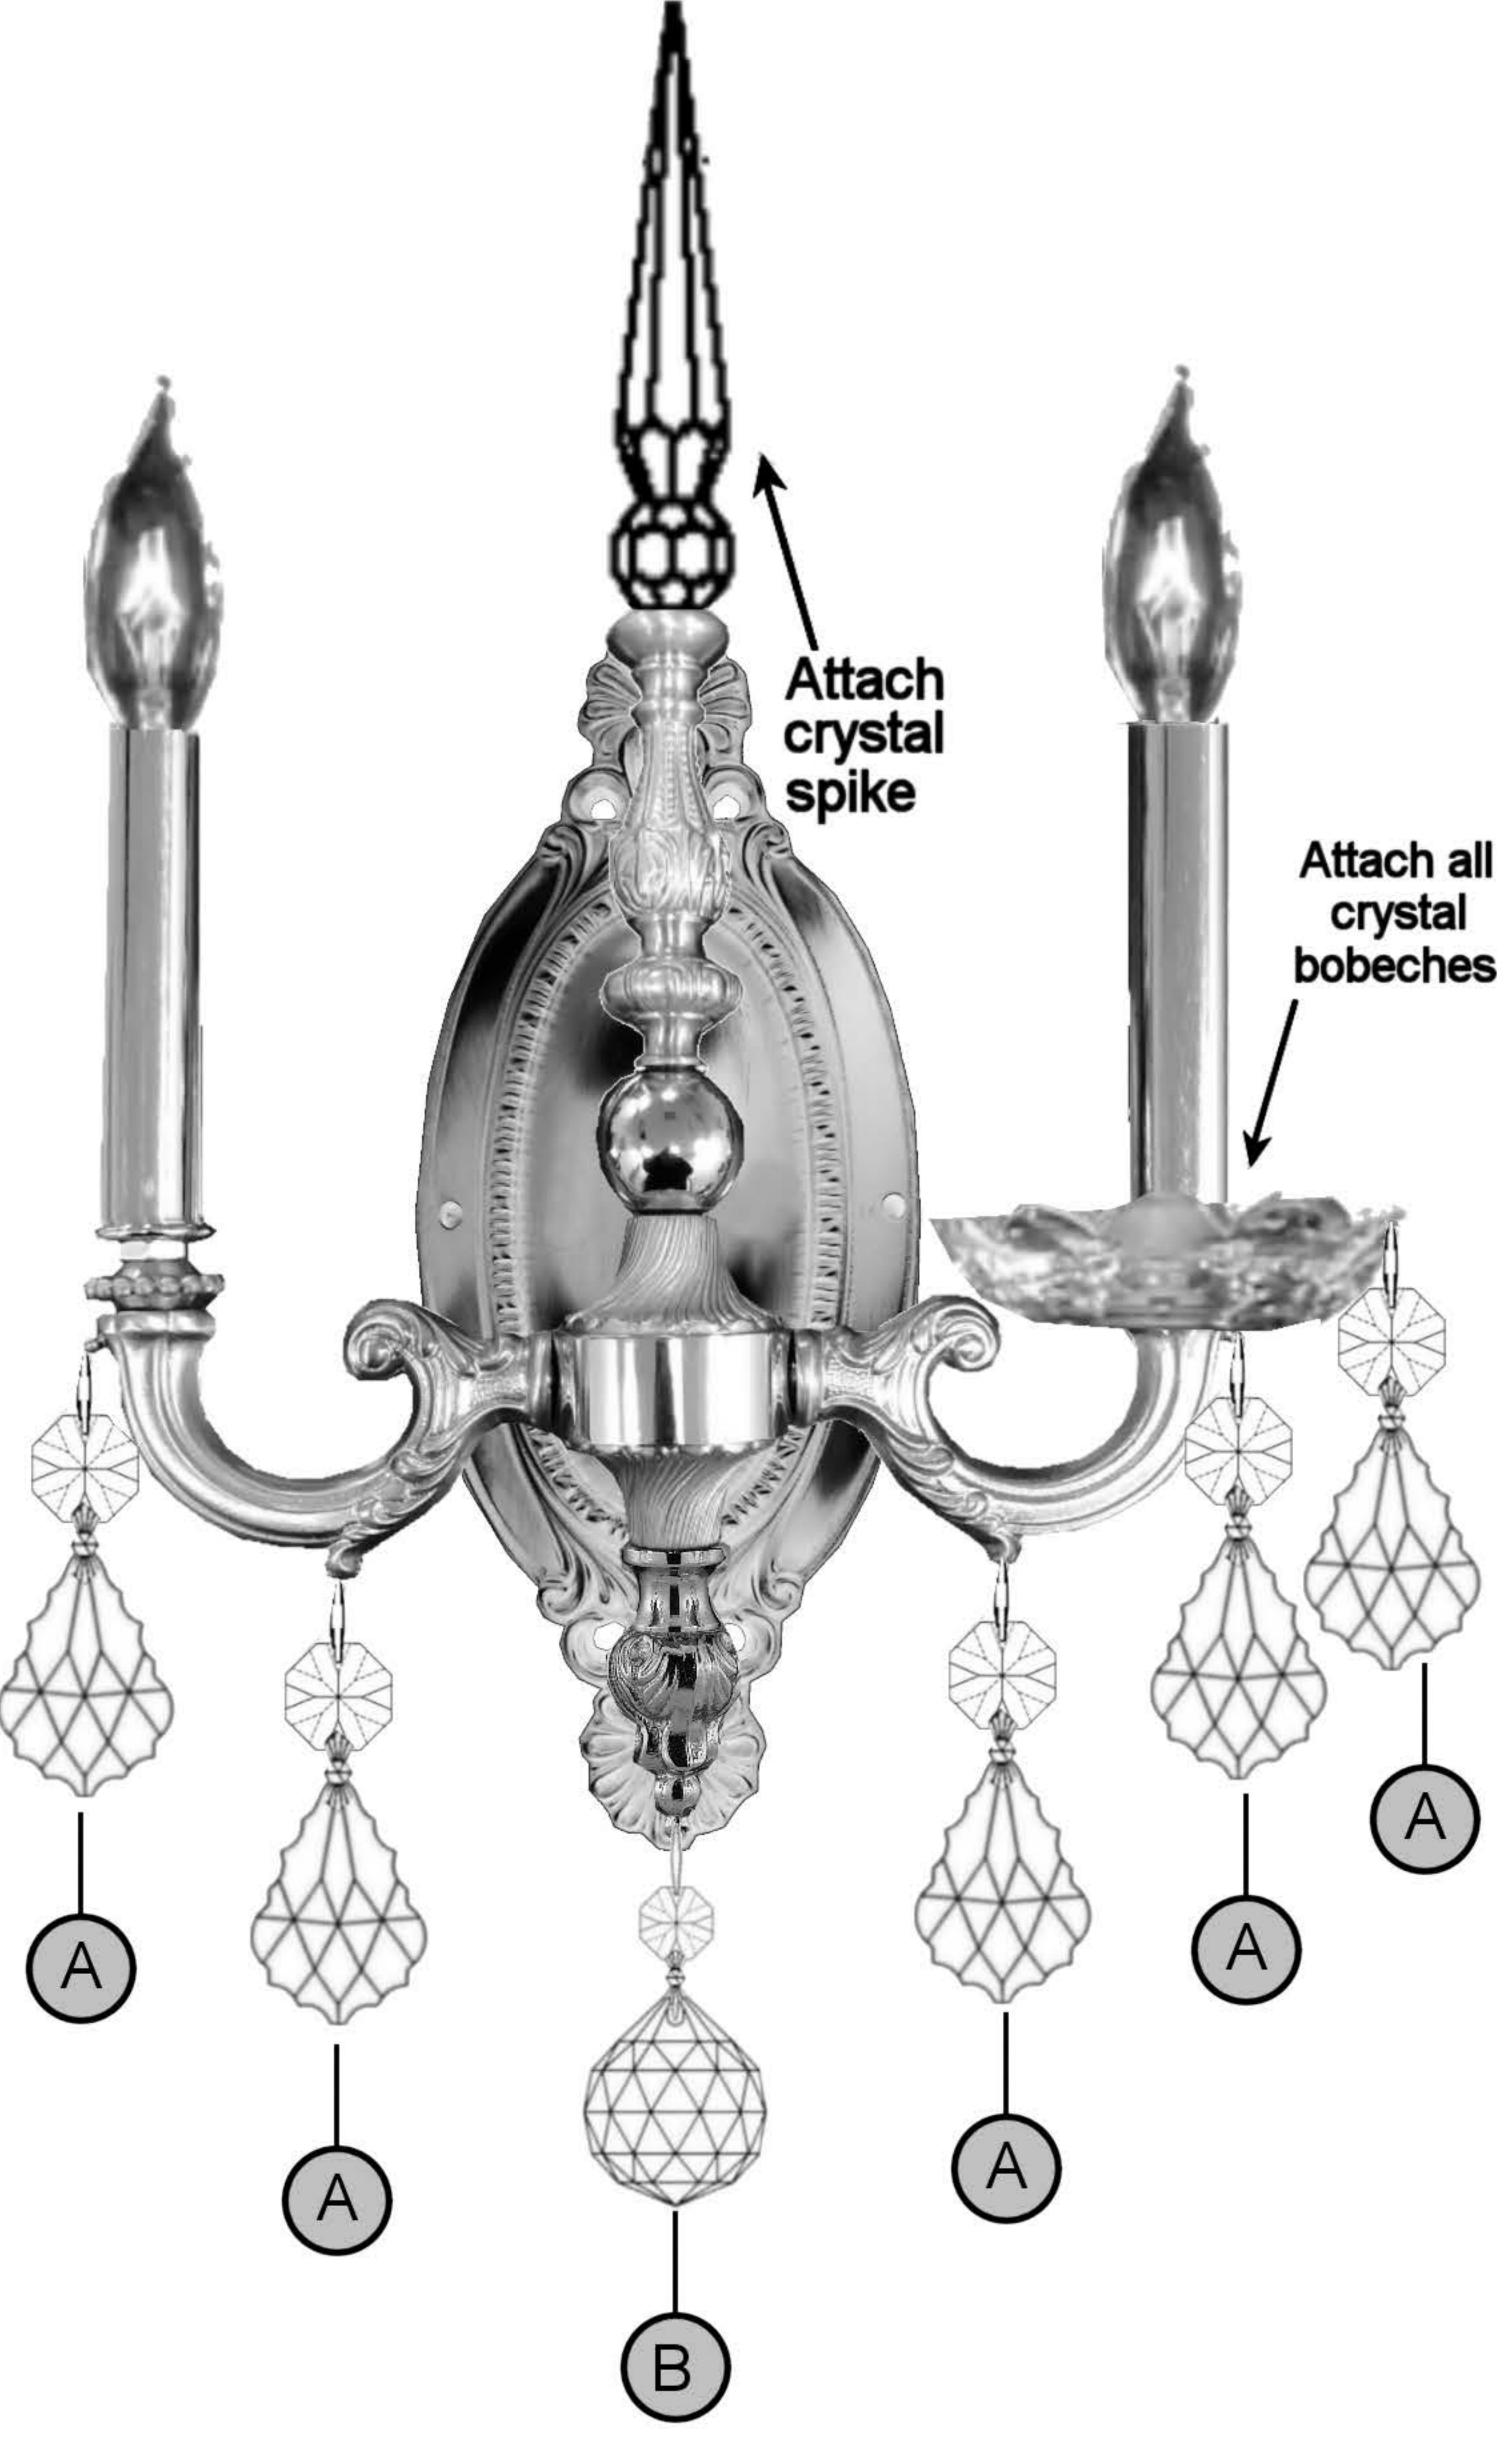

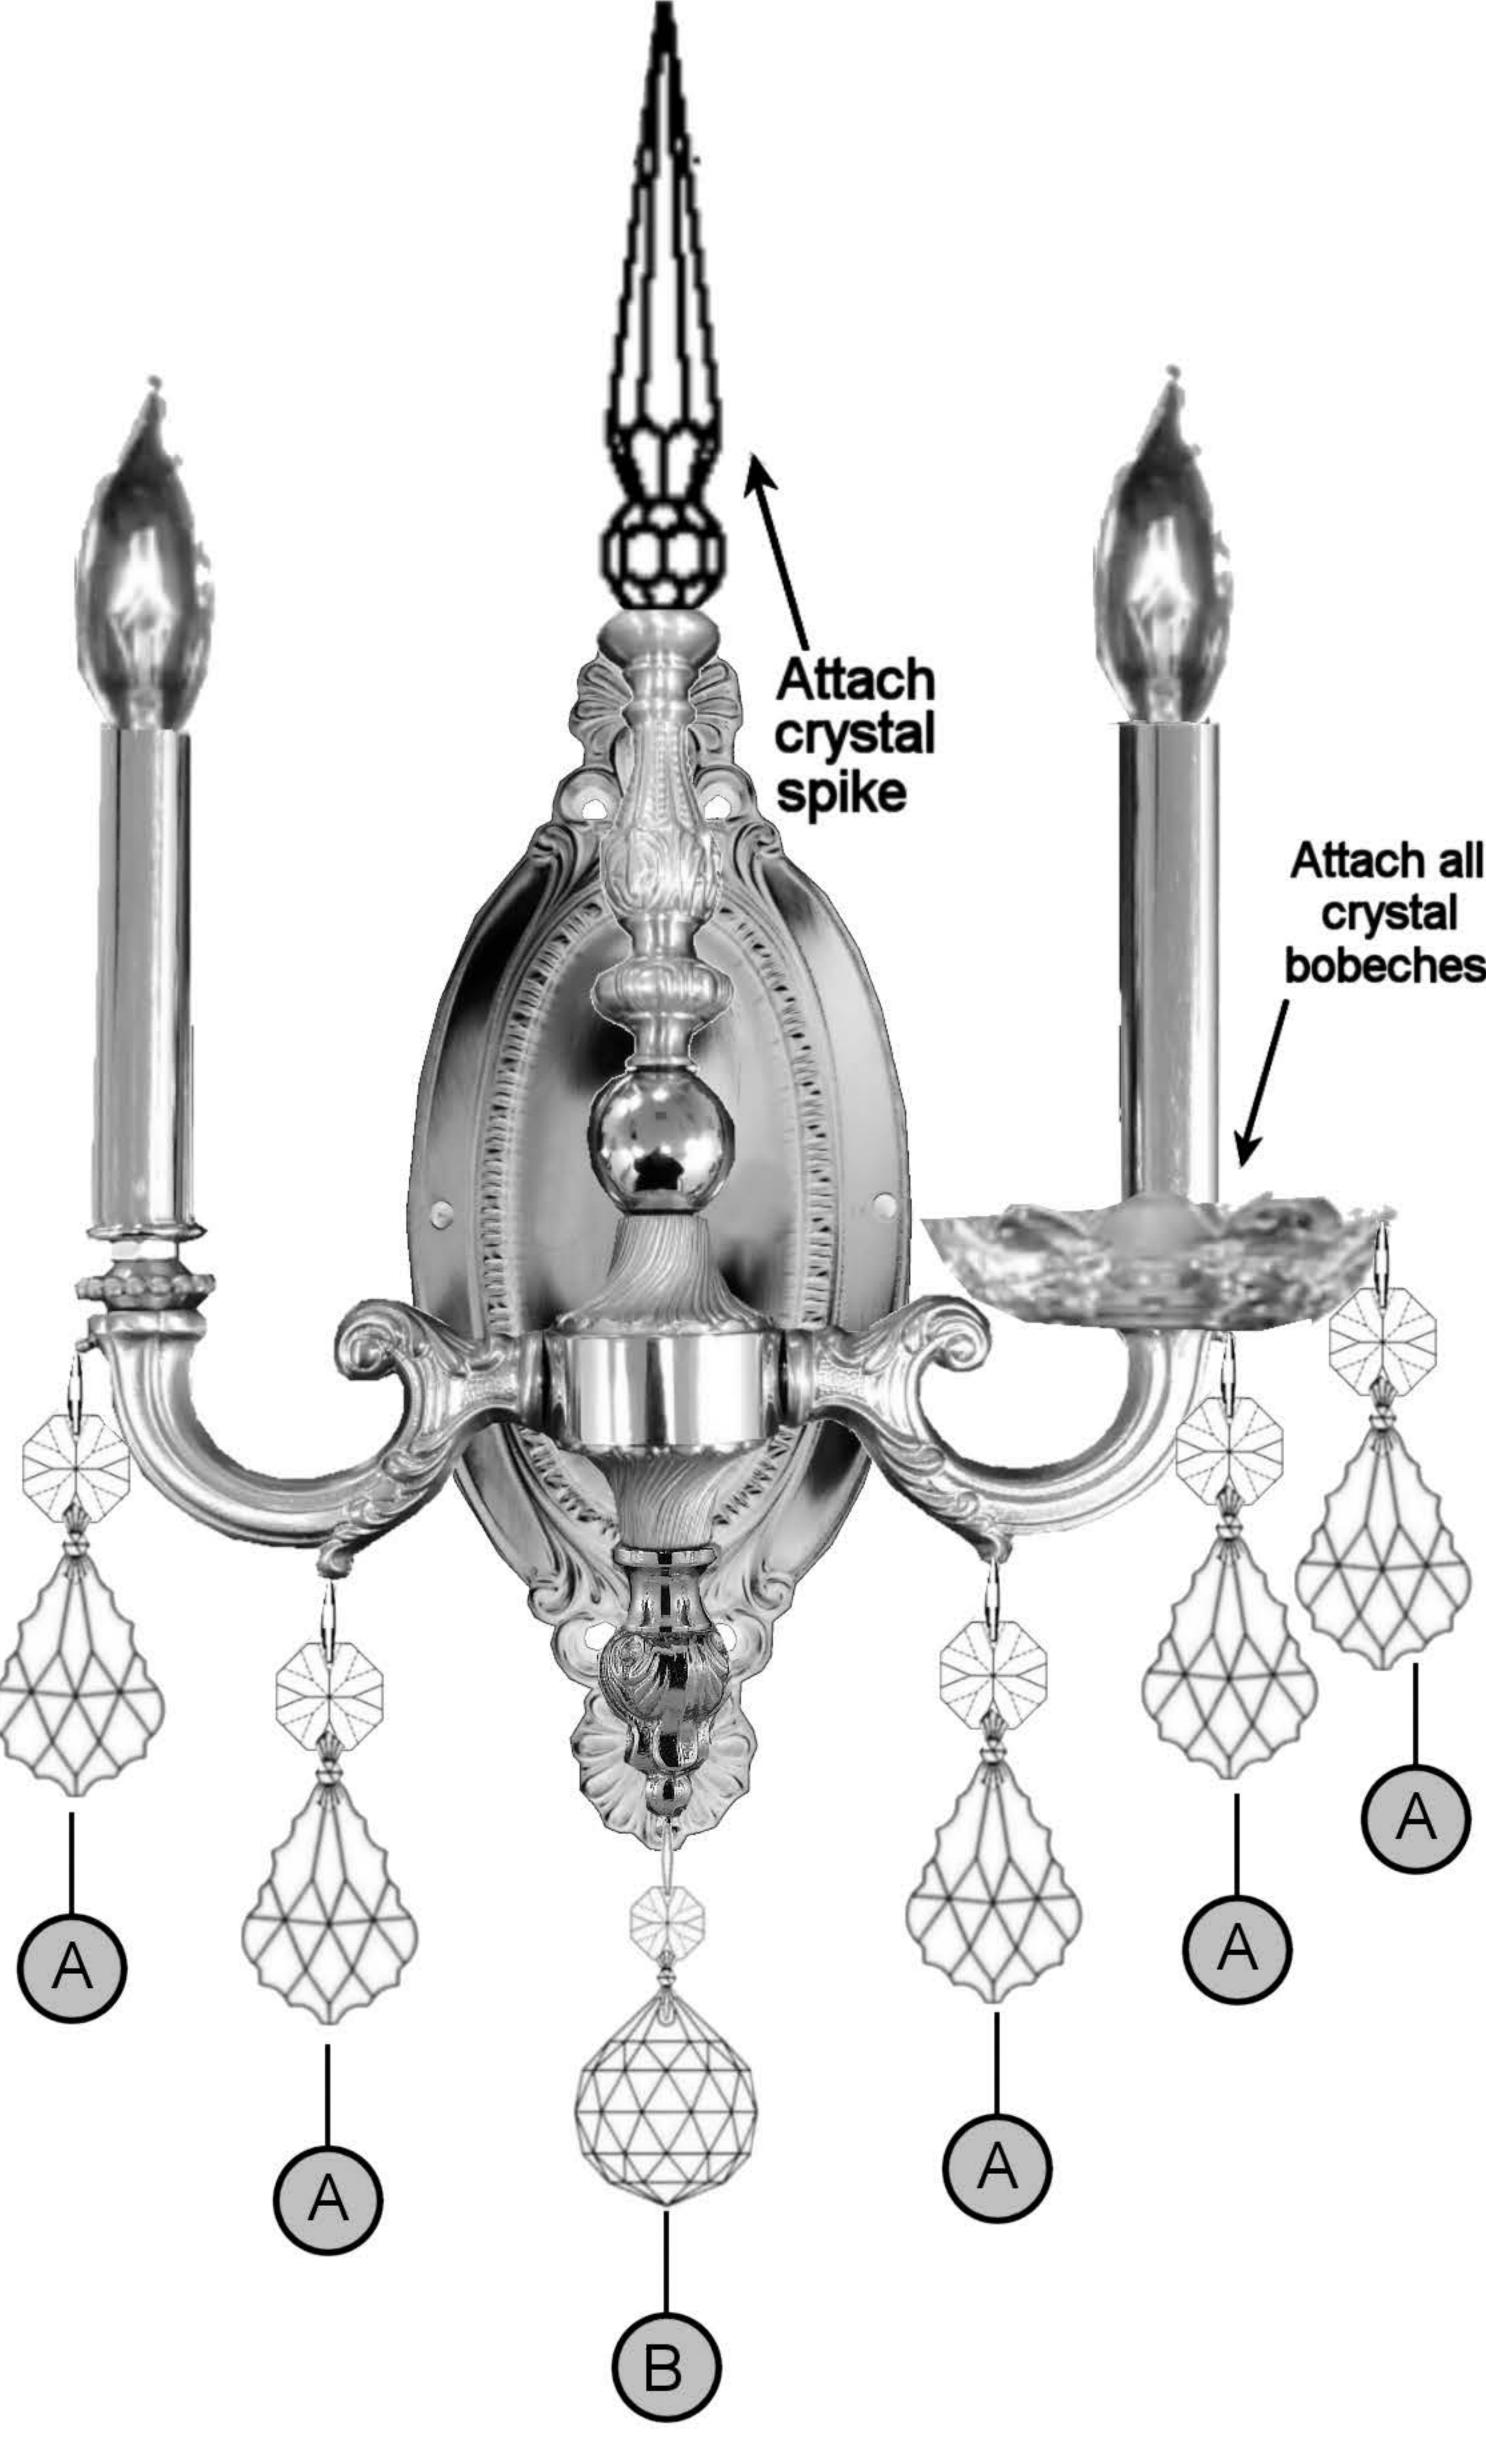

Crystal Trimming Directions