



*American Brass & Crystal*

FM6511 - FM6411




835 Lehigh Avenue  
Union, N.J. 07083  
Toll Free (877)465-5617

[www.abclighting.net](http://www.abclighting.net)

**(SHADE ASSMBLY)**

Thread electrical wire through shade tighten down with canopy assembly.

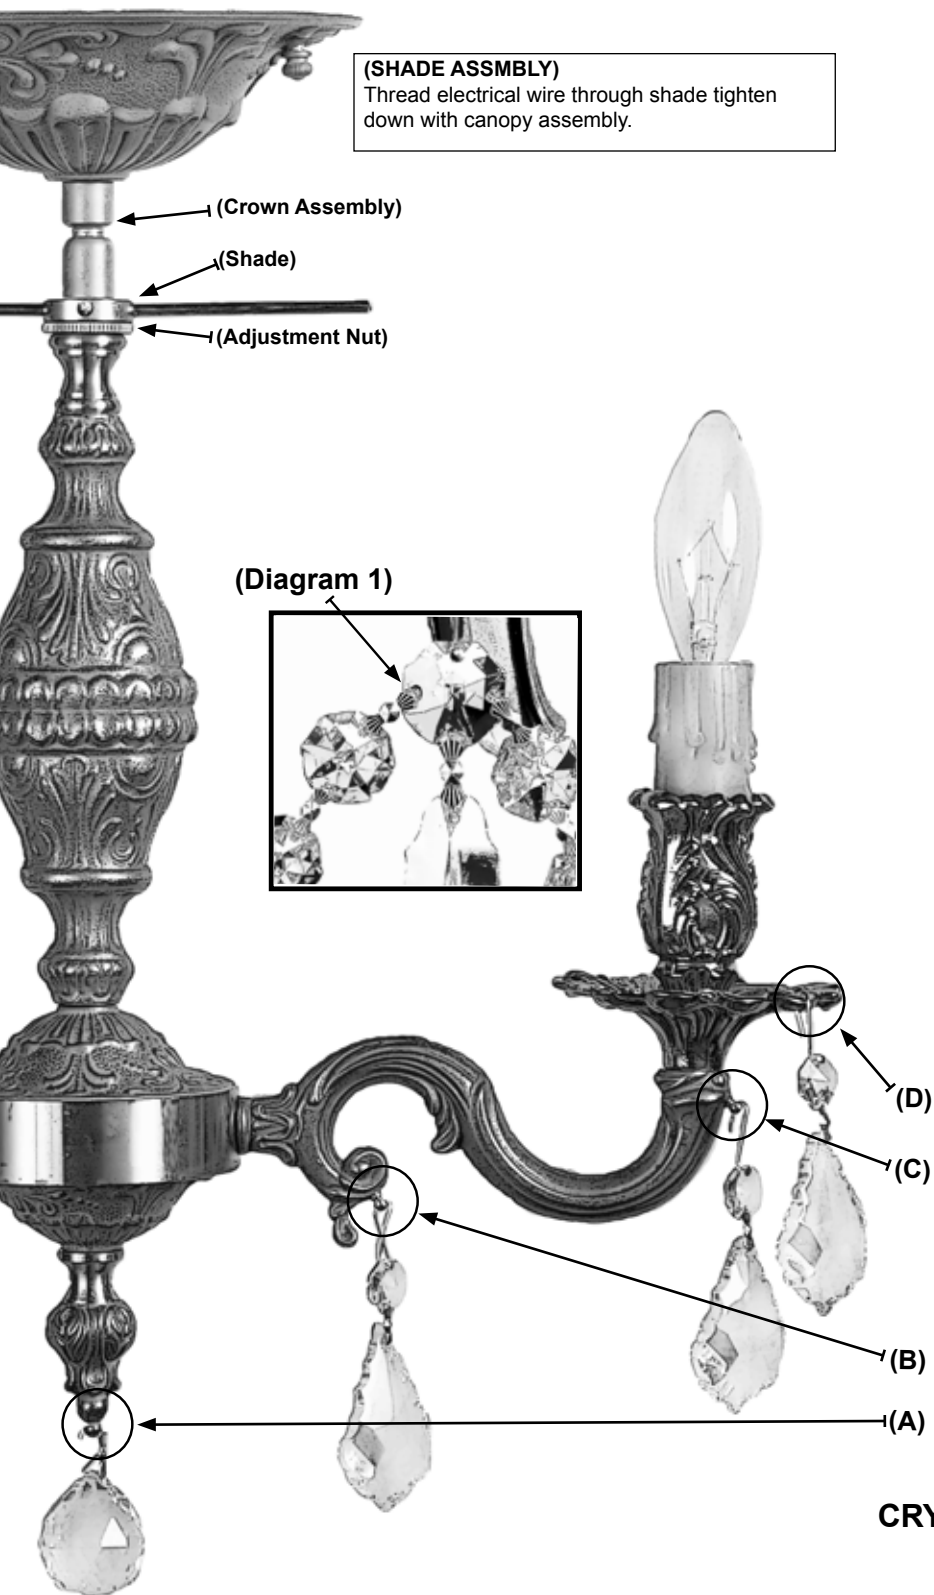

## CRYSTAL TRIMMING DIRECTIONS:

Begin trimming chandelier after all the electrical connections have been made, the lights have been tested and the chandelier is in good working order.

**Begin dressing Alphabetically**

**Do not unwrap the next crystal section until the proceeding section is complete**

**Step 1:** Package (A) Attach the ball to the (finial).

**Step 2:** Package (B) Attach the (5) crystal sections to the (back of arms)

Open package labeled "B" Attach each crystal section using the long thin pin. Leave the loose chain of crystal to hang unattached until all crystal sections are attached to the frame.

Once all sections are attached begin connecting the loose chain of crystal to the 4 hole octagon on the crystal section to the right. (Diagram 1).

**Step 3:** Package (C) Attach (5) crystal sections to the (front tip of arms)  
Same directions as step 2

**Step 4:** Package (D) Attach (4) crystals to each (bobeche on arms)

CRYSTAL PACKAGE \_\_\_\_\_ PIN COLOR \_\_\_\_\_ INITIALS \_\_\_\_\_