

AB

FM9744



American Brass & Crystal

835 Lehigh Avenue
Union, N.J. 07083
Toll Free (877)465-5617


www.abclighting.net

CRYSTAL TRIMMING DIRECTIONS:

Begin trimming chandelier after all the electrical connections have been made, the lights have been tested and the chandelier is in good working order.

Begin dressing Alphabetically

Do not unwrap the next crystal section until the proceeding section is complete

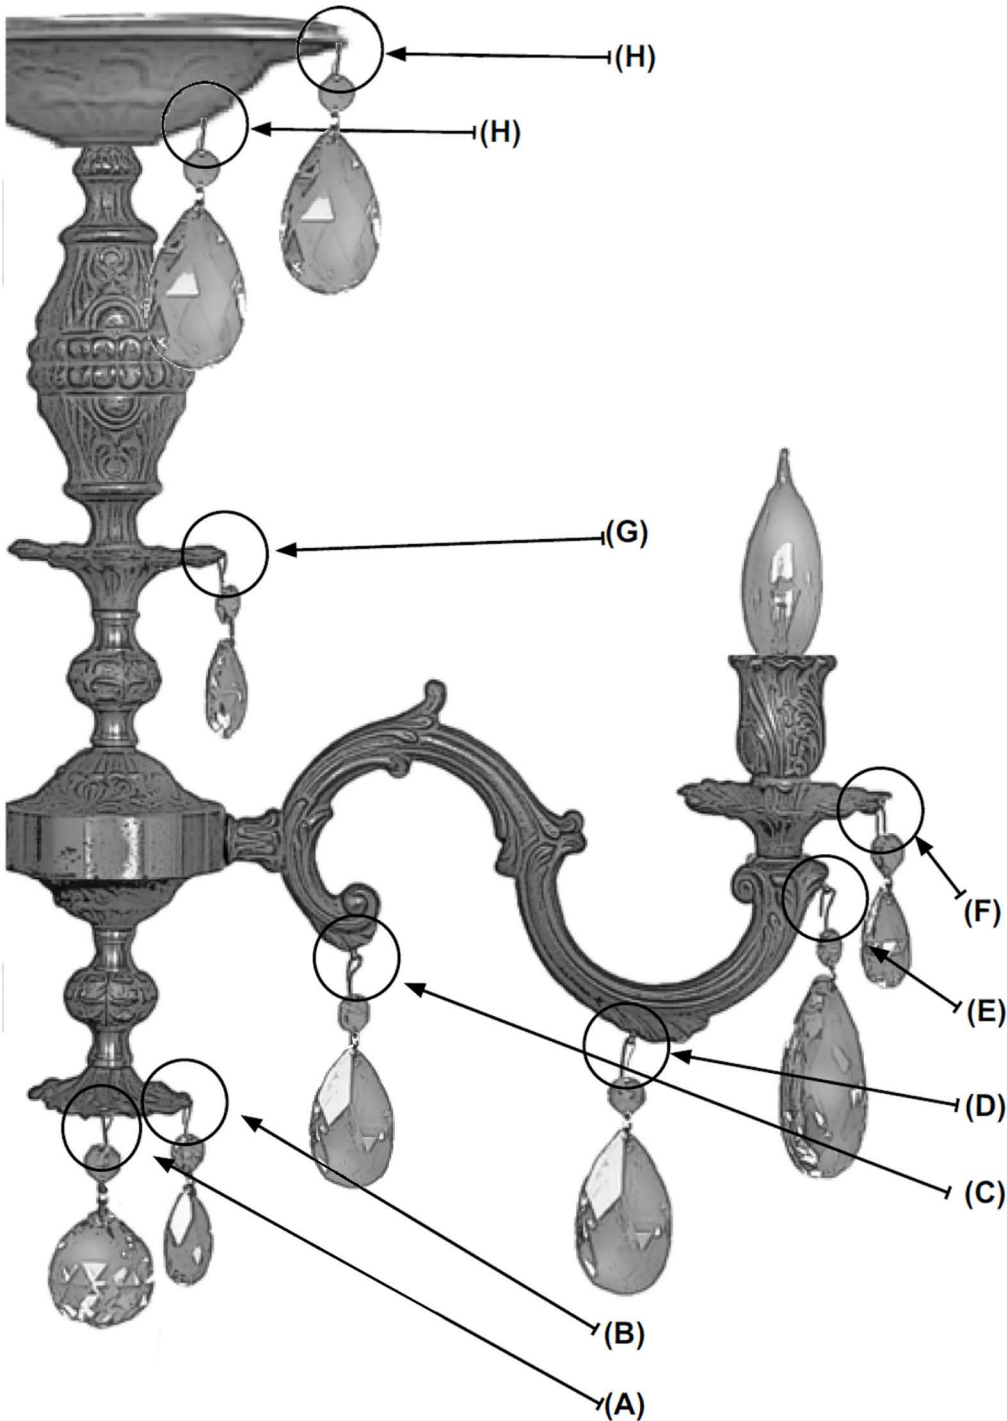

Step 1: Package **(A)** Attach the ball to the **(finial)**.
(40mm Ball with 1-14mm Octagon)

Step 2: Package **(B)** Attach **(6)** crystals to **(bottom of fixture)**.
(2" DROP with 1-14mm Octagon)

Step 3: Package **(C)** Attach **(8)** crystals to the **(back of arms)**.
(2.5" DROP with 1-14mm Octagon)

Step 4: Package **(D)** Attach **(8)** crystals to the **(middle of arms)**.
(2.5" DROP with 1-14mm Octagon)

Step 5: Package **(E)** Attach **(8)** crystals to the **(front tip of arms)**.
(3" DROP with 1-14mm Octagon)

Step 6: Package **(F)** Attach **(6)** crystals to each **(bobèche on arms)**.
(1.5" DROP with 1-14mm Octagon) **Total: 48**

Step 7: Package **(G)** Attach **(6)** crystals to **(bobèche middle of frame)**.
(2" DROP with 1-14mm Octagon)

Step 8: Package **(H)** Attach **(6)** crystals to the inner row of top cover
(2" DROP with 1-14mm Octagon)

Step 9: Package **(H)** Attach **(6)** crystals to the outer row of top cover
(2" DROP with 1-14mm Octagon)

CRYSTAL PACKAGE _____ PIN COLOR _____ INITIALS _____