

# American Brass & Crystal


*Casting a Finer Light*



## CH9283

American Brass and Crystal provides the finest quality components manufactured, designed and finished by master artisans. We take great pride in our production abilities and we empower our valued customers with the ability to custom create the light that is perfect for them.

Enclosed are detailed instructions on how to properly assemble and install your chandelier. If you have any questions please call our toll free customer service hotline at: **1-(877)-465-5617**


 American Brass and Crystal  
835 Lehigh Avenue, Union, NJ 07083

[www.abclighting.net](http://www.abclighting.net)



# American Brass & Crystal

*Casting a Finer Light*

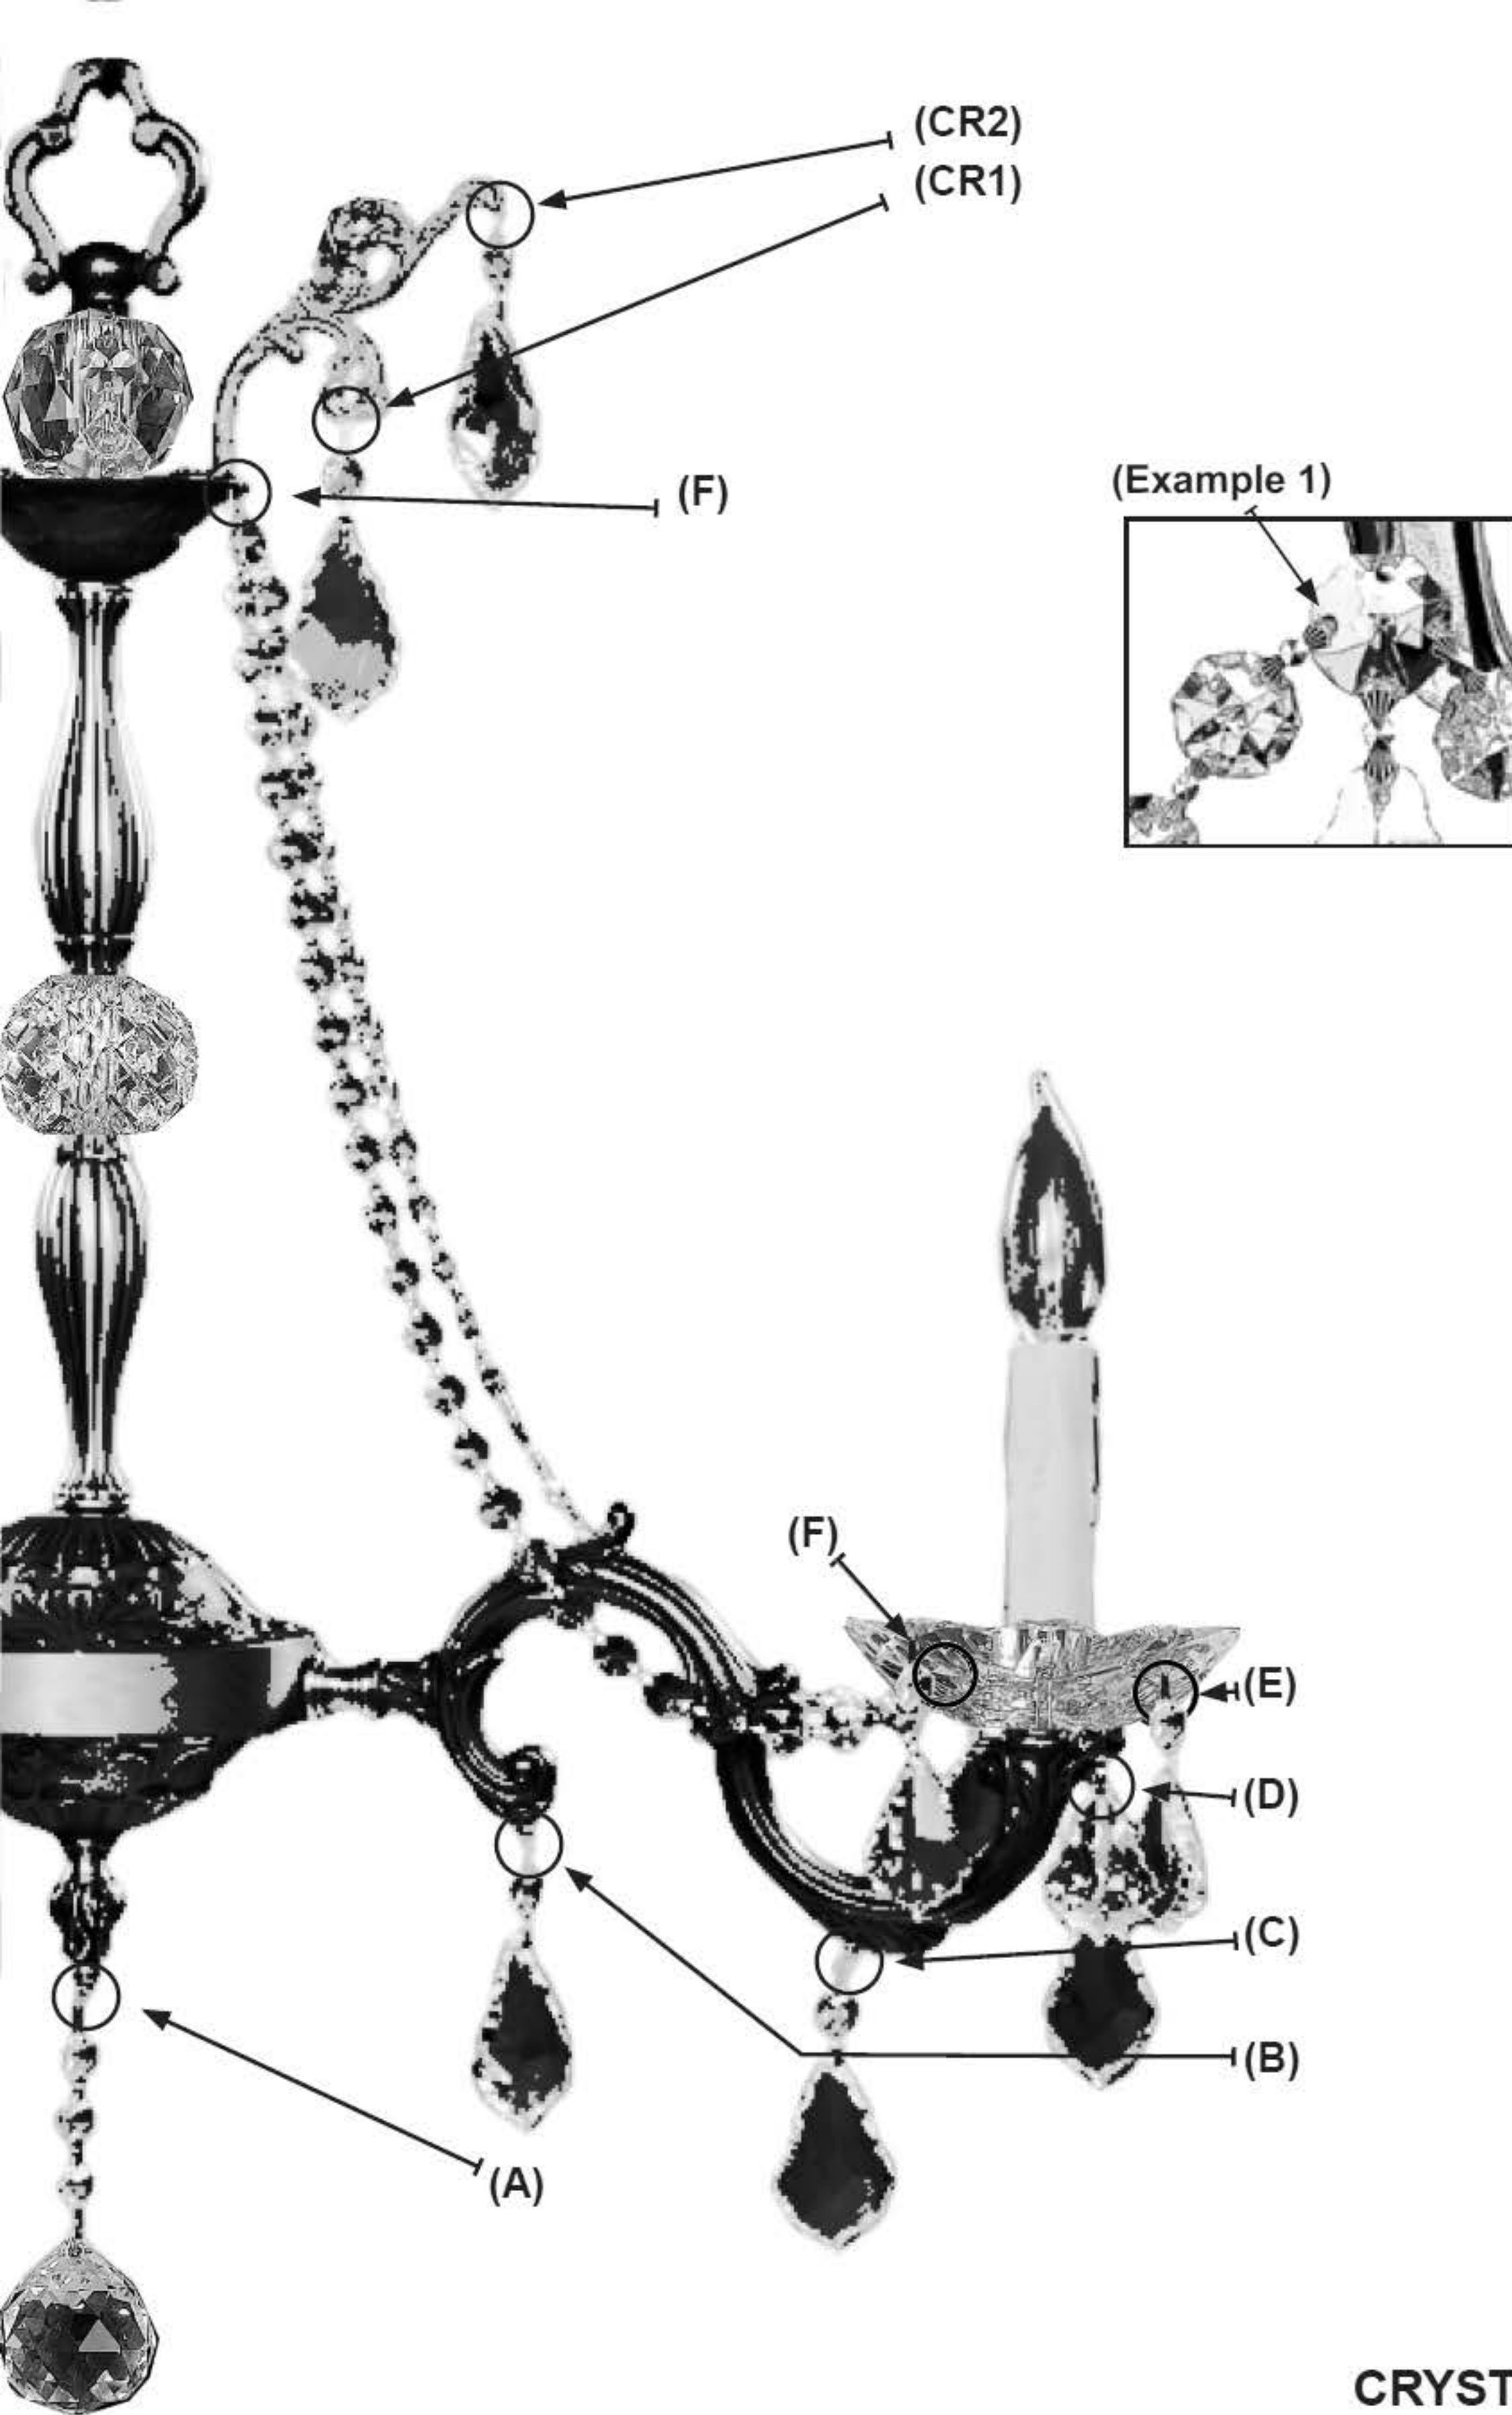

# CRYSTAL TRIMMING DIRECTIONS:

Begin trimming chandelier after all the electrical connections have been made, the lights have been tested and the chandelier is in good working order.

Begin dressing Alphabetically

Do not unwrap the next crystal section until the proceeding section is complete

Before connecting any hanging crystal place the 8 crystal bobeches on each of the 8 arms.



## BOTTOM OF FIXTURE

**Step 1:** Package (A) Attach the ball to the (finial).

**Step 2:** Package (B) Attach the (8) crystal sections to the (back of arms)

Open package labeled "B" Attach each crystal section using the long thin pin. Leave the loose chain of crystal to hang unattached until all crystal sections are attached to the frame.

Once all sections are attached begin connecting the loose chain of crystal to the 4 hole octagon on the crystal section to the right. **(Example 1)**

**Step 3:** Package (C) use the same directions as in step 2 (middle of arm)

**Step 4:** Package (D) use the same directions as in step 2 (front tip of arm)

**Step 5:** Package (E) Attach (3) crystals to the front holes on (bobèche).

**Step 6:** Package (F) Locate the holes in the (top cover-drape down) and attach each crystal to both back holes on (bobèche).

## TOP OF FIXTURE

**Step 7:** Package (CR1) Attach to bottom holes on (lower crown).

**Step 8:** Package (CR2) Attach to outside hole on (lower crown). Same directions as (step 2)

CRYSTAL PACKAGE \_\_\_\_\_ PIN COLOR \_\_\_\_\_ INITIALS \_\_\_\_\_